

**Panasonic**<sup>®</sup>

使用说明书  
Operating Instructions  
直发器  
Straightener

型号  
Model No. **EH-HS60**

中文	2
English	8

在使用前，请仔细阅读此说明书并妥善保管，以备将来参考。

Before operating this unit, please read these instructions completely and save this manual for future use.

## 安全说明

使用本直发器前请先阅读此安全说明。此处介绍的安全说明可以帮助您安全正确地使用本直发器，还可以防止您自己或别人受伤。

**请务必遵守这些重要安全说明！否则可能会造成火灾、烫伤、短路或触电事故。**

阅读这些安全说明后，请确保将其置于使用者容易看到的地方，以备随时参考。



**警告：不要在盛水的浴缸、淋浴、洗脸盆或其它器皿附近使用本直发器。**

 
**禁止在洗澡和淋浴时使用。**

1. 使用后，请确保开关设置在“0·LOCK（锁定）”位置，然后将电源插头从电源插座拔出。
2. 请确保所使用的电压与本直发器标明的额定电压符合。
3. 如果电源线或电源插头损坏或发热；或者电源插头插入电源插座不紧时，请立即停止使用。
4. 请避免切割、损坏或修改电源线。避免过度用力拉扯、扭曲或弯折电源线。如果电源线损坏或发热，请立即停止使用，并联系 Panasonic 授权维修店。
5. 只有专职人员可以维修或拆卸本直发器。
6. 请勿将金属物件（如发夹）插入负离子发射口。

7. 本品不宜供肢体、感官或精神上有残疾者、缺乏经验和知识者（包括儿童）使用，除非有人对此类人加以监督或者对本品的使用加以指导，且对使用者的安全能承担责任。
8. 请勿将本直发器存放在靠近浴缸、脸盆或其他容器及湿度大的地方。
9. 将电源线缠绕在本直发器上，可能会导致火灾或触电。
10. 如果直发器电源线或电源插头损坏，或者工作不正常，或者已经破损，或者掉入水中，切勿操作直发器。请将直发器送到 Panasonic 授权维修店检查或维修。
11. 直发器必须安装固定在洗澡或淋浴时触及不到的地方并且直发器的安装固定须保证手持部分在完全拉直时，洗澡和淋浴仍无法触及。
12. 在浴室内使用时，使用后请拔下插头，因为即使直发器断电后，接近水仍存在危险，为了保障您的安全，建议在浴室供电的电气回路中安装一个额定漏电动作电流不超过 30mA 的漏电保护装置（RCD）。向 RCD 安装商咨询。
13. 请勿将直发器弄湿。
14. 请在双手干燥时使用本直发器。
15. 请勿触碰蒸汽、蒸汽出口或加热板。
16. 请小心勿让双手或其他裸露的皮肤接近蒸汽。虽然看不到蒸汽，但可能被它烫伤。
17. 请勿在使用期间或使用后立即取出储水盒。（只能在直发器冷却后才可以拆出储水盒。）
18. 安装或拆卸储水盒时，请勿触碰盖子。
19. 当使用直发器夹住头发时，请勿在夹板关闭的情况下，使直发器接近面部。
20. 请勿在局部地区长时间释放蒸汽。请勿直接面对皮肤释放蒸汽。
21. 使双手远离释放的蒸汽。

22. 电源接通后，请勿使本直发器处于无人监管状态。
23. 请勿在婴儿身上使用本直发器，或将其用于头发以外的任何物品。
24. 请勿使直发器掉落或受到撞击。如果直发器损坏，请勿使用。
25. 请勿往直发器上直接喷雾。
26. 请勿强行打开夹板。
27. 除非夹板和加热板已经冷却，否则请勿将直发器放置或存放在塑料或其他可能溶化的材料中或附近。
28. 当拔出电源插头时，请捏住插头。
29. 使用后一定要倒掉储水箱中的水。
30. 本直发器只供家庭使用。
31. 如果电源软线损坏，为避免危险，必须由制造厂或其维修部或类似的专职人员来更换。

## 部件名称

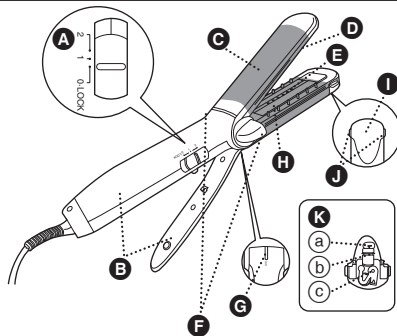

• 阴影部分代表加热区域。为避免烫伤，直发器启动时请勿触碰这些区域。

- |                     |                       |
|---------------------|-----------------------|
| <b>A</b> 开关         | <b>H</b> 加热板（直发器主体内部） |
| <b>B</b> 手柄         | <b>I</b> 储水箱          |
| <b>C</b> 夹板         | <b>J</b> 按钮           |
| <b>D</b> 加热板（夹板内侧）  | <b>K</b> 储水箱箱体        |
| <b>E</b> 蒸汽出口       | a 毛毡                  |
| <b>F</b> 负离子发射口（双侧） | b 盖子                  |
| <b>G</b> 电源指示灯      | c 塞子                  |


开关	加热板 <b>D</b>	加热板 <b>H</b>	负离子
2	加热	加热	释放
1	加热	-	释放
0 • LOCK (锁定)	电源关闭，加热板也关闭。		

## 给储水盒加水

 **1** 按住储水盒两侧的按钮，朝稍微向上的方向，直接拉出储水盒。

**2** 打开储水盒的塞子，给储水盒注水使盖子里面的毛毡浸泡（约 5-6 秒钟）。

• 如果毛毡是干的，直发器可能难以释放蒸汽。在此情况下，使用前请将毛毡彻底浸透（约 10 分钟）。

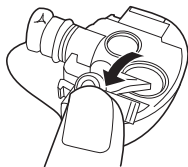

**3** 给储水盒注满水后，然后装好塞子。

• 只使用自来水。（使用其他类型的水可能损坏直发器。）  
• 切勿让灰尘进入塞子和储水盒之间。（灰尘可能导致漏水。）安装储水盒之前，请将多余的水擦掉。（多余的水可能导致热水滴的产生。）

**4** 将直发器的末端与储水盒对齐。

**5** 将储水盒推入，直至听见“咔嚓”一声。

### ●注意

• 请注意，如果不加水而使用本直发器，直发器表面会很热。  
• 储水盒装满水的情况下，直发器可以使用约 10 分钟。  
• 安装储水盒之前，务必摇晃直发器 2-3 次，使储水盒开口端朝下，将水排净。如果直发器内有水残留，可能释放出热水滴。  
• 建议在使用 1 年后更换储水盒盒体（因为盖子内部毛毡的阻塞）。若更换部件，请联系 panasonic 授权维修店。

4

## 使用直发器

**1** 梳理头发，不使其有任何缠绕。

• 可以防止头发被拉断。

**2** 将开关设置为“2”的位置，当直发器释放蒸汽时，请挑起一束头发，使夹板夹住头发。

• 当给 5-6 厘米宽的头发放直时，请轻轻拉直，但是，如果一次挑起的头发太多，可能难以烫直。

 
• 请将发束夹在加热板中央。

• 在“2”的位置使用本直发器时，必须给储水盒注满水。

• 若卷发要烫直时，请用双手握住夹板。请勿过分用力，否则，可能会使发梢变形。

**3** 夹住头发，朝发梢方向移动，将头发烫直。

• 慢慢移动直发器（较平常梳头稍慢的速度），使头发完全浸透在蒸汽中。

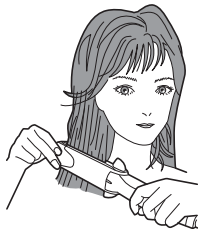

推荐速度（从发根至发梢）


短	约 3 秒钟
中长	约 4-5 秒钟
长	约 7-8 秒钟

• 根据头发的卷曲情况，必要时可对同一束头发反复进行拉直。

• 如果头发难以被烫直，或要烫直卷发，然请将开关设置至“1”。

#### 4 在直发器关闭的情况下, 将开关设置至“0·LOCK”。 (电源关闭时, 且夹板也被锁定。)

 - 如果在直发器打开的情况下关闭电源, 夹板将不会锁定。
- 如图所示, 按手柄中央, 将开关设置至“0·LOCK”。  
(如果不按手柄中央, 夹板可能不会正常锁定。)

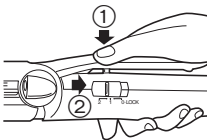

#### 5 用发乳、发蜡等固定发型。

##### ●注意

- 使用直发器烫直干发。(使用直发器烫直湿发效果不好。)
- 直发效果因各人发质而异, 如卷曲程度和发型。发质越硬, 头发断面呈扁平(椭圆或三角)型, 直发越困难。
- 本直发器的直发效果仅限当天。
- 本直发器不能将卷缩发烫直。
- 使用完家用直发定型液之后, 切勿立即使用本直发器。否则, 可能损伤你的头发。  
(使用直发定型液 3-4 天后, 可使用本直发器。在美容院美发 3-4 天后, 也可使用本直发器。)
- 请勿将含有与烫发液相同成分(还原剂)的直发定型液和直发器一起使用。还原剂可能会损伤您的头发。检查美发液瓶背面确定该液体是否含有还原剂。

#### 对于难烫直的头发的

1 在“2”的位置烫直某些卷发后, 将开关设置在“1”的位置, 然后夹住这些头发。

2 夹住头发之后, 再往发梢方向拉直几次。

 
- 给头发做流线发型后, 使用定型液可使效果保持更长时间。
- 给头发做好流线发型后, 用电吹风和梳子定型发型。

#### 实现美丽直发的头发分区

按照插图所示顺序, 用束带或发夹将您的头发固定, 便可拉直成美丽的直发。

虽然这看似费时, 却是巧妙变直发的最快方法。

- 在干发上实施分区。

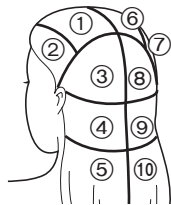

## 捆扎头发的方法

 
**1** 将头发平均分为左右两边。

**2** 进一步细分头发区域。




**3** 从顶部到底部将您头部后半边的头发分成 6 个区域。

• 将每一束头发都卷起来，然后用发夹固定。

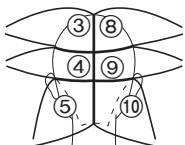

## 梳理顺序

 按照 ①-⑤ 的顺序，从您头部后半边的底部开始梳理。

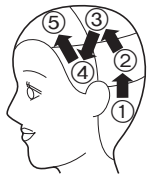

## 什么是负离子？

负离子是一些带负电荷的氧和空气中水分子相结合的粒子，用肉眼是看不见的，因为其直径只有蒸汽粒子的 1/1000。像电晕放电一样，它们是通过高压放电的方法产生的。

下述人不容易出现负离子的效果。

- 天然卷发的人
- 头发容易卷曲的人

6

- 发质本身很好，不易凌乱的人
- 负离子烫发未超过 3-4 个月的人
- 留短发的人

负离子释放时会有异味发生，这种异味对身体健康是没有任何危害的。

## 清洁直发器

 
- 夹板和加热板冷却且电源插头已从插座中拔出后，可以清洁直发器。
- 请使用已经浸有肥皂水并已彻底干干的布。请勿使用挥发油、稀释剂或酒精。否则可能导致直发器表面出现裂痕或褪色。
- 如果储水盒盖子下面的毛毡脏污，请在流动的自来水下用软刷清洗。

为了确保直发器不丧失释放负离子的功能，请按下文描述的方法定期（约每 6 个月 1 次）清洁两个负离子发射口（左右两侧）。

### ●负离子发射口的清洁方法

只有在关闭电源并且电源插头从电源插座上拔下之后，才可以清洁直发器。

使用棉签 (a) 轻轻地擦拭 (约 5 次) 负离子发射口 (c) 内部的部件中央 (b)。建议使用婴儿专用的细软棉签。虽然普通棉签也可用，但它们可能难以插入发射口。

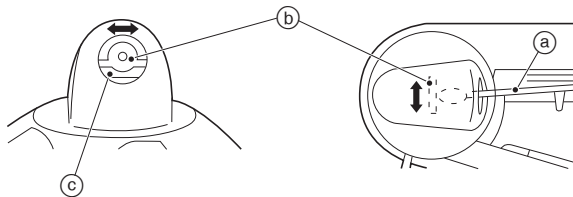

## 型号规格

产品名称	直发器
产品型号	EH-HS60
额定电压	a. c 220 V ~ 50 Hz
额定电流	0.2 A
尺寸	44 (宽) × 70 (深) × 275 (高) mm
储水盒容量	约 6 ml
原产地	中国
生产日期	请见商品上刻印
执行标准	GB4706.1, GB4706.15, GB4343.1 GB17625.1, Q/SXDGWB 8

规格如有变更，恕不另行通知。

中文

## Safety Instructions

Please read the safety instructions before using this appliance. The safety instructions explained here help you to use this appliance safely and correctly, and also to prevent you from injuring yourself or others.

### ALWAYS FOLLOW THESE IMPORTANT SAFETY INSTRUCTIONS!

After reading these safety instructions, ensure they are kept in a place allowing easy viewing at all times by the appliance user.

#### ● Electrical Conditions



**WARNING:** This symbol on the appliance means “Do not use this appliance near water”. Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

1. After use, be sure to set the switch to the “0-LOCK” setting and remove the plug from the power outlet.  
Failure to do so may create a fire hazard or result in fire.
2. Always ensure the appliance is operated on an electric power source matched to its rated voltage.  
Failure to do so may result in fire, electric shock, or burns.

3. Stop using it immediately if the cord or plug is damaged or becomes hot; or the plug fits loosely in the outlet.

Doing so may result in fire, electrical shock, short-circuit, or burns.

4. Avoid cutting, damaging, or modifying the cord. Avoid pulling, twisting, or bending the cord with unnecessary force. If the cord is damaged or becomes hot, stop using it immediately and contact an authorized Panasonic service center for repair.

5. Only qualified personnel should repair or disassemble the appliance.

6. Do not stick metallic objects, such as hair pins, into the negative ion nozzles.

Doing so may result in fire, electrical shock, or accidents.

7. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

8. Do not store the appliance near bathtubs, washbasins, or other vessels, and areas with high humidity.

Doing so may weaken the insulation properties and result in electrical shock or fire.

 


- 9. **Wrapping the cord around the appliance may cause fire and/or electric shock.**
- 10. **Never operate the appliance if it has a damaged power cord or plug, if it is not working properly, or if it has been damaged or dropped into water. Return the appliance to an authorized Panasonic service center for examination or repair.**
- 11. **As the handle of the appliance incorporates electrical components, the appliance must be fixed so that the handle, when fully extended, is out of reach of a person using a bath or shower.**
- 12. **When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.**
- 13. **For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.**
- 14. **Do not get the appliance wet.**  
Doing so may result in electrical shock, short circuit, or fire.
- 15. **Only use the appliance when the hands are dry.**
- 16. **Do not touch the steam, the steam outlet, or iron plate.**
- 17. **Do not bring hands or other exposed skin areas carelessly close to the steam. The steam is not visible, but it can burn you.**

- 18. **Do not remove the tank during use or immediately after use.**  
**(Remove the tank only after the appliance has cooled down.)**  
Removing the tank when the appliance is hot may result in burns.
- 19. **Do not touch the cap when attaching or removing the tank.**
- 20. **Do not bring the appliance close to your face with the press plate closed when taking a lock of hair.**  
Doing so may result in burns. To avoid burns, always take a lock of hair with the press plate opened.
- 21. **Do not release steam in one area for a long period of time. Do not release steam directly against the skin.**  
Doing so may result in burns.
- 22. **Keep hands away from steam released.**  
Failure to do so may result in burns.
- 23. **Do not leave the appliance unattended while the power is on.**  
The steam and iron plate are extremely hot and may cause fire or the discoloration or warping of nearby objects.
- 24. **Do not use the appliance on infants or for anything other than hair.**  
Doing so may result in burns, fires, or damage to the appliance.
- 25. **Do not drop the appliance or subject it to impact. Do not use the appliance if damaged.**  
Doing so may result in electrical shock or the hair straightener catching on fire.

- 26. **Do not apply any spray directly onto the appliance.**  
Doing so may result in malfunction or fire.
- 27. **Do not forcibly open the press plate.**  
Doing so may result in a malfunction.
- 28. **Do not place or store the appliance in or near plastic or other materials that may melt until the press plate and iron plate have cooled.**  
Doing so may weaken the insulation properties and result in electrical shock or fire.
- 29. **Always grasp the plug while unplugging.**  
Failure to do so may result in electrical shock, burns, or fire.
- 30. **Always throw away water in the tank after use.**  
Failure to do so may result in fire, electrical shock, or burns.
- 31. **This appliance is designed only for household use.**
- 32. **If the supply cord is damaged, it must be replaced by the manufacturer, its service center, or similarly qualified persons in order to avoid a hazard.**

## Parts identification

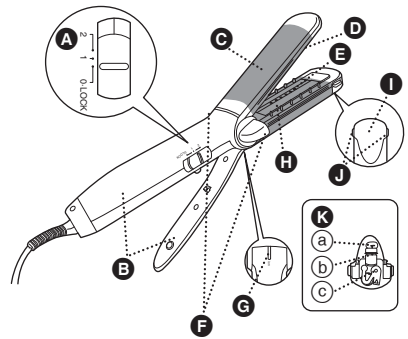

• Shaded areas represent heated sections. To avoid burns, do not touch these parts when the hair straightener is turned on.

- A** Switch
- B** Grip
- C** Press plate
- D** Iron plate (inside of the press plate)
- E** Steam outlet
- F** Negative ion nozzles
- G** Lamp
- H** Iron plate (inside of the main body)
- I** Tank
- J** Buttons
- K** Tank block
  - a) Felt
  - b) Cap
  - c) Plug


Switch	Iron plate <b>D</b>	Iron plate <b>H</b>	Negative ions
2	Heats up	Heats up	Released
1	Heats up	-	Released
0-LOCK	The power turns off and the iron plate closes.		

## Filling the tank with water

 **1 Pull the tank straight out in a slightly upward direction, while pressing buttons on both sides of the tank.**

**2 Open the plug of the tank and soak the felt part inside of the cap (about 5-6 seconds).**

- The hair straightener may have difficulty releasing steam if the felt is dry. In this case, thoroughly soak the felt (approximately 10 minutes) before use.

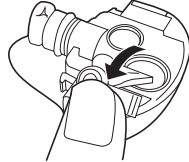

**3 Fill the tank with water, and then securely attach the plug.**

- Use only tap water. (Use of other types of water may damage the hair straightener.)
- Be sure not to let dirt get between the plug and tank. (Dirt may cause water leakage.) Wipe off excess water before attaching the tank. (Excess water may cause hot water droplets to be generated.)

**4 Align the tank with the end of the hair straightener and attach it from above.**

**5 Push the tank in until a click is heard.**

### ●Notes

- Note that the surface of the hair straightener becomes hot if used without water.
- The hair straightener can be used for approximately 10 minutes on a full tank of water.
- Before attaching the tank to the hair straightener, be

sure to shake the hair straightener 2-3 times with the open (tank) end facing down to drain out any water. Hot water droplets may be discharged if water remains in the hair straightener.

- Replacement of the tank block is suggested after one year (due to clogging of the felt inside the cap). Replacement parts are available at your dealer.

## Using the hair straightener

**1 Brush your hair to take out any tangles.**

 
- This prevents hairs from being cut.

**2 Set the switch to “2”. Once steam is released, take a bundle of hair and clamp it with the press plate underneath the hair.**

- When straightening bundles of hair at 5-6 cm widths, pull gently. However, do not take much hair as it may be difficult to straighten your hair.
- Clamp the bundle of hair in the center of the iron plate.
- Be sure to fill the tank with water when using the hair straightener at the “2” setting.
- Use both hands and hold the press plate to straighten curly hair. Do not use excessive force as it may place a strain on hair ends.

### 3 With the hair clamped, move the straightener straight toward the hair ends.

- Move the hair straightener slowly (at a speed slower than ordinary brushing) to thoroughly soak the hair in a steam.

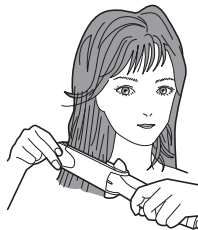


Recommended speeds (from scalp to hair ends)	
Short	Approx. 3 sec.
Semi-long	Approx. 4-5 sec.
Long	Approx. 7-8 sec.

- Repeat on the same bundle of hair as necessary depending on the curliness of the hair.
- If the hair is difficult to straighten, straighten some of the curls, then set the switch to “1”.

### 4 With the hair straightener closed, set the switch to “0-LOCK”.

 (The power turns off and the press plate locks.)

- If the power is turned off with the hair straightener open, the press plate does not lock.
- Press the center of the grip as shown and set the switch to the “0-LOCK” setting.  
(If the center of the grip is not pressed, the press plate may not lock properly.)

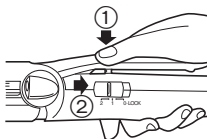

### 5 Style your hair using hair cream, wax, etc.

#### ●Notes

- Use the hair straightener on dry hair. (Use on wet hair is not effective.)
- The hair straightening effect may differ according to the individual, such as the degree of curliness and hair type. Straightening tends to be more difficult for hard hair and hair having a flat (oval or triangular) cross-section.
- This straightener is intended to straighten hair only for that day.
- This straightener does not straighten kinky hair.
- Do not use the straightener immediately after a home straight perm liquid is used. Doing so may damage your hair.  
(The straightener may be used 3-4 days after a straight perm liquid. The straightener may also be used 3-4 days after having your hair treated at a beauty parlor.)
- Do not use together with straight perm liquids having the same ingredients (reducing agent) as permanent wave liquids. The reducing agent may damage your hair.  
Check the back of cosmetic bottles whether liquid contains a reducing agent or not.

#### For difficult to straighten hair

- 1 After straightening the some of the curls at the “2” setting, set the switch to the “1” setting and clamp the hair.
  - 2 With the hair clamped, straighten downward several times.
- After styling the flow of hair, use a brushing liquid for a

longer lasting effect.

 
- After styling the flow of hair, style your hair using a dryer with brush.

## Blocking for beautiful straightening

For beautiful straightening, bundle and pin to hold your hair in the order shown in the illustration.

Although it may appear to be time consuming, it is the fastest way to straighten hair neatly.

- Perform blocking on dry hair.

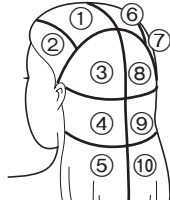

## How to bundle your hair

 
**1** Part your hair evenly to the left and right.

**2** Further divide your hair.



**3** Divide the hair on the backside of your hair into six parts from top to bottom.

- Twist each bundle of hair into a roll, then pin to hold.

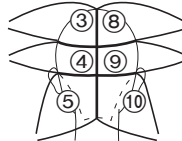

## Brushing order

Start brushing from the bottom on the back of your head in the order of ① to ⑤.



## What are negative ions?

Negative ions are particles that combine negatively charged oxygen and moisture in the air. Negative ions are invisible to the naked eye because their diameter is just 1/1000th that of a particle of steam. They are generated via a high-voltage discharge method known as a corona discharge.

The effect of ion does not show up too much on person with features described below.

- Having original curl hair.
- Having hair to be furled easily.
- Having wonderful and tidy hair.
- Having hair straightening perm no more than 3-4 months.
- Having short hair.

Some odd smell will come along with ion emission, but it does not do harm to health at all.

## Cleaning the hair straightener

 
- Clean the hair straightener after the press plate and iron plate have cooled and with the plug removed from the power outlet.
- To clean the hair straightener, use a cloth that has been soaked in soap and water and well wrung out. Do not use benzine, thinner, or alcohol. Doing so may crack or discolor the surface of the hair straightener.
- If the felt under the cap of the tank is dirty, clean it with a soft brush while running it under the tap water. To ensure that the hair straightener does not lose its ability to release negative ions, clean the two negative ion nozzles (left and right side) regularly (about once every 6 months) as described below.

### ● Cleaning method of negative ion nozzles

Clean only after turning off the power and removing the power cord from the power outlet.

Use a cotton swab (a) to lightly rub (about 5 times) the center of the part (b) that is inside of the negative ion nozzles (c).

We recommend the thin cotton swabs made for use with babies. Although regular cotton swabs will work, they may be hard to insert into the nozzles.

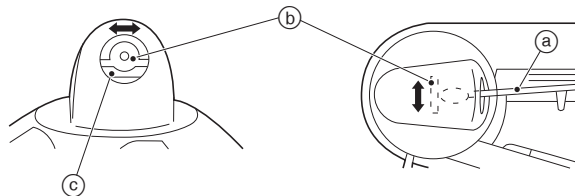

English

14

## Specifications

Product name	Straightener
Product model	EH-HS60
Power supply	a.c 220 V ~50 Hz
Rated current	0.2 A
Dimensions	44 (W) × 70 (D) × 275 (H) mm
Tank capacity	Approx. 6 ml
Place of origin	China
Produce date	Please see on the commodity to engrave
Execution standard	GB4706.1, GB4706.15, GB4343.1 GB17625.1, Q/SXDGWB 8

Specifications are subject to change without notice.







# Panasonic

## 保修证

### 保修条款

有关保修期内Panasonic商品的保修（无偿修理），从购入之日起开始实施。

1. 保修期内的商品只可在Panasonic认定维修店进行保修；保修时，请出示本保修证及购机发票。  
以下两点需特别注意：

- 本保修证遗失后不再补发，请妥善保管。
  - 本保修证仅限于中华人民共和国内有效（香港、澳门、台湾三地区暂不可使用）。
2. 自购入之日起在以下期间内，在正常使用中发生故障的情况下进行保修。

- 整机（除商用产品）.....2年内无偿
- 整机（商用产品）.....6个月
- 内刀头、外刀网、刀头、辅助装置、附件.....有偿提供

3. 属下列情况之一者，即使在保修期内，也不能以保修对待，但是可以实行收费修理：

- 未按商品使用说明书要求使用、维护、保管而造成损坏的；
- 因不正确操作、电源不正常、破损（如：摔落等）而造成损坏的；
- 不经Panasonic认定维修店维修人员拆卸造成损坏的；
- 不能出示本保修证及有效购机发票的；
- 保修证上记录的信息与商品实物标识不符或者涂改的；
- 因不可抗力因素（如雷电、地震、火灾、水灾等）造成损坏的。

4. 本保修条款只适用于消费者个人为生活消费需要而购买使用的场合，不适用于经营性等使用。

### [商品信息]

商品名称: 直发器 ..... 产地: 中国·广州  
商品型号: EH-HS60 ..... 制造编号:

**[保修回执] 以下回执是保修的重要依据，请勿自行撕下**

保修结算 4

商品型号: EH-HS60 制造编号:

保修结算 3

商品型号: EH-HS60 制造编号:

保修结算 2

商品型号: EH-HS60 制造编号:

保修结算 1

商品型号: EH-HS60 制造编号:

促销员留存

商品型号: EH-HS60 制造编号:



保修证管理编码印刷处：

本保修证内容如有变更恕不另行通知

**[销售记录]** 未完整记录以下信息将无法进行保修

销售日期：..... 发票号码：.....

安装调试日期：

销售店  
(盖章)

顾客姓名：..... 联系电话：.....

顾客地址：..... 邮 编：.....

销售店名称：..... 销售店电话：.....

销售店地址：..... 邮 编：.....

**[维修记录]**

维修店名称：..... 联系电话：..... 送修日：.....

维修店地址：..... 邮 编：.....

故障内容：..... 故障原因：.....

维修内容：.....

维修员签字：..... 交验日期：.....

维修店名称：..... 联系电话：..... 送修日：.....

维修店地址：..... 邮 编：.....

故障内容：..... 故障原因：.....

维修内容：.....

维修员签字：..... 交验日期：.....

维修店名称：..... 联系电话：..... 送修日：.....

维修店地址：..... 邮 编：.....

故障内容：..... 故障原因：.....

维修内容：.....

维修员签字：..... 交验日期：.....

Parasonic客户咨询服务中心：

400-810-0781；800-810-0781 (固定电话)

Parasonic官方网站：<http://panasonic.cn>

松下电器(中国)有限公司





**松下电工・万宝电器（广州）有限公司 (PEWWBG)**  
**Panasonic Electric Works Wanbao (Guangzhou) Co., Ltd.**

工厂地址： 广州市番禺区市广路万宝基地  
(Address): Wanbao Base, Shiguang Road, Panyu District,  
Guangzhou

电话(Tel): (020)84770333

传真(Fax): (020)84773033

邮政编码(Post Code): 511495

原产地： 中国

中国印刷  
Printed in China  
0000000000 X0509-0  
发行：2009年5月