

Panasonic[®]

使用说明书

(家用) 电吹风

EH-NE35

型号 EH-NE25

EH-NE24

EH-ENE2

中文	3
English	13



Panasonic®

中文

使用说明书

(家用) 电吹风

EH-NE35

型号 EH-NE25

EH-NE24

EH-ENE2

目录

安全注意事项	4	铂金负离子 / 负离子技术	9
部件名称	7	负离子感应系统	9
风嘴的安装和拆卸方法	7	电吹风的保养	10
电吹风的基本使用方法	8	故障排除	11
扩散风嘴的使用方法	9	规格	12

感谢您购买本公司产品。


在使用本产品前，请仔细阅读本说明书并妥善保管，以备将来参考。


安全注意事项

✚ 为减少故障、触电、受伤、火灾、死亡以及设备或财产损坏的危险，请务必遵守以下安全注意事项。


标志说明


以下标志用于对因无视标志说明和使用不当而导致的危险、伤害和财产损失的程度进行分类和描述。

 **警告** 表示可能会导致重伤或死亡的潜在危险。


 **注意** 表示可能会导致轻伤的危險。


以下标志用于对需要遵循的说明的种类进行分类和描述。


 此标志用于提醒用户注意禁止采取的操作步骤。


 此标志用于提醒用户注意为了安全操作本产品而必须遵循的操作步骤。


警告


 **电源线或插头损坏、发热时，请勿使用。**
- 否则可能导致烫伤、触电，或由于短路而导致火灾。


 **插入插座的电源插头松动时，请勿使用。**
- 否则可能导致烫伤、触电或因短路而引发火灾。


 **请勿损坏或改装、或用力弯曲、拉拔或扭曲电源线。**
另外，**请勿在电源线上面放置重物或挤压电源线。**
- 否则可能导致触电或因短路而引发火灾。


 **请勿在捆着电源线的状态下使用。**
- 否则可能导致触电或火灾。


 **请勿在电源开关开启的状态下远离。**
- 否则可能导致火灾。


 **请勿在手湿的情况下将电源插头连接到家用电源插座中，或从家用电源插座中拔出。**
- 否则可能导致触电和受伤。

 
 **请勿在手湿的情况下使用。**
- 否则可能发生触电或由于短路而导致火灾。


 **请勿在石油气或其它易燃品（例如挥发剂、涂料稀释剂、喷雾剂等）附近使用。**
- 否则可能导致爆炸或火灾。


 **请勿堵塞或将发卡等异物插入出风口、入风口和铂金负离子 / 负离子发射口。**
- 否则可能导致烫伤、触电或火灾。

 **请勿放置或存放在靠近浴室、水槽、有水或其它盛有液体、高度潮湿的地方。**
- 否则可能导致爆炸或火灾。

 **请勿在存放时将电源线缠绕在本体和手柄上。**
- 否则可能导致电源线断线，发生烫伤、触电，或由于短路而致火灾。

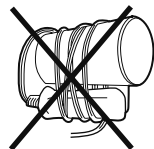

 **请勿存放在儿童和婴幼儿的接触范围之内。请勿让儿童和婴幼儿玩耍。**
- 否则可能导致触电和受伤。

 **请勿自行修理、拆卸或改装电吹风。**
- 否则可能因为起火或动作异常而导致受伤。
需要修理时，请联系客户咨询服务中心。

警告

请勿将本电吹风浸泡在水中。
请勿在洗澡或淋浴时使用本电吹风。
请勿在盛水的浴缸、淋浴器、洗脸盆或其它器皿附近使用本电吹风。

- 否则可能导致触电。



上記符号表示“禁止在洗澡或淋浴时使用”

发生异常和故障时，请立即停止使用并拔下电源插头。

- 在这种情况下使用本产品可能会导致触电、受伤或火灾。



< 异常或故障的例子 >

- 不出风。
 - 经常停止。
 - 内部发红，有烟冒出。
- 请立即联系客户咨询服务中心。

定期清洁电源插头，防止灰尘积聚。

- 否则可能因潮湿造成绝缘故障，从而引发火灾。
断开电源插头，然后用干布擦拭。

拔下电源插头时，请勿拉扯电源线，请务必握着电源插头拔出。

- 否则可能导致电源线断线，发生烫伤、触电，或由于短路而导致火灾。

充分插入电源插头。

请务必使用 220 V ~ 电压。
请单独使用插座，不要使用电源接线板。
- 否则可能导致触电或火灾。



电吹风吹热风时，如果在出风口看见火花，请停止使用，清除出风口和入风口附着的灰尘。

- 否则可能导致烫伤或火灾。



使用后请务必将电源开关设置为 [0] 档状态，将电源插头从插座上拔出。

- 否则可能导致烫伤或火灾。



本器具必须安装固定在洗澡或淋浴时触及不到的地方，并且器具的安装固定须保证手持部分在完全拉直时，洗澡和淋浴时仍无法触及。

- 否则可能导致意外的发生或受伤。



为了保障您的安全，建议在浴室供电的电气回路中安装一个额定漏电动作电流不超过 30 mA 的漏电保护装置 (RCD)，向 RCD 安装商咨询。

- 否则可能导致意外的发生或受伤。



在浴室内使用后拔下插头，因为即使电吹风断电后，接近水仍存在危险。

- 否则可能导致意外的发生或受伤。



如果电源线损坏，为避免危险，必须由制造厂或其维修部或类似的专职人员来更换。

- 否则可能导致意外的发生或受伤。



请妥善处理本产品的包装袋，使其远离婴幼儿。

- 否则可能导致婴幼儿窒息等意外发生。



警告

本产品不宜供肢体、感官或精神上有残疾者、或缺乏经验和知识者（包括儿童）使用，必须有监护者从旁监督并对本产品的使用加以指导，且对使用者的安全能承担责任。

- 否则可能导致意外的发生或受伤。

注意

避免摔落电吹风或让电吹风受到强烈的撞击。

- 否则可能导致触电或火灾。

使用过程中，出风口和风嘴可能会变热，使用时请勿用手触摸。

- 否则可能导致烫伤。

请勿在入风口破损的状态下使用。

- 否则头发可能卷入入风口，导致头发受损。

请勿对婴幼儿使用。

- 否则可能造成烫伤。

电源线在扭曲的状态下请勿收纳。

- 否则可能导致电源线断线，发生烫伤、触电，或由于短路而导致火灾。

请仅用于吹干头发和整发。请勿给宠物使用和用来吹干鞋子和衣物等。

- 否则可能导致烫伤或火灾。

入风口和头发之间请保持 10 厘米以上的距离。


！ - 否则可能会导致头发被吸入电吹风内，从而导致受损。



出风口和头发之间请保持 3 厘米以上的距离。

- 否则可能导致头发的灼伤。


！ 展开或折叠手柄时，请勿接触下图中的阴影部分。

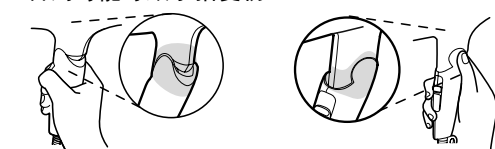

► 说明

本电吹风自带过热保护装置，能在电吹风温度过高的时候，自动切换成冷风。此时立刻关闭电源开关并从电源插座上拔下插头，让它冷却几分钟后再使用。检查入风口和出风口没有绒毛或头发时，再开启电源开关。

部件名称

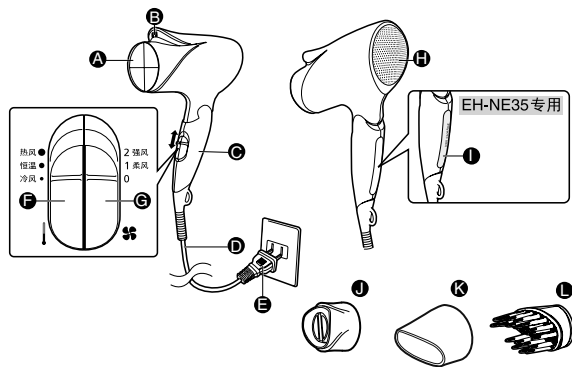

- A** 出风口
- B** 铂金负离子发射口 **EH-NE35 专用**
负离子发射口 **EH-NE25/24/ENE2 专用**
- C** 手柄
- D** 电源线
- E** 电源插头
- F** 温度选择开关 (|)
 - : 热风档
 - : 恒温档*
 - : 冷风档

*注: 根据 GB/T23106 标准要求, 在不带风嘴状态下进行的测量。

G 电源开关 (|)

- 2: 强风档
- 1: 柔风档
- 0: 关

H 入风口

I 负离子感应板 **EH-NE35 专用**

J 快干风嘴 **EH-NE35/25/24 专用**

K 集风嘴 **EH-ENE2 专用**

L 扩散风嘴 **EH-NE35/25 专用**

(用于打造蓬松、丰盈的发型)

风嘴的安装和拆卸方法

安装方法


- 将快干风嘴、集风嘴、扩散风嘴对准本体出风口安装, 直到听到“咔”一声, 说明风嘴已固定。

拆卸方法


- 将快干风嘴、集风嘴、扩散风嘴从本体出风口处拧取, 取下风嘴。



EH-NE35,
EH-NE25,
EH-NE24 专用

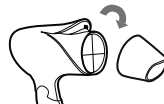

EH-ENE2 专用

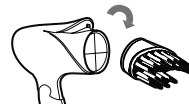

EH-NE35,
EH-NE25 专用

电吹风的基本使用方法

中文

1 在使用电吹风之前, 请先确认电源开关设置在 [0] 档位置, 然后插入电源插头, 并开启电源开关。

EH-NE35/25/24 专用

• 如想将头发迅速吹干, 请将快干风嘴调整到如右图所示。



EH-ENE2 专用


• 如想让风力更集中并易于打造发型, 请将集风嘴调整到如右图所示。



2 选择风力的温度。

- : 热风档
- : 恒温档
- : 冷风档


• 如果想使用冷风吹发, 请将温度选择开关设置在 [●冷风档] 的位置。
• 如果想将头发迅速吹干, 请将温度选择开关设置在 [●恒温档] 或 [●热风档] 的位置。

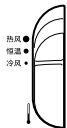

3 选择风力的强度。

- 2: 强风档
- 1: 柔风档
- 0: 关

• 电源开关设置在 [1 柔风档] 或 [2 强风档] 的位置时, 都会产生铂金负离子 / 负离子, 但肉眼无法看到铂金负离子 / 负离子。

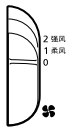

4 用电吹风将头发吹干。

- 从头发根部吹起, 可快速干发。
- 如果您担心发质受损, 请将开关设置在 [●恒温档] 或 [●冷风档] 的位置。
- 出风口和头发之间请保持 3 厘米以上的距离。
- 入风口和头发之间请保持 10 厘米以上的距离。
- 请勿将电吹风与喷雾剂一起使用。电吹风吸入喷雾后可能会令负离子的发射性能下降。



5 将电源开关设置在 [0] 档的位置, 然后从插座上拔出电源插头。

- 待完全冷却后, 请务必收纳在干燥的地方。

扩散风嘴的使用方法

EH-NE35/25 专用

• 打造蓬松的发型

1 使发际线周围蓬松

请先将扩散风嘴安装到电吹风上，然后握住电吹风，使扩散风嘴的梳齿接触头皮，然后从发际线向头顶处移动。慢慢重复 2~3 次。



2 使头发顶部蓬松

请握住电吹风，使扩散风嘴的梳齿接触头顶，然后以画圆圈的方式移动 2~3 次，大约维持 3 秒后，梳向头发后部。

提示：注意只需梳理发根，不要卷曲发梢。



• 打造垂顺发型

如果想让头发梳理整齐，请用扩散风嘴上的梳子从发根至发梢梳理头发。



• 维持卷发造型

请用扩散风嘴托住卷发部分后使用电吹风。



• 使用扩散风嘴时，请选择 [● 恒温档] 或者 [● 冷风档] 模式。如果选择 [● 热风档] 模式，则脸部或头皮会有灼热感。

铂金负离子 / 负离子技术

本电吹风用铂金负离子 / 负离子来减少静电积聚，时刻保持秀发亮丽。

使用本电吹风时可能会闻到异味。这种异味对身体没有任何危害。

EH-NE35 专用

铂金负离子可以降低紫外线对发质的损害。

注意：下述人不容易出现铂金负离子 / 负离子的效果

- 天然卷发的人
- 头发容易卷曲的人
- 发质本身很好，不易凌乱的人
- 负离子烫发未超过 3-4 个月的人
- 短发的人

负离子感应系统

EH-NE35 专用

当手握住负离子感应板时，有利于更多的铂金负离子持续渗透到发芯中补充水分，滋润头发，使铂金负离子效果更显著。



电吹风的保养



中文

本体的保养

- 将电源开关设置在 [0] 的位置，将电源插头从家用电源插座中拔出（出风口保养除外，需要把插头插进电源插座），使用肥皂水浸泡过的布拧干后进行擦拭。请勿使用涂料稀释剂、苯、酒精等清洁产品。否则可能导致本体发生故障、破裂和褪色。

出风口和入风口的保养（每月 1 次以上）

- 清洁出风口时，请将电源插头插进电源插座，然后将温度选择开关设置为 [● 冷风档]，将电源开关设置在 [2 强风档] 或 [1 柔风档]，然后边吹冷风，边用牙刷清除出风口上的附着物。当灰尘等会飘散。
- 将电源开关设置在 [0] 的位置，在关闭电源开关的状态下，用牙刷或吸尘器清除入风口的灰尘或头发等附着物。

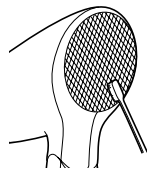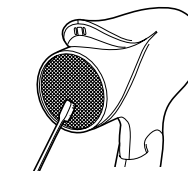


负离子发射口的保养

EH-NE25/24/ENE2 专用

如果火花出现在负离子发射口内，则可能是电极变脏，导致异常放电引起的。如果出现这种情况，请尝试按照以下清洁方法清洁负离子发射口内的部件。

- 清洁前请关闭电源并拔下电源插头。
- 负离子发射口内有一根针，请用棉签轻轻擦拭（约 5 次）该部件的尖端部分。
- 我们建议您使用细棉签。虽然普通棉签也能使用，但由于头部较粗，它们较难插入发射口。
- 请勿用硬物清洁或触碰负离子发射口内的部件，以免导致其变形，影响负离子的发射及产生危险。

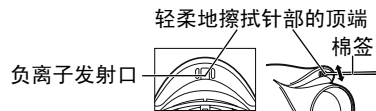

注意：

EH-NE35 专用

- 请勿试图去清洁铂金负离子发射口。（发射口禁止插入棉签进行清洁。）否则会使其丧失释放铂金负离子的功能。

故障排除

故障	可能的原因	纠正措施
热风运行过程中，时常会伴有冷风，甚至还会出现火花。（火花是由于作为保护装置的热开关的动作导致，不是故障。）	<ul style="list-style-type: none"> ▶ 灰尘等堵塞进风口和出风口时，热敏开关将会启动，启动时常常会吹出冷风。 ▶ 入风口被头发、手等堵住。 	<ul style="list-style-type: none"> ▶ 将堆积的灰尘除去。（方法参照 P10） ▶ 不要堵住入风口。
电源插头异常过热。	▶ 产品所连接的插座可能松动。	▶ 请使用没有松动的插座。
产品运行过程中，时而有风时而无风。	▶ 电源线损坏。	▶ 请立即停止使用。
电源线异常过热。	▶ 电极变脏导致异常。	▶ 请清洁负离子发射口内的部件。（方法参照 P10）
负离子的发射口内部出现火花。（EH-NE25/24/ENE2 专用）		
负离子的发射口内部发出异常杂音。（EH-NE25/24/ENE2 专用）		
产品运行中不出风，并且内部发红。		▶ 请立即停止使用。
使用过程中有异常声音和震动。		
产品本体和手柄处异常过热。		
产品本体和手柄处发生变形。		
使用过程中有烧焦的气味。		

如果按照以上方法还不能解决，请联系客户咨询服务中心。

规格

中文

产品名称		电吹风
产品型号		EH-NE35, EH-NE25, EH-NE24, EH-ENE2
额定电压 / 额定频率		220 V ~ 50 Hz
额定功率		1800 W
尺寸		80.8 (宽) × 162.5 (深) × 227.0 (高) 毫米
附件	EH-NE35	快干风嘴、扩散风嘴
	EH-NE25	快干风嘴、扩散风嘴
	EH-NE24	快干风嘴
	EH-ENE2	集风嘴
原产地		中国
生产日期		请见商品手柄上刻印
执行标准	中国国家 标准	GB4706.1 GB4706.15 GB4343.1 GB17625.1
	企业标准	Q/SXWBMJ 7

本产品仅适合家庭使用。

Panasonic®

Operating Instructions

(Household) Hair Dryer

EH-NE35

Model No. EH-NE25

EH-NE24

EH-ENE2

Contents

Safety precautions.....	14	Platinum ion / ion technology.....	20
Parts Identification.....	18	Ion charge panel.....	21
Installing or removing the nozzle	18	Maintenance of the hair dryer.....	21
How to use the hair dryer	19	Troubleshooting	22
How to use the diffuser.....	20	Specifications	24

Thank you for purchasing this Panasonic product.



Before operating this unit, please read these instructions completely and save them for future use.

Safety precautions



To reduce the risk of malfunction, electric shock, injury, fire, loss of life, and damage to equipment or property, always observe the following safety precautions.

Explanation of symbols


The following symbols are used to classify and describe the level of hazard, injury, and property damage caused when the notation is disregarded and improper use is performed.


 WARNING	Denotes a potential hazard that could result in serious injury or death.
 CAUTION	Denotes a hazard that could result in minor injury.


The following symbols are used to classify and describe the type of instructions to be observed.


	This symbol is used to alert users to a specific operating procedure that must not be performed.
	This symbol is used to alert users to a specific operating procedure that must be followed in order to operate the unit safely.


WARNING


-  **If the cord or the plug is damaged or gets hot, do not use it.**
 - Doing so may cause burning, electric shock, or fire due to a short circuit.


-  **If the plug fits loosely in a household outlet, do not use it.**
 - Doing so may cause burning, electric shock, or fire due to a short circuit.


-  **Do not damage or modify, or forcefully bend, pull or twist the cord. Also, do not place anything heavy on or pinch the cord.**
 - Doing so may cause electric shock or fire due to a short circuit.

-  **Do not use the unit when the cord is tied.**
 - Doing so may cause electric shock or fire.


-  **Do not leave the unit when the main switch is turned on.**
 - Doing so may cause fire.

-  **Do not connect or disconnect the plug to a household outlet with a wet hand.**
 - Doing so may cause electric shock or injury.


-  **Do not use the unit with a wet hand.**
 - Doing so may cause electric shock or fire due to a short circuit.

-  **Do not use the unit near gas or other inflammable materials (such as benzene, paint thinner, sprays, etc.).**
 - Doing so may cause explosion or fire.


WARNING

 Do not block the air outlet, air inlet, or platinum ion / ion outlet, and do not insert any foreign object, such as hairpin, into the unit.


- Doing so may cause burning, electric shock, or fire.


 Do not place or store the unit at places adjacent to the sink, water, or other highly humid places containing water.

- Doing so may cause explosion or fire.

 Do not wrap the cord around the main body and handle when storing.

- Doing so may cause breakage to the wire of the cord, burning, electric shock, or fire due to a short circuit.

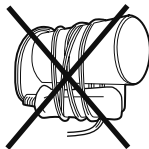

 Do not store within the reach of children or infants. Do not let them use the hair dryer.

- Doing so may cause electric shock or injury.

 Do not repair, disassemble or modify the hair dryer by yourself.

- Doing so may cause fire or injury due to abnormal action. Contact a service center authorized by Panasonic for repair when necessary.

Do not immerse this hair dryer into water.
Do not use this hair dryer on bathing or shower.
Do not use this hair dryer near bathtubs, showers, basins or other vessels containing water.

- Doing so may cause electric shock.



This symbol on the hair dryer means
“Do not use it on bathing or shower.”

Immediately stop using the unit and remove the plug if there is an abnormality or failure.

- Using the unit in such conditions may cause electric shock, injury or fire.

<Abnormality or failure cases>


 **No air.**

Frequent stop.

The interior gets red, and smoke comes out.

- Immediately contact a service center authorized by Panasonic.

Regularly clean the plug to prevent dust from accumulating.

 - Failure to do so may cause fire due to insulation failure caused by humidity. Disconnect the plug and wipe with a dry cloth.

WARNING

Always unplug the unit by holding the plug instead of the cord.



- Failure to do so may cause breakage to the wire of the cord, burning, electric shock, or fire due to a short circuit.

Fully insert the plug.

Make sure to use only 220 V ~ voltage.



Independently use a household outlet, and do not use extension cord.

- Failure to do so may cause electric shock or fire.

When the hair dryer outputs hot air, if sparks appear at the air outlet, immediately stop using it, and then clear away dust adhered to the air outlet and air inlet.



- Failure to do so may cause burning or fire.

After use, always set the main switch to position "0", and unplug the unit from a household outlet.



- Failure to do so may cause burning or fire.

This appliance must be installed and fixed at a position out of the reach when having a bath or shower. Also, the installation and fixation of the appliance must ensure that the appliance is still out of reach on condition that the handle portion is completely straightened when having a bath or shower.



- Failure to do so may cause an accident or injury.

For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.



- Failure to do so may cause an accident or injury.

When the hair dryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hair dryer is switched off.



- Failure to do so may cause an accident or injury.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



- Failure to do so may cause an accident or injury.

Properly dispose of the package of the appliance, keep the package away from infants.








- Failure to do so may cause suffocation of infants from happening.


This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.




- Failure to do so may cause an accident or injury.

CAUTION


-  **Do not drop or subject to shock.**
- Doing so may cause electric shock or fire.
-  **During use, the air outlet and the nozzle may get hot. Do not touch them with your hand.**
- Doing so may cause burning.
-  **Do not use the unit when the air inlet is damaged.**
- Doing so may cause injury of hair due to hair drawn into the air inlet.
-  **Do not use on the unit to children or infants.**
- Doing so may cause burning.
-  **Do not store the unit when the cord is twisted.**
- Doing so may cause breakage to the wire of the cord, burning, electric shock, or fire due to a short circuit.

-  **Intended for drying your hair and making hairstyles only. Do not use on the unit to pets and dry shoes and clothes.**
- Failure to do so may cause burning or fire.


Keep a distance of over 10 cm between the air inlet and your hair.

-  - Failure to do so may cause your hair to be drawn into the hair dryer and therefore cause damage.


Keep a distance of over 3 cm between the air outlet and your hair.

-  - Failure to do so may cause burning to your hair.



-  **When unfolding or folding the handle, do not touch the shaded area as shown in figures below.**


- Failure to do so may cause finger injury.

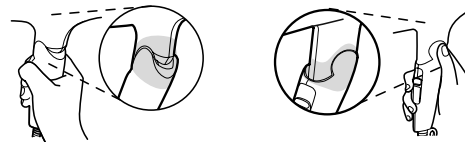

► Notes

This hair dryer is equipped with an automatic overheating protective device. If the hair dryer overheats, it will switch to cool air mode. Switch off the hair dryer and unplug it from the household outlet. Allow it to cool down for a few minutes before using it again. Check that no fluff, hair etc. is in the air inlets and outlets before switching it on again.

Parts Identification

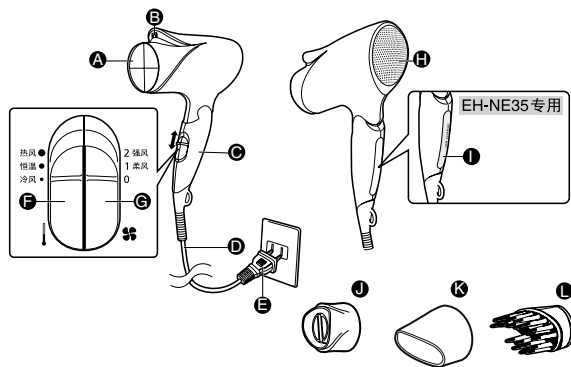

- A** Air outlet
- B** Platinum ion outlet **EH-NE35 only**
Ion outlet **EH-NE25/24/ENE2 only**
- C** Handle
- D** Cord
- E** Plug
- F** Temperature selector (|)
 - : Hot air
 - : Healthy air*
 - : Cool air

* Note: It is measured without the nozzle according to the standard requirements of GB/T23106.

G Main switch (|)

- 2 : Dry (Strong airflow)
- 1 : Set (Gentle airflow)
- 0 : Off

H Air inlet

I Ion charge panel **EH-NE35 only**

J Quick-dry nozzle **EH-NE35/25/24 only**

K Set nozzle **EH-ENE2 only**

L Diffuser **EH-NE35/25 only**

(For creating full-bodied hair with lots of volume and styling)

Installing or removing the nozzle

To install


- Align the quick-dry nozzle, the set nozzle, or the diffuser with the air outlet of the main body to install it. When the nozzle has been fixed, a click will be heard.

To remove

Remove the quick-dry nozzle, the set nozzle, or the diffuser downward from the air outlet of the main body.



EH-NE35/25/24 only

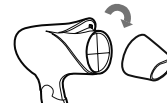

EH-ENE2 only



EH-NE35/25 only

How to use the hair dryer

1 Before using the hair dryer, confirm that the main switch is set to “0”, then plug the unit into a household outlet and then turn on the main switch.

EH-NE35/25/24 only

- If you want to dry your hair quickly, set the quick-dry nozzle in the direction as shown in the illustration.




EH-ENE2 only

- If you want to concentrate the airflow for easier hair styling, adjust the set nozzle as shown in the right illustration.




2 Select the air temperature.

- : Hot air
- : Healthy air
- : Cool air
- To dry your hair with cool air, set the temperature selector to “● Cool air”.
- To quickly dry your hair, set the temperature selector to “● Healthy air” or “● Hot air”.

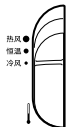

3 Select the air power.

- 2: Dry (Strong airflow)
- 1: Set (Gentle airflow)
- 0: Off

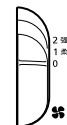

- If the main switch is set to “1 Set (Gentle airflow)” or “2 Dry (Strong airflow)”, platinum ions can be generated but are not visible to the human eyes.

4 Dry your hair with the hair dryer.

- Blowing your hair at the roots will dry it faster.
- If you worry about damaging your hair, set the switch to “● Healthy air” or “● Cool air”.
- Keep a distance of over 3 cm between the air outlet and your hair.
- Keep a distance of over 10 cm between the air inlet and your hair.
- Do not use the hair dryer with hair spray. The indrawn spray may degrade the ion generation performance of the hair dryer.



5 Set the main switch to “0”, and then unplug the unit from the household outlet.

- After the unit has completely cooled, store it at a dry place.

How to use the diffuser

EH-NE35/25 only

- Creating bouncy hair
- 1** Increasing hair volume around the face line
Attach the diffuser to the dryer. Hold the dryer in such a way that the comb tip of the diffuser touches the scalp, and then slide the dryer towards the top of the head. Slowly repeat 2 or 3 times.




- 2** Increasing the hair volume around the top of the head
Hold the dryer in such a way that the comb tip of the diffuser touches the top of the head, and then move it in circular motion 2 or 3 times. Hold it for approximately 3 seconds then pull it towards the back of the head.
Tips: Be careful to style only the roots of the hair, and not to curl the hair tips.



- Creating straight hair
If you want to style your hair, brush your hair from the top of your head to the ends of your hair with the brush on the diffuser.



- Maintaining wavy hair
Dry your hair by placing it over the diffuser.
- If you use the diffuser, set the main switch to “● Healthy air” or “● Cool air”.
Your face or scalp may feel hot if “● Hot air” is selected.

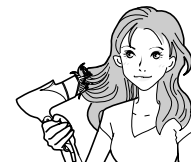

Platinum ion / ion technology

This hair dryer uses platinum ion / ion to reduce electrostatic accumulation and maintain a healthy vibrant look to your hair.

You may notice a characteristic odor when using this hair dryer. This is not harmful to the human body.

EH-NE35 only

Platinum ion can reduce the damaging effects of ultraviolet rays on your hair.

Note: The effect of platinum ion / ion is not so pronounced for the following:

- Having original curl hair.
- Having hair to be furled easily.
- Having wonderful and tidy hair.
- Having hair straightening perm no more than 3-4 months.
- Having short hair.

Ion charge panel

EH-NE35 only

Holding the ion charge panel enables more platinum ions continuously into your hair cores to hydrate your hair for increased effect.





Maintenance of the hair dryer

Maintenance of the main body

- Set the main switch to “0”, disconnect the power plug from the household outlet. (Except when performing maintenance on the air outlet). Wipe it with a wet cloth soaked in liquid soap. Do not use paint thinner, benzene, alcohol, etc., to clean the unit. Doing so may cause failure, cracking or discoloration of the main body.

Maintenance of the air outlet and air inlet (once a month or more)

- The hair dryer should be plugged into the household outlet only in case of maintenance for the air outlet. To clean the air outlet, set the temperature selector to “● Cool air” and the main switch to “2 Dry (Strong airflow)” or “1 Set (Gentle airflow)”, and rake out with a brush while cool air is blowing out. Be careful of dust that may be blown out.
- To clean the air inlet, set the main switch to position “0” and, with the airflow stopped, remove dust and hairs using a brush or vacuum cleaner.

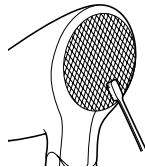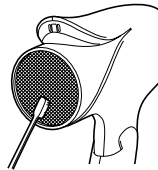

Maintaining the ion outlet

EH-NE25/24/ENE2 only

If sparks occur in the ion outlet, the electrode may be dirty, causing abnormal discharging. In this case, clean the parts in the ion outlet by the following procedure.

- Switch off the hair dryer and unplug it from the household outlet before cleaning.
- There is a pin in the ion outlet. Use a cotton swab to gently wipe the tip portion (about 5 times).
- A thin cotton swab is recommended. A regular cotton swab may work, but its thick head may be difficult to insert.
- Do not clean or touch parts in the ion outlet with a hard object, as this may cause deformation, emission degradation, or other risks.



Note:

EH-NE35 only

- Do not try to clean the platinum ion outlet. (It is strongly advised not to clean here by inserting a cotton swab.)
Doing so may cause it lose the function of emitting the platinum ion.

Troubleshooting

Problem	Possible cause	Action
During the hot air operation, cool air is usually mixed, and even sparks appear. (The spark is caused by the action of thermostat as a protective device. It is not a fault.)	<ul style="list-style-type: none"> ▶ • When dust blocks the air inlet and air outlet, the thermostat will be started, and the cool air is usually blown at the moment of start-up. ▶ • The air inlet is blocked by hair or hand, etc. 	<ul style="list-style-type: none"> ▶ • Clear away the accumulated dust (see P.21 for instructions). ▶ • Do not block the air inlet.
The plug is abnormally overheating.	▶ The household outlet connected to the product may be loose.	▶ Please use a well-conditioned household outlet.
During operation, the unit outputs air intermittently.	▶ The cord is damaged.	▶ Immediately stop using the unit.
The cord is abnormally overheating.		
Spark occurs in the ion outlet. (EH-NE25/24/ENE2 only)	▶ Dirty electrode is causing a malfunction.	▶ Clean the parts in the ion outlet (see P.21 for instructions).
Abnormal noise occurs in the ion outlet. (EH-NE25/24/ENE2 only)		

During operation, the unit does not output air, and the interior gets red.

During use, abnormal sounds and vibration occur.

The main body and handle of the unit are abnormally overheating.

The main body and handle of the unit are deformed.

During use, the unit smells of burning.

Immediately stop using the unit.

If the problems still cannot be solved, contact a service center authorized by Panasonic.

Specifications

Product name		Hair Dryer
Product model		EH-NE35, EH-NE25, EH-NE24, EH-ENE2
Power source / rated frequency		220 V ~ 50 Hz
Power consumption		1800 W
Dimensions		80.8 (W) × 162.5 (D) × 227.0 (H) mm
Accessory	EH-NE35	Quick-dry nozzle, Diffuser
	EH-NE25	Quick-dry nozzle, Diffuser
	EH-NE24	Quick-dry nozzle
	EH-ENE2	Set nozzle
Place of origin		China
Date of production		See engraving on the commodity handle.
Execution standard	Chinese standard	GB4706.1 GB4706.15 GB4343.1 GB17625.1
	Company standard	Q/SXWBMJ7

This product is intended for household use only.

保修证

保修条款

有关保修期内Panasonic商品的保修（无偿修理），从购入之日起开始实施。

1.保修期内的商品只可在Panasonic认定维修店进行保修；保修时，请出示本保修证及购机发票。
以下两点需特别注意：

- 本保修证遗失后不再补发，请妥善保管。
 - 本保修证仅限于中华人民共和国内有效(香港、澳门、台湾三地区暂不可使用)。
- 2.自购入之日起在以下期间内，在正常使用中发生故障的情况下进行保修。

· 整机.....2年内无偿

3.属下列情况之一者，即使在保修期内，也不能以保修对待，但是可以实行收费修理：

- 未按商品使用说明书要求使用、维护、保管而造成损坏的；
- 因不正确操作、电源不正常、破损（如：摔落等）而造成损坏的；
- 不经Panasonic认定维修店维修人员拆卸造成损坏的；
- 不能出示本保修证及有效购机发票的；
- 保修证上记录的信息与商品实物标识不符或者涂改的；
- 因不可抗力因素（如雷电、地震、火灾、水灾等）造成损坏的。

4.本保修条款只适用于消费者个人为生活消费需要而购买使用的场合，不适用于经营性等使用。

[商品信息]

商品名称: 电吹风 产地: 中国
EH-NE35, EH-NE25, 制造编号:
EH-NE24, EH-ENE2, 制造编号:

[保修回执] 以下回执是保修的重要依据, 请勿自行撕下

商品型号: EH-NE35, EH-NE25,
EH-NE24, EH-ENE2, 制造编号: 保修结算4

商品型号: EH-NE35, EH-NE25,
EH-NE24, EH-ENE2, 制造编号: 保修结算3

商品型号: EH-NE35, EH-NE25,
EH-NE24, EH-ENE2, 制造编号: 保修结算2

商品型号: EH-NE35, EH-NE25,
EH-NE24, EH-ENE2, 制造编号: 保修结算1

商品型号: EH-NE35, EH-NE25,
EH-NE24, EH-ENE2, 制造编号: 促销员留存

保修证管理编码印刷处：

[维修记录] 此处所载信息仅于商品保修时作核对之用，本公司不对该信息进行收集记录。

销售店
(盖章)

安装调试日期：

销售日期：

发票号码：

顾客姓名：

联系电话：

顾客地址：

邮编：

销售店名称：

销售店电话：

销售店地址：

邮编：

[维修记录]

维修店名称：

联系电话：

送修日：

维修店地址：

邮编：

故障内容：

故障原因：

维修内容：

维修员签字：

交验日期：

维修店名称：

联系电话：

送修日：

维修店地址：

邮编：

故障内容：

故障原因：

维修内容：

维修员签字：

交验日期：

维修店名称：

联系电话：

送修日：

维修店地址：

邮编：

故障内容：

故障原因：

维修内容：

交验日期：

维修员签字：

本保修证因含有消费者个人信息，请妥善保管。
Panasonic客户咨询服务中心：400-810-0781
Panasonic官方网站：<http://panasonic.cn>

松下电器(中国)有限公司

松下万宝美健生活电器(广州)有限公司 (PWAPBLGZ)
Panasonic Wanbao Appliances Beauty and Living (Guangzhou) Co., Ltd.

工厂地址： 广州市番禺区钟村万宝基地万宝北街 33 号
(Address): 33, Wanbao North Street, Wanbao Industry Zone, Zhongcun,
Panyu District, Guangzhou City, Guangdong Province, China
电话 (Tel): (020)84770333
传真 (Fax): (020)84773033
邮政编码 (Post Code): 511495
原产地： 中国

客户咨询服务中心： 400-810-0781
官方网站： <http://panasonic.cn>

中国印刷
Printed in China
EH9210NE352405 S0314-10314
发行： 2014 年 3 月