
Panasonic

使用说明书 Operating Instructions

> 电吹风 Hair Dryer


型号 Model No. EH 5247

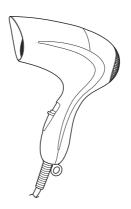

中文 3 English 6

在使用前,请仔细阅读此说明书并妥善保管,以备将来参考。 Before operating this hair dryer, please read these instructions completely and save this manual for future use.

部件名称 PARTS IDENTIFICATION

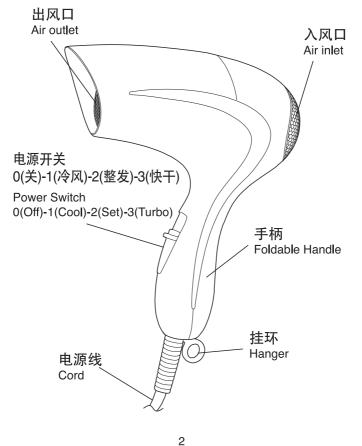

使用须知

EH 5247电吹风具有1100 瓦特功率,可直接用于a.c 220V~50Hz的电源。具有 加速功能,当电源开关拨 至【3】档时,电吹风的风 量将迅速提高,可快速吹 干湿发。当整发时,可使 用【2】档对头发进行整形。

使用方法

- 1.在使用电吹风之前 首先必须将电源开关设 置在【0】的位置,然 后插入电源插头,并打 开电源开关。
- 2.洗发后,在吹发时 如想使用冷风来吹干头发, 将电源开关设置在【1】 的位置。 如想尽可能快地吹干头发, 请将电源开关设置在【3】 的位置。
- 3.整发时 将电源开关设置在【2】 的位置进行整发,如想 使用冷风功能,请将电 源开关设置在【1】档。
- 4.使用完毕 将电源开关设置在【0】 的位置,然后拔出电源

线插头。

注意事项

- 1. 电吹风必须使用标准的 电源插座,并且检查插 座的输出电压,同时要 与其它电器分开来使用。
- 2. 要确保所使用的电压与本 机标明的额定电压相符合。
- 3. 绝对不能在电吹风启动的情况下离开。
- 4. 使用完毕或使用中遇到停电时,必须从插座上拔下插头。拔出插头时,必须捏住插头从插座上拔出。
- 5. 假如电吹风在运转时出现断断续续的情况,这时请立即停止使用。
- 6. 不要用力拉扯电源线, 不要损坏或改装电源线, 假如电源线或插头损坏 或变热,请立即停止使用。
- 7. 避免摔落电吹风或让电吹风受到强烈的撞击。
- 8. 不要在石油气或其它易 燃品(例如挥发剂、涂料 稀释剂、喷雾剂等)附近 使用电吹风。
- 9. 电吹风必须安装固定在 洗澡或淋浴时触及不到 的地方。由于电吹风的

手持部分装有电气元件, 所以电吹风安装固定的 地方必须确保手持部分 在完全拉直时,洗澡或 淋浴的人仍无法接触到。

- 11. 不要在手湿的情况下使用电吹风。不要把电吹风。不要把电吹风放置或存放在靠近水槽、有水或其它盛有液体、高度潮湿的地方。
- 12.身体、感官或精神方面 有缺陷或缺乏知知经验 的人(包括儿童)不能使 用本电吹风,除非他们 在其监护人的监督之 或受过监护人关于如何 使用本品的指导。 应该对儿童加以监督确 保他们不玩耍本电吹风。

警告:不要在盛水的浴缸、洗脸盆或其它器皿附近使用本电吹风。

- 所近使用本电联风。
 左侧符号表示禁止
 在洗澡和淋浴时使
 用。
- 13. 不要使用稀释剂、苯和 其它溶解剂来清洁电吹风。
- 14. 在使用中小心不要让头发 卷入入风口,不要把外物 插入出风口和入风口,否 则会导致机械损坏或触电。 如在使用过程中入风口或 出风口被堵塞时, 可能导 致加热器或者电吹风不能 工作。假如出现这种情况, 请立即停止使用, 切断电 源开关并拔下插头,清除 入风口或出风口的堵塞物。 让电吹风冷却几分钟后, 如果再次接通电源不能恢 复正常工作时,请联系 Panasonic授权维修中心 修理。
- 15. 在使用过程中,出风口附近可能会变热,请注意使用。
- **16.** 不要直接将气流吹向眼睛或其它敏感部位。
- 17. 请妥善处理本产品的包装袋,避免婴幼儿窒息

- 等意外发生。请将电吹风置于儿童触摸不到的地方。 在小孩或残疾人使用或接近本电吹风时,应对其密 切看护。
- 18.假如电吹风的电源线损坏,为避免危险,请立即停止使用,并联系Panasonic授权维修中心修理。由于进行任何检测、调整或维修都需要特殊工具,所以绝对不要擅自修理电吹风。
- 19.不要将电吹风用于吹干头发和整发以外的其他用途。 (如:吹干鞋子和衣物等用途,否则可能会引起外壳 受热变形。)
- 20.不要把非本公司提供的任何附件与本电吹风连用。
- 21.本电吹风仅供家庭使用。
- 22.请妥善保管本使用说明书。

规格

726 I H				
产品名称	电吹风			
产品型号	EH 5247			
额定电压	a.c 220V~50Hz			
额定功率	1: 50W 2: 500W 3: 1100W			
尺寸	85(宽) x 165(深) x 230(高)毫米			
原产地	中国			
生产日期	请见商品上刻印			
执行标准	GB4706.1, GB4706.15, GB4343.1,			
	GB17625.1, Q/SXDGWB 7			

规格如有变更, 恕不另行通知。

售后服务

本产品提供2年保修。(详情见保修证)

Before use

EH 5247 is a high-powered 1100-watt model which can be operated directly from a a.c220V~50Hz power source. Plus it has a new turbo function when it is switched to [3]. So you can dry your wet hair quickly. And set the switch to [2] for styling your hair.

How to use

- Make sure the power switch is in the [0] position.
 Plug the unit in and turn on the power switch.
- Drying your hair after washing Set the power switch to [1] or [3].
- 3. Hair setting

 Set the power switch to [2]

 for setting and [1] for the cool.
- 4. Turn the power switch to [0] and unplug the unit.

Cautions

- The electric power supply should come from a properly wired outlet. Also, check the capacity of the outlet and use the dryer separately from other equipment.
- 2. Always ensure the voltage

- to be used corresponds to the voltage stated on the unit.
- 3. Never leave the dryer running.
- After use or power cut, unplug from the outlet. When unplugging, always grasp the plug and unplug it from the outlet.
- If the dryer blows air intermittently, discontinue use immediately.
- Do not pull the cord with unnecessary force. Do not damage or modify the cord. If the cord or plug is damaged or gets hot, discontinue use of the dryer immediately.
- Avoid dropping the dryer or subjecting it to other excessive shock.
- 8. Do not use the dryer near gas or other inflammable materials (such as benzene, paint thinner, sprays, etc.).
- 9. As the handle of the hairdryer incorporates electrical components, the hairdryer must be fixed so that the handle, when fully extended, is out of reach of a person using a bath or shower.
- 10. The hairdryer is not

recommended to use in bathroom. When used in a bathroom, unplug the appliance after use since the proximity of water presents a risk even when the hairdryer is switched off.

For additional protection, we advise you to install a residual current device (RCD) with a rated residual operating current not exceeding 30mA in the electrical circuit supplying the bathroom. Ask your installer for advice.

- 11. Do not use the dryer with wet hands or in the bath or shower. Do not use this hair dryer near water contained in bath-tubs, basins or other vessels. Do not leave or store the dryer near a tub, sink or other place where it will be exposed to water and other liquids or high humidity.
- 12. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction

concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

- The mark on the left indicates do not use the dryer in a bath or shower.
- 13. Do not use thinner benzene or other solvents when cleaning the dryer.
- 14. Be careful that hair is not sucked into the air inlet during use. Never insert foreign objects into the air inlet or outlet. Mechanical damage or shock can result. If the air inlet or outlet are blocked during use, the heater block or dryer maybe not operate. After removing the blockage from air inlet or outlet for several minutes, the drver can operate again, if not, please with our service contact center or special repair shop.
- 15. During use, be careful of the

- place around the air outlet, which will become hot.
- 16. Do not direct the airflow towards the eyes or other sensitive areas.
- 17. Please properly handle the product packaging bags to avoid accidents, such as infant and child choking. Keep the dryer away from children. Close supervision is necessary when the dryer is used by or near children and invalids.
- 18. If the cord is damaged, discontinue use of the dryer immediately and return the dryer to your nearest authorized Panasonic service dealer for repair or replacement. As special tools are required for any examination, adjustment or repair, never repair the dryer by yourself.
- 19. Do not use the hair dryer for purposes other than drying and styling human hair.
- 20.Do not use any attachments with this dryer other than those supplied by Panasonic.
- 21. This appliance is designed only for household use.
- 22. Please keep the instructions well.

Specifications

Product name	Hair dryer				
Model No	EH 5247				
Rated voltage	a.c 220V~50Hz				
Rated power	1: 50W 2: 500W 3: 1100W				
Dimensions	85(W)x165(D)x230(H)mm				
Place of origin	China				
Date of production	See engraving on the commodity				
Execution Standard	GB4706.1, GB4706.15, GB4343.1				
	GB17625.1, Q/SXDGWB 7				

Specifications are subject to change without notice.

After service

This appliance is warranted for two years. (Please check the certification for details.)

Panasonic

促销员留存

保修证

保修条款

有关保修期内Panasonic商品的保修(无偿修理),从购买之日起开始实施。

- 1.保修期内的商品只可在Panasonic认定维修店进行保修;保修时,请出示本保修证及购机发票。 以下两点需特别注意:
 - a.本保修证遗失后不再补发,请妥善保管。
 - b,本保修证仅限于中华人民共和国国内有效(香港、澳门、台湾三地区暂不可使用)。
- 2.自购入之日起在以下期间内,在正常使用中发生故障的情况下进行保修。
 - 整机(除商用产品) 2年内无偿
 - 整机(商用产品) 6个月
 - 内刀头、外刀网、刀头、辅助装置、附件 有偿提供
- 3.属下列情况之一者,即使在保修期内,也不能以保修对待,但是可以实行收费修理:
 - a. 未按商品使用说明书要求使用、维护、保管而造成损坏的;
 - b. 因不正确操作、电源不正常、破损(如: 摔落等)而造成损坏的;
 - c. 不经Panasonic认定维修店维修人员拆动造成损坏的;
 - d. 不能出示本保修证及有效购机发票的;

商品型号:

- e. 保修证上记录的信息与商品实物标识不符或者涂改的;
- f. 因不可抗力因素(如雷电、地震、火灾、水灾等)造成损坏的。
- 4.本保修条款只适用干消费者个人为生活消费需要而购买使用的场合,不适用干经营性等使用。

[商品信息] 商品名称:	电吹风	产	地: 中国•广州
商品型号:	EH 5247	制造组	扁号:

[保修回执] 以下回执是保修的重要依据,请勿自行撕下

EH 5247

 商品型号:	EH 5247	制造编号:	【保修结算4】
 商品型号:	EH 5247	制造编号:	保修结算3
 商品型号:	EH 5247	制造编号:	【保修结算2】
 商品型号:	EH 5247	制造编号:	【保修结算1】

制造编号:

木俣修证由突加右亦再如不只行通知

[销售记录] 未完整记录以下信息	将可能无法进行保修		/\
销售日期:		安等	。 接调试日期: (盖章)
顾客姓名:			'. /
顾客地址:			
销售店名称:			
销售店地址:			编:
		開	3年:
[维修记录]			
维修店名称:	联系电话:		送修日:
维修店地址:			邮 编:
故障内容:	故障原因:		
维修内容:			
维修员签字:	交验日期:		
维修店名称:	联系电话:		送修日:
维修店地址:			邮 编:
故障内容:	故障原因:		
维修内容:			
维修员签字:	交验日期:		
维修店名称:	联系电话:		送修日:
维修店地址:			邮 编:
故障内容:	故障原因:		
维修内容:			
维修员签字:	交验日期:		

Panasonic客户咨询服务中心:

400-810-0781; 800-810-0781 (固定电话) Panasonic官方网站: http://panasonic.cn

松下电器(中国)有限公司

EH5247-p11 2009.5.31

松下电工·万宝电器(广州)有限公司 (PEWWBG) Panasonic Electric Works Wanbao (Guangzhou) Co., Ltd.

工厂地址: 广州市番禺区市广路万宝基地

(Address): Wanbao Base, Shiguang Road, Panyu District, Guangzhou

电话(TeI): (020)84770333 传真(Fax): (020)84773033 邮政编码(Post Code): 511495

原产地:中国

中国印刷

Printed in China

EH9010524724051 Y0609-0

Ý EN, CH 发行: 2009年6月