

Panasonic[®]

Operating Instructions

 
使用说明书

Rechargeable Shaver

充电式电动剃须刀

Model No.
型号 ES-SA40

English	2
中文	7
保修证	13

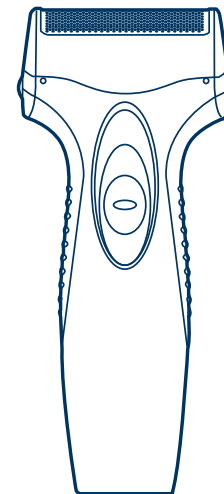

Before operating this unit, please read these instructions completely and save them.
在使用本产品前，请仔细阅读本说明书并妥善保管。

Important

► Before use

This WET/DRY shaver can be used for wet shaving with shaving lather or for dry shaving. You can use this watertight shaver in the shower and clean it in water. The following is the symbol of Wet shaver. The symbol means that the hand-held part may be used in a bath or shower.



Treat yourself to wet lather shaves for at least three weeks and notice the difference. Your Panasonic WET/DRY shaver requires a little time to get used to because your skin and beard need about a month to adjust to any new shaving method.

► Using the shaver

Caution - The outer foil is very thin and can be damaged if not used correctly. Check that the foil is not damaged before using the shaver. Do not use the shaver if the foil etc. is damaged as you will cut your skin.

► Charging the shaver

Do not use any charging adaptor other than one specifically designed for this model (RE7-52). Plug in the adaptor into a household outlet where there is no moisture and handle it with dry hands. The shaver may become warm during use and charging. However, this is not a malfunction. Do not charge the shaver where it will be exposed to direct sunlight or other heat sources.

Adequate ambient temperature for charging is 0-40 °C.

The supply cord cannot be replaced. If the cord is damaged, the appliance should be scrapped.

► Cleaning the shaver

Warning - Remove the shaver from the charging adaptor before

cleaning it to prevent electric shock.

If you clean the shaver with water, do not use salt water or hot water. Do not soak the shaver in water for a long period of time. Wipe it with a cloth dampened with soapy water. Do not use thinner, benzine or alcohol.

► Storing the shaver

Remove the shaver from the charging adaptor when storing it. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Keep these operating instructions in a safe place.

SPECIFICATIONS

Power source: a.c 220 V, 50-60 Hz

Motor voltage: d.c 1.2 V

 
Charging time: 8 hours

This product is intended for household use only.

- The unit is applied to the Chinese standard GB4706.1 appendix B, GB4706.9 and Q/SXDGWB 6.



Parts identification

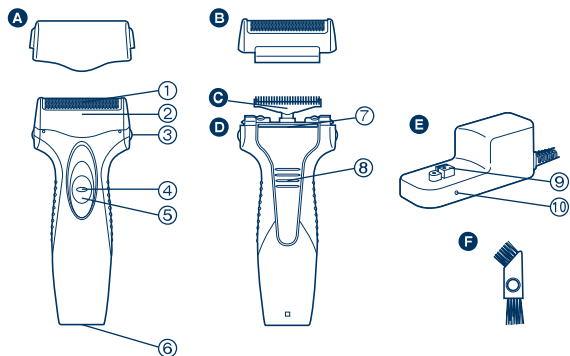

- | | |
|-------------------------------------|------------------------------------|
| A Protective cap | 5 0/1 switch |
| B Outer foil section | 6 Appliance socket |
| 1 Outer foil | 7 Trimmer |
| 2 Foil frame | 8 Trimmer handle |
| C Inner blade | E Charging adaptor (RE7-52) |
| D Main body | 9 Charging plug |
| 3 Foil frame release buttons | 10 Charge indicator lamp |
| 4 Switch lock button | F Cleaning brush |

Charge

 
Charging

Perform the following steps to charge the shaver if it seems to lose the speed.

You can fully charge the shaver in 8 hours.

- A full charge will supply enough power for more than 25 minutes.


- 1 Turn off the shaver and insert it in the charging adaptor as illustrated.**
- 2 Plug in the adaptor into a household outlet.**

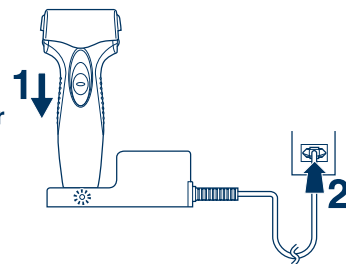

- The charge indicator lamp glows and stays on until the shaver is removed from the charging adaptor.

Shave

 Using the shaver

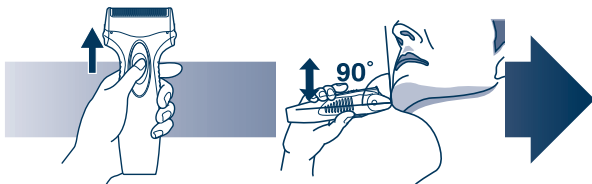


- 1** Depress the switch lock button and slide the 0/1 switch upwards.
- 2** Hold the shaver as illustrated above and shave.

- Start out shaving by applying gentle pressure to your face. Stretch your skin with your free hand and move the shaver back and forth in the direction of your beard. You may gently increase the amount of pressure as your skin becomes accustomed to this shaver. Applying excessive pressure does not provide a closer shave.


► Using the trimmer

 Slide the trimmer handle up. Place at a right angle to your skin and move downwards to trim your sideburns.

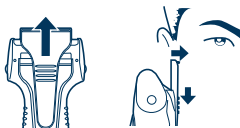


Clean

 
Cleaning

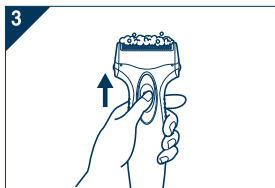

 1. Remove the shaver from the charging adaptor.
2. Apply some hand soap and some water to the outer foil.
3. Turn the shaver on.
4. Turn the shaver off after 10-20 seconds.

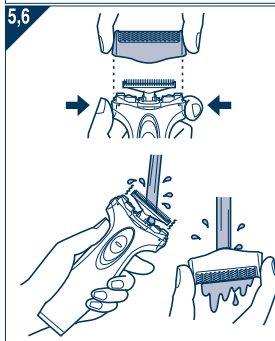

 
5. Remove the outer foil section and turn the shaver on.
6. Clean the shaver and the outer foil section with running water.
7. Wipe off any drops of water with a dry cloth.
8. Dry the outer foil section and the shaver completely.
9. Attach the outer foil section to the shaver.

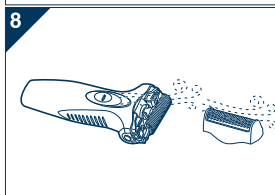


Replacing the outer foil and the inner blade

outer foil	once every year
inner blade	once every two years

 ▶ Replacing the outer foil

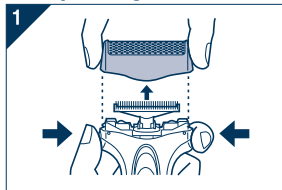


 1. Press the foil frame release buttons and lift the outer foil section upwards as illustrated.

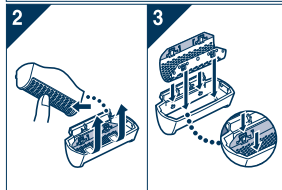


2. Gently push the outer foil in the way as illustrated. Then it will pop up from the foil frame.
3. The new outer foil should be slightly bent and pushed in until it is hooked in the foil frame.

 ▶ Replacing the inner blade

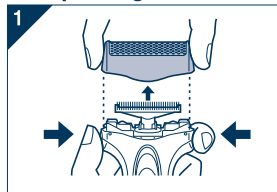


1. Press the foil frame release buttons and lift the outer foil section upwards as illustrated.
2. Remove the inner blade as illustrated.

 - Do not touch the edges (metal parts) of the inner blade to prevent injury to your hand.

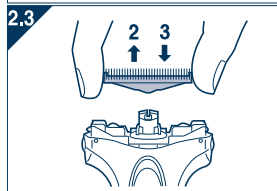

3. Insert the inner blade until it clicks as illustrated.

 Cleaning with the brush

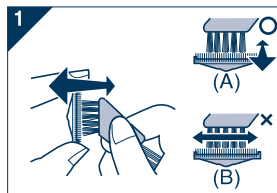


1. Clean the inner blade using the short brush by moving it in direction (A). Clean the outer foil, the shaver body and the trimmer using the long brush.
 - Do not move the short brush in direction (B) as it will damage the inner blade and affect its sharpness.
 - Do not use the short brush to clean the outer foil.

Removing the built-in rechargeable battery

English

Remove the built-in rechargeable battery before disposing of the shaver. Please make sure that the battery is disposed of at an officially designated location if there is one. Do not dismantle or replace the battery so that you can use the shaver again. This could cause fire or an electric shock. Replace it at an authorized service center.

 - Remove the shaver from the charging adaptor when removing the battery.
- Perform steps ① to ⑩ and lift the battery, and then remove it.

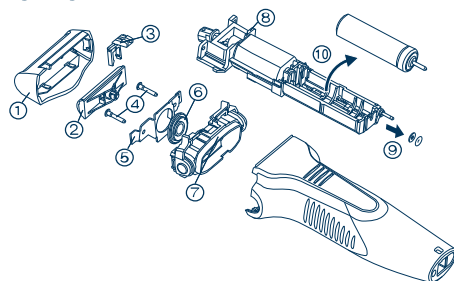

For environmental protection and recycling of materials

This shaver contains a Nickel-Metal Hydride battery.

Please make sure that the battery is disposed of at an officially assigned location, if there is one in your country.

重要事项

► 使用前

ES-SA40干/湿两用剃须刀，可以使用刮胡泡湿剃，也可以干剃。此剃须刀具有防水功能。可放入水中清洗，也可在淋浴时使用。下图标志说明此剃须刀可以在洗澡或淋浴时使用。



使用刮胡泡湿剃三周后，您能体会到一些变化。由于您的皮肤和胡须约需一个月时间才能适应新的剃须方式，因此您可能需要一点时间来适应 Panasonic 干湿两用剃须刀。

► 使用剃须刀

注意 - 外刀网很薄，若使用不正确就可能造成损坏。使用剃须刀前，请确认刀网是否损坏。如果刀网已损坏请不要使用该剃须刀，因为这样会割伤皮肤。请勿用于修剪宠物的毛发。

► 给剃须刀充电

RE7-52 充电器只能与 ES-SA40 配合使用。不能用于其他产品或用途。将充电器插入非潮湿的家用插座里，拿时双手要保持干燥。剃须刀在使用和充电过程中可能会变热，但这不是故障。不要在有阳光直射或其它热源的地方给剃须刀充电。充电的合适环境温度为 0 至 40 摄氏度。电源线不能更换。如果电源线损坏，此充电器应废弃。

► 清洁剃须刀

警告 - 清洁剃须刀前请断开电源线，以防触电。可用水清洗剃须刀，不要使用盐水或热水。不要将剃须刀长时间浸泡在水中。用蘸肥皂水的布擦拭剃须刀。不要使用稀释剂、汽油或酒精擦拭剃须刀任何部位。

► 存放剃须刀

存放剃须刀时，请将其从充电器中取出。本品不宜供肢体、感官或精神上有残疾者、缺乏经验和知识者（包括儿童）使用，除非有人对此类人加以监督或者对本品的使用加以指导，且对使用者的安全能承担责任。请对儿童进行监督，避免其将本品视为玩具，引发危险。请妥善保管本说明书。请妥善处理本产品的包装袋，避免婴幼儿窒息等意外发生。请置于婴幼儿触摸不到的地方。

规格

额定输入：交流 220 V, 50-60 Hz

 
额定输出：直流 1.2 V

充电时间：8 小时

本产品仅适合家庭使用。

- 本产品符合中国标准 GB4706.1 附录 B 和 GB4706.9 及企业标准 Q/SXDGW 6。

各部分名称

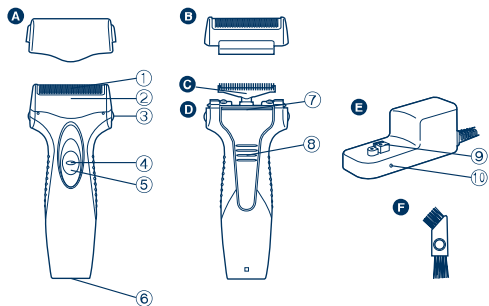

A 保护盖

B 外刀部

① 外刀网

② 外刀架

C 内刀头

D 机身

③ 外刀架释放按钮

④ 开关锁定按钮

⑤ 0/1开关

⑥ 充电器插孔

⑦ 修剪刀

⑧ 修剪刀操纵杆

E 充电器(RE7-52)

⑨ 充电插座

⑩ 充电状态指示灯

F 清洁刷

充电

 
充电中

如果感觉剃须刀速度下降, 请按下列步骤给剃须刀充电。
此剃须刀完全充电时间为8小时。

- 一次完全充电可使用25分钟以上。

1 关闭剃须刀并如
图示将其插入充
电插座。


2 将充电器插头插
入家用电源插座
里。

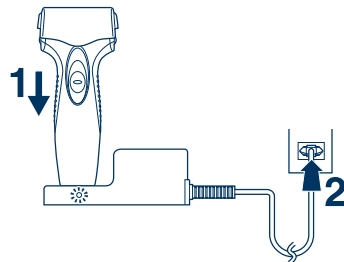

- 充电时, 充电状态指示灯发亮, 直至剃须刀从充电器中取出或拔掉电源线为止。

剃须

 使用剃须刀

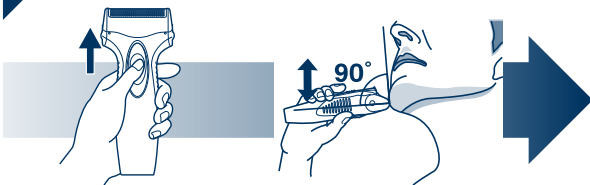

- 1** 按下开锁定按钮并将0/1开关向上推动。**2** 如上图所示握住剃须刀剃须。

 
• 购买后初次使用或半年以上未使用过，请充电16小时（要激活充电电池活性）如果充电电池完全放电后充电，充电指示灯可能不会立即亮，继续充电几分钟后即正常。

• 轻轻地压向面部开始剃须。用另一只手绷紧脸上皮肤，逆着胡须生长方向前后移动剃须刀。当皮肤适应剃须刀之后您可以稍稍增加压力。但是施加过多的压力不能为您带来更服贴的剃须效果。相反，对初次使用者可能会造成皮肤伤害。

►使用修剪刀


将修剪刀操纵杆往上推，以打开修剪刀。将修剪刀与皮肤成直角(90度)的位置向下移动以修剪鬓角。

• 在外刀架与外刀网未装上的情况下，切勿使用修剪刀，有造成伤害的可能性。

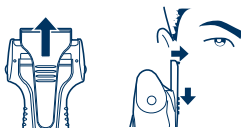

清洁

 清洁中


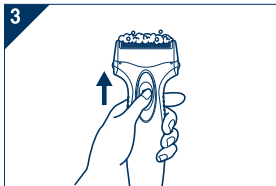


1. 从充电插座中取出剃须刀。
2. 在外刀网上涂少许洗手液。
3. 启动剃须刀并向外刀网撒些水。

4. 10至20秒后关闭剃须刀。
5. 取下外刀部并打开剃须刀。
6. 用流动水清洁剃须刀和外刀部。

7. 用干布拭去水珠。
8. 取下外刀部，使其完全干燥。

  9. 将外刀部安装至剃须刀。
警告：剃须刀需与充电器分离后才能用水清洗。

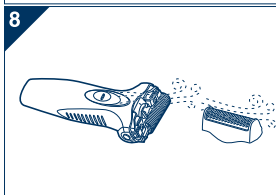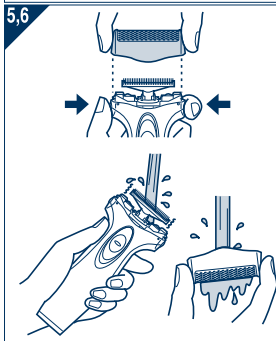




更换外刀网和内刀头

建议外刀网每年更换一次，内刀头每两年更换一次，以维持剃须刀剃须性能。

 ► 更换外刀网

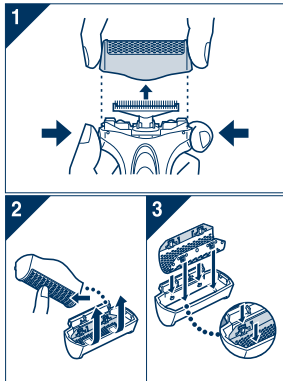


1. 如图所示，按下外刀架释放按钮并向上提起取出外刀部。

2. 如图所示：轻轻按下外刀网。外刀网随后会从外刀架上弹起。

3. 新的外刀网应当稍稍弯曲并按入，直至扣到外刀架中为止。

 ► 更换内刀头

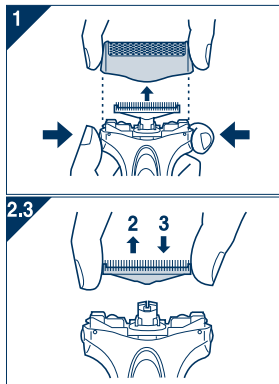


1. 如图示，按下外刀架释放按钮并向上提起取出外刀部。

2. 如图示，取出内刀头。
• 不要触摸内刀头的边缘(金属部分)，以防止您的手受到损伤。

3. 如图示，插入内刀头，直至咔嗒一声为止。

 使用刷子清洁

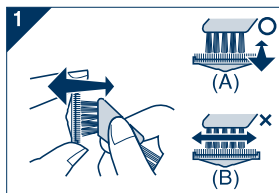

1. 使用短刷，沿图示(A)的移动方向移动，清洁内刀头。
使用长刷，清洁外刀网，剃须刀机身和修剪刀。

 
• 请勿沿(B)方向移动短刷，因为这样将损坏内刀头，影响刀片的锋利度。
• 请勿使用短刷清洁外刀网。



取出内置的可充电电池

本机内藏有可充电的电池，在消费者决定废弃本机前，一定要事先将电池从机器中取出。

- 分解剃须刀，取出电池前，一定要断开电源。
- 鼓励消费者在决定废弃剃须刀前，事先征求经销商或本公司指定维修点的意见，尽量延长剃须刀的使用寿命。
- 当消费者决定废弃剃须刀又不想自行分解机器取出电池时，鼓励消费者将器具送往本公司指定的维修站，由维修店对电池进行分解和回收。
- 电池务必废弃于政府规定的地方或回收处理单位。
- 按下图所示的①~⑩的顺序拆开本体，卸下电池。

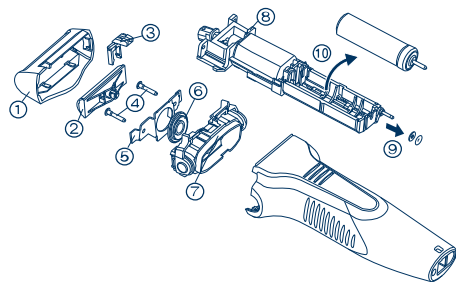

环境保护与资源回收

此剃须刀使用镍氢电池。

如果您的国家有相关规定，请务必在指定处对旧电池进行统一处理。

本机：原产地 中国
充电器：原产地 中国

Panasonic

保修证

保修条款

有关保修期内Panasonic商品的保修（无偿修理），从购入之日起开始实施。

1. 保修期内的商品只可在Panasonic认定维修店进行保修；保修时，请出示本保修证及购机发票。以下两点需特别注意：

- 本保修证遗失后不再补发，请妥善保管。
- 本保修证仅限于中华人民共和国境内有效（香港、澳门、台湾三地区暂不可使用）。

2. 自购入之日起在以下期间内，在正常使用中发生故障的情况下进行保修。

- 整机（除刀头、刀网、替刃、修剪刀外）2年内无偿；
- 专业理发器6个月内无偿；
- 附件：刀头、刀网、替刃、修剪刀有磨损供（不在保修范围内）。

3. 属下列情况之一者，即使在保修期内，也不能以保修对待，但是可以实行收费修理：

- 未按商品使用说明书要求使用、维护、保管而造成损坏的；
 - 因不正确操作、电源不正常、破损（如：掉落等）而造成损坏的；
 - 不经Panasonic认定维修店维修人员拆卸造成损坏的；
 - 不能出示本保修证及有效购机发票的；
 - 保修证上记录的信息与商品实物标识不符或者涂改的；
 - 因不可抗力因素（如雷电、地震、火灾、水灾等）造成损坏的。
4. 本保修条款只适用于消费者个人为生活消费需要而购买使用的场合，不适用于经营性等使用。

【商品信息】

商品名称：..... 产地：中国·广州
商品型号：ES-SA40 制造编号：.....

【保修回执】以下回执是保修的重要依据，请勿自行撕下

保修结算4

商品型号：ES-SA40 制造编号：.....

保修结算3

商品型号：ES-SA40 制造编号：.....

保修结算2

商品型号：ES-SA40 制造编号：.....

保修结算1

商品型号：ES-SA40 制造编号：.....

促销员留存

商品型号：ES-SA40 制造编号：.....

本保修证内容如有变更恕不另行通知

【销售记录】 未完整记录以下信息将无法进行保修

销售店
(盖章)

销售日期: 发票号码:
顾客姓名: 联系电话: 邮 编:
销售店名称: 销售店电话:
销售店地址: 邮 编:

【维修记录】

维修店名称: 联系电话: 送修日:
维修店地址: 邮 编:
故障内容: 故障原因:
维修内容:
维修员签字: 交验日期:

维修店名称: 联系电话: 送修日:
维修店地址: 邮 编:
故障内容: 故障原因:
维修内容:
维修员签字: 交验日期:

维修店名称: 联系电话: 送修日:
维修店地址: 邮 编:
故障内容: 故障原因:
维修内容:
维修员签字: 交验日期:

Panasonic客户咨询服务中心:
400-810-0781; 800-810-0781 (固定电话)
Panasonic官方网站: <http://panasonic.cn>

松下电器 (中国) 有限公司



松下电工·万宝电器(广州)有限公司 (PEWWBG)
Panasonic Electric Works Wanbao (Guangzhou) Co., Ltd.

工厂地址：广州市番禺区市广路万宝基地

(Address): Wanbao Base, Shiguang Road, Panyu District, Guangzhou

电话(Tel): (020)84770333

传真(Fax): (020)84773033

邮政编码(Post Code): 511495

原产地：中国