

保修管理编码印刷处: 本保修证内容如有变更恕不另行通知

[销售记录] 未完登记记录以下信息将无法进行保修

销售日期: 发票号码: 安装调试日期: 顾客姓名: 联系电话: 销售店名称: 销售店地址: 邮 编:

[维修记录]

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

维修店名称: 联系电话: 送修日: 维修店地址: 邮 编: 故障内容: 故障原因: 维修内容: 维修员签字: 交验日期:

Thank you for choosing a Panasonic Electric Toothbrush. Please read all instructions before use.

Safety Precautions

Warning

- Keep out of the reach of toddlers and infants. Failure to do so may result in accidents or accidental ingestion of the accessories or removable small parts.

Caution

- People who have severe periodontal disease should consult a doctor before use. Failure to do so may cause damage to teeth and gums. Do not use the brush in combination with toothpaste that contains a lot of abrasive, such as toothpaste for removing tar or for whitening. Do not force the bristles hard against the teeth or gums, or apply the bristles to one area for prolonged periods. Do not apply the solid part of the brush head to teeth. Toddlers, infants, people who are unable to operate and people with weak oral senses should not use this appliance. If you have oral health problems such as teeth undergoing treatment or unstable dentures, avoid using the brush on those parts as doing so may cause damage to teeth and gums. Never modify, disassemble, or repair the appliance yourself as doing so may cause unexpected accidents or trouble. Clean using a mild detergent. Never use thinners, benzene, or alcohol to clean the toothbrush since it may cause malfunction or cracking/discholoration of the parts. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Parts identification

- Main unit: Power switch [0/1], Battery cover, Dual-Edged Brush (x1), Inverted V-shaped bristles for interdental, Extra fine bristles for between teeth and gums. Cap.

Attaching and removing the cap. Attach and remove the cap straight.



Attaching the brush head

- Align the mark on the brush head with the mark on the main unit, and rotate it in the direction of the arrow until it clicks. Inserting the brush head without aligning the mark on the brush head with the mark on the main unit may damage the brush head or the main unit. Tightening it too strongly may cause deformation and damage of the main unit and the brush head.

Removing the brush head

- Rotate the brush head and align the marks. Pull to remove the brush. Pulling the brush head while it is fastened may damage the brush head or the main unit. When toothpaste gets hard and makes it difficult to remove the brush head, put it in water or warm water for a while and then remove.

Replacing the battery

When the battery is low, there is less vibration and a weaker brushed feeling. Please replace the alkaline battery with a new one.

- Remove the battery cover by rotating it. Insert an alkaline LR03 (AAA) alkaline battery. It is possible to use the appliance for approximately 90 days using a Panasonic alkaline LR03 (AAA) alkaline battery (using the appliance once a day for 2 minutes).

Attach the battery cover by rotating it.

- Batteries are not supplied. Please purchase separately. Before replacing the alkaline battery, ensure the unit is thoroughly dry to prevent water drops entering the main unit. Always use alkaline batteries. Use of non-alkaline batteries may result in a drastically reduced operating time. Do not use rechargeable batteries. We recommend that you use a Panasonic LR03 (AAA) alkaline battery. Always follow the cautions printed on the battery. Check the polarities (+ and -) of the battery and install it correctly. Remove the battery when not using the appliance for an extended period of time. Please dispose of used battery appropriately. Do not disassemble the battery or throw it into a fire. Do not short-circuit the battery.

Using the toothbrush

- Remove the cap. Confirm that the brush is fixed firmly.

Replacing the battery

- Place the toothbrush in your mouth. Press the power switch firmly to operate the toothbrush. Press the power switch with the ball of the finger. Do not press with a fingernail. Doing so may tear the rubber of the power switch. Brush your teeth by moving the main unit by hand. Brush by moving the toothbrush in the same way as when you brush by hand. Just applying the toothbrush to teeth cannot fully remove plaque, so it is recommended that you move the toothbrush. Do not apply the brush head to teeth or gums too strongly. When finished brushing, stop the motion by pressing the power switch firmly. In order to prevent splattering of saliva, etc., stop operation of the toothbrush while it is still in the mouth.

Tips on usage

Boundary between the tooth surfaces or teeth and gums

- Press the bristles at a 45° angle. Place the brush so that the minute side bristles can fit in between the teeth and gums.

At the back of the front teeth or misaligned teeth

- Press the brush vertically. Place the brush according to the angle of the teeth.

After use

Washing the brush

- Wash the brush under running water. Do not wash with water hotter than 80 °C. Do not pull the bristles of the brush. (Doing so may cause bristles to come out.) Shake well to remove water after washing.

Washing the main unit

- Make sure that the battery cover is closed. Wash the main unit under running water. Do not wash with water hotter than 40 °C. Do not immerse the main unit under water. (Otherwise water may get inside.)

Washing the cap

- Wash the Cap under running water. Do not wash with water hotter than 40 °C.

Changing the brush head (Sold separately)

Replacing the brush every 3 months is recommended. If the bristles are bent to one side or worn, the toothbrush is not very effective for brushing.

Table with 3 columns: Part number, Replacement brush head for EW-DS11, Quantity. Row 1: WEW0957-W (White), [Image of brush head], 2 pcs.

Specifications

Table with 2 columns: Product name, Electric toothbrush. Product model, EW-DS11. Rated voltage, 1.5V---. Battery, LR03 (AAA) alkaline battery x 1 (sold separately). Weight, Approx. 35 g (including brush and cap) (excluding battery). Place of origin, China. Date of production, See engraving on the commodity. Execution standard, Company standard. Q/SXDGWB 4.

Notes

- Do not use for any purpose other than dental care. Do not drop or handle roughly. Please be careful not to get hair products, hand cream, etc. on the main unit because it may ruin the appearance.

Tips on usage

Bite (back teeth)

- Apply the brush to the teeth at an angle of 90° from the top.

Notes

- Do not use for any purpose other than dental care. Do not drop or handle roughly. Please be careful not to get hair products, hand cream, etc. on the main unit because it may ruin the appearance.

After use

Washing the brush

- Wash the brush under running water. Do not wash with water hotter than 80 °C. Do not pull the bristles of the brush. (Doing so may cause bristles to come out.) Shake well to remove water after washing.

Washing the main unit

- Make sure that the battery cover is closed. Wash the main unit under running water. Do not wash with water hotter than 40 °C. Do not immerse the main unit under water. (Otherwise water may get inside.)

Washing the cap

- Wash the Cap under running water. Do not wash with water hotter than 40 °C.

Tips on usage

Bite (back teeth)

- Apply the brush to the teeth at an angle of 90° from the top.

Notes

- Do not use for any purpose other than dental care. Do not drop or handle roughly. Please be careful not to get hair products, hand cream, etc. on the main unit because it may ruin the appearance.

After use

Washing the brush

- Wash the brush under running water. Do not wash with water hotter than 80 °C. Do not pull the bristles of the brush. (Doing so may cause bristles to come out.) Shake well to remove water after washing.

Washing the main unit

- Make sure that the battery cover is closed. Wash the main unit under running water. Do not wash with water hotter than 40 °C. Do not immerse the main unit under water. (Otherwise water may get inside.)

Washing the cap

- Wash the Cap under running water. Do not wash with water hotter than 40 °C.

Note

- Shake the cap and brush head well to drain off water, and dry using a dry towel, etc. After this, put the cap on the main unit. Leaving them wet may dirty or damage the pouch or bag.

Changing the brush head (Sold separately)

Replacing the brush every 3 months is recommended. If the bristles are bent to one side or worn, the toothbrush is not very effective for brushing.

Table with 3 columns: Part number, Replacement brush head for EW-DS11, Quantity. Row 1: WEW0957-W (White), [Image of brush head], 2 pcs.

Specifications

Table with 2 columns: Product name, Electric toothbrush. Product model, EW-DS11. Rated voltage, 1.5V---. Battery, LR03 (AAA) alkaline battery x 1 (sold separately). Weight, Approx. 35 g (including brush and cap) (excluding battery). Place of origin, China. Date of production, See engraving on the commodity. Execution standard, Company standard. Q/SXDGWB 4.

Notes

- Do not use for any purpose other than dental care. Do not drop or handle roughly. Please be careful not to get hair products, hand cream, etc. on the main unit because it may ruin the appearance.

After use

Washing the brush

- Wash the brush under running water. Do not wash with water hotter than 80 °C. Do not pull the bristles of the brush. (Doing so may cause bristles to come out.) Shake well to remove water after washing.

Washing the main unit

- Make sure that the battery cover is closed. Wash the main unit under running water. Do not wash with water hotter than 40 °C. Do not immerse the main unit under water. (Otherwise water may get inside.)

Washing the cap

- Wash the Cap under running water. Do not wash with water hotter than 40 °C.

中文

English

Using the toothbrush

- Remove the cap. Confirm that the brush is fixed firmly.

Replacing the battery

- Place the toothbrush in your mouth. Press the power switch firmly to operate the toothbrush. Press the power switch with the ball of the finger. Do not press with a fingernail. Doing so may tear the rubber of the power switch. Brush your teeth by moving the main unit by hand. Brush by moving the toothbrush in the same way as when you brush by hand. Just applying the toothbrush to teeth cannot fully remove plaque, so it is recommended that you move the toothbrush. Do not apply the brush head to teeth or gums too strongly. When finished brushing, stop the motion by pressing the power switch firmly. In order to prevent splattering of saliva, etc., stop operation of the toothbrush while it is still in the mouth.

Tips on usage

Boundary between the tooth surfaces or teeth and gums

- Press the bristles at a 45° angle. Place the brush so that the minute side bristles can fit in between the teeth and gums.

At the back of the front teeth or misaligned teeth

- Press the brush vertically. Place the brush according to the angle of the teeth.

After use

Washing the brush

- Wash the brush under running water. Do not wash with water hotter than 80 °C. Do not pull the bristles of the brush. (Doing so may cause bristles to come out.) Shake well to remove water after washing.

Washing the main unit

- Make sure that the battery cover is closed. Wash the main unit under running water. Do not wash with water hotter than 40 °C. Do not immerse the main unit under water. (Otherwise water may get inside.)

Washing the cap

- Wash the Cap under running water. Do not wash with water hotter than 40 °C.

Note

- Shake the cap and brush head well to drain off water, and dry using a dry towel, etc. After this, put the cap on the main unit. Leaving them wet may dirty or damage the pouch or bag.

Changing the brush head (Sold separately)

Replacing the brush every 3 months is recommended. If the bristles are bent to one side or worn, the toothbrush is not very effective for brushing.

Table with 3 columns: Part number, Replacement brush head for EW-DS11, Quantity. Row 1: WEW0957-W (White), [Image of brush head], 2 pcs.

Specifications

Table with 2 columns: Product name, Electric toothbrush. Product model, EW-DS11. Rated voltage, 1.5V---. Battery, LR03 (AAA) alkaline battery x 1 (sold separately). Weight, Approx. 35 g (including brush and cap) (excluding battery). Place of origin, China. Date of production, See engraving on the commodity. Execution standard, Company standard. Q/SXDGWB 4.

Notes


- Do not use for any purpose other than dental care. Do not drop or handle roughly. Please be careful not to get hair products, hand cream, etc. on the main unit because it may ruin the appearance.



使用说明书 Operating Instructions

(家用) 电动牙刷 (Household) Electric Toothbrush

型号 EW-DS11 Model No.

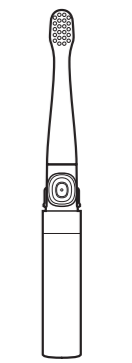

中文 ..... 2 English ..... 8

在使用本产品前, 请仔细阅读本说明书并妥善保管, 以备将来参考。 Before operating this unit, please read these instructions completely and save them for future use.

感谢您选购 Panasonic 电动牙刷。请在使用前阅读所有说明。

## 安全注意事项

### 警告

- 请放在婴幼儿接触不到的地方。  
- 否则可能导致意外。例如：不慎误食附件或可拆卸的小零件。

### 注意

- 患有严重牙周病的人士使用前应咨询医生。否则可能会对牙齿和牙龈造成伤害。
- 请勿将本牙刷与含有大量摩擦剂的牙膏搭配使用，例如用于去除烟渍的牙膏或美白牙膏。
- 请勿将刷毛用力抵在牙齿或牙龈上，或将刷毛长时间施加于一个部位。
- 请勿使刷头的非刷毛部分接触牙齿。
- 婴幼儿、无操作能力者、口腔感觉不适者请勿使用本产品。
- 如果您有口腔健康问题，例如正在进行牙齿治疗或假牙不稳固，应避免在相应部位使用本牙刷，否则可能损伤牙齿和牙龈。
- 切勿自行改装、分拆或修理本产品，否则可能导致意外事故或故障。
- 用柔性清洁剂进行清洁。
- 切勿使用稀释剂、酒精或汽油清洁牙刷，否则可能导致故障或部件破裂、褪色。
- 本产品不宜供肢体、感官或精神上有残疾者、或缺乏经验和知识者（包括儿童）使用，必须有监护者从旁监督并对本产品的使用加以指导，且对使用者的安全能承担责任。请避免儿童将本产品视为玩具，从而引发危险。

## 各部分名称

### A 机身

- ① 电源开关 [0/1]
- ② 电池盖

### 附件

### B 牙刷头（一个）

- ③ 用于牙间隙的倒V字形刷毛
- ④ 用于牙齿和牙龈之间的超细刷毛

### C 保护盖

#### 安装和拆卸保护盖

垂直地安装和拆卸保护盖。

#### 安装刷头

1. 将刷头上的标记对准机身上的标记，按照箭头方向旋转，直至其发出咔嗒声。

- 如果在刷头上的标记与机身上的标记没有对准的情况下插入刷头，可能会损坏刷头或机身。
- 拧得过紧可能会导致机身和刷头变形或损坏。

#### 拆卸刷头

1. 旋转刷头并对准标记。
2. 拔出刷头。

- 如果在刷头拧紧时拔刷头，可能会损坏刷头或机身。
- 当牙膏凝固而难以卸下刷头时，请将其在水或温水中放置一段时间，然后再拆卸。

## 更换电池

电池电量不足时，震动减小且刷牙感觉减弱。请更换新的碱性干电池。

### 1 旋转电池盖将其取下。

### 2 装入一节 AAA LR03（7号）碱性干电池。

- 使用 Panasonic AAA LR03（7号）碱性干电池时，电池的电量可使用约90天（每天使用本产品一次，每次2分钟）。

### 3 旋转电池盖将其装上。

#### 注意：

- 本产品不提供电池。请另外购买。
- 更换碱性干电池之前，请确保装置完全干燥，以防止水滴进入机身内部。
- 务必使用碱性干电池。使用非碱性干电池可能导致使用时间明显缩短。
- 请勿使用充电电池。
- 建议您使用 Panasonic AAA LR03（7号）碱性干电池。
- 务必遵照电池上印刷的注意事项。
- 确认电池的极性（+极和-极），正确安装电池。当打算长期不用本产品时，请取出电池。
- 请妥善丢弃已用过的电池。
- 请勿拆开电池或置于火中。请勿使电池短路。

## 使用牙刷

### 1 取下保护盖。

## 2 确认刷头牢牢固定。

## 3 将牙刷放入口中。

- 使用牙刷时，特别是涂有牙膏时，应在操作之前将刷头放到口中以防止溅出。

## 4 用力按电源开关使牙刷运行。

- 用力按电源开关。如果轻按电源开关，牙刷可能仅在您按下时运行。
- 用手指肚按电源开关。
- 请勿用指甲按开关。否则可能会戳破电源开关的橡胶。

## 5 用手移动机身来刷牙。

- 按照您用手刷牙时的相同方式，通过移动牙刷来刷牙。仅将牙刷贴在牙齿上无法完全去除牙菌斑，因此建议您移动牙刷。
- 请勿将刷头过度用力地抵在牙齿或牙龈上。

## 6 刷完后，用力按电源开关可停止运行。

- 为了防止唾液等溅出，应在牙刷仍在口内时停止其运行。

## 使用小贴士

### 牙齿表面之间或牙齿与牙龈之间的分界处

- 以45°角按刷毛。
- 倒V字形刷毛用于清洁牙齿之间的空隙。
- 超细刷毛用于清洁牙齿与牙龈之间的空隙。

### 门牙或不整齐牙齿的后面

- 垂直按刷头。
- 根据牙齿的角度安放刷头。

## 使用小贴士

### 牙齿咬合部（后牙）

- 将刷头以90°角贴在牙齿上。

#### 注意：

- 除牙齿保健外，请勿用于任何其他用途。
- 请勿跌落或粗暴对待。
- 请注意不要将护发品、护手霜等物品沾到机身上，否则可能影响外观。

## 使用后

### 清洗刷头

- 用流水冲洗刷头。
- 请勿用高于80℃的水清洗。
- 请勿拔刷头上的刷毛。（否则可能导致刷毛脱落。）
- 清洗后抖掉水。

### 清洗机身

1. 确保电池盖已关闭。
  2. 用流水冲洗机身。
- 请勿用高于40℃的水清洗。
  - 请勿将机身浸没在水中。（否则内部可能进水。）

### 清洗保护盖

- 用流水清洗保护盖。
- 请勿用高于40℃的水清洗。


## 注意：

- 抖掉保护盖和刷头上的水，用干毛巾等物品擦干。然后，将保护盖安装到机身上。在潮湿状态下放置可能会沾污或损坏袋或包。

## 更换刷头（需另外购买）

建议每3个月更换一次刷头。

如果刷毛弯向一侧或磨损，刷牙效果可能不太理想。

部件号	EW-DS11的替换刷头	数量
WEW0957-W（白色）		每盒2个

- 只能使用EW-DS11的替换刷头。

## 规格

产品名称	电动牙刷
产品型号	EW-DS11
额定电压	1.5V---
电池	使用一节AAA LR03（7号）碱性干电池（需另外购买）
重量	约35g（包括保护盖）（不含电池）
原产地	中国
生产日期	请见商品电池基台上刻印。具体是：取出电池盖，可见电池基台上刻印6位数字，分别代表商品生产的年月日。
执行标准	企业标准
	Q/SXDGBW 4

本产品仅适合家庭使用。

## 松下电工·万宝电器（广州）有限公司 (PEWWBG) Panasonic Electric Works Wanbao (Guangzhou) Co., Ltd.

工厂地址： 广州市番禺区市广路万宝基地  
(Address): Wanbao Base, Shiguang Road,  
Panyu District, Guangzhou

电话 (Tel): (020)84770333  
传真 (Fax): (020)84773033  
邮政编码 (Post Code): 511495  
原产地： 中国

中国印刷  
Printed in China  
EW9200DS111405 Y1010-1  
发行：2010年10月

© CH, EN

## Panasonic 保修证

### 保修条款

有关保修期内Panasonic商品的保修（无偿修理），从购入之日起开始实施。

1. 保修期内的商品只可在Panasonic认定维修店进行保修；保修时，请出示本保修证及购机发票。

以下两点需特别注意：

- a. 本保修证遗失后不再补发，请妥善保管。
  - b. 本保修证仅限于中华人民共和国国内有效（香港、澳门、台湾三地区暂不可使用）。
2. 自购入之日起在以下期间内，在正常使用中发生故障的情况下进行保修。
- 整机（除商用产品）.....2年内无偿
  - 整机（商用产品）.....6个月
  - 内刀头、外刀网、刀头、辅助装置、附件.....有提供

3. 属下列情况之一者，即使在保修期内，也不能以保修对待，但是可以实行收费修理：

- a. 未按商品使用说明书要求使用、维护、保管而造成损坏的；
  - b. 因不正确操作、电源不正常、破损（如：摔落等）而造成损坏的；
  - c. 不经Panasonic认定维修店维修人员拆卸造成损坏的；
  - d. 不能出示本保修证及有效购机发票的；
  - e. 保修证上记录的信息与商品实物标识不符或者涂改的；
  - f. 因不可抗力因素（如雷电、地震、火灾、水灾等）造成损坏的。
4. 本保修条款只适用于消费者个人为生活消费需要而购买使用的场合，不适用于经营性等使用。

【商品信息】	
商品名称: 电动牙刷	产地: 中国
商品型号: EW-DS11	制造编号:

【保修回执】以下回执是保修的重要依据，请勿自行撕下

商品型号: EW-DS11	制造编号:	保修回执 4
商品型号: EW-DS11	制造编号:	保修回执 3
商品型号: EW-DS11	制造编号:	保修回执 2
商品型号: EW-DS11	制造编号:	保修回执 1
商品型号: EW-DS11	制造编号:	促销员留存