

Panasonic[®]

使用说明书
Operating Instructions
(家用)蒸汽挂烫电熨斗
(Household) Steam Iron

型号/Model No. **NI-GHA045,NI-GHA046**



松下会员俱乐部
扫描二维码
享受会员专属福利

微信公众号

松下·万宝(广州)电熨斗有限公司(PWAPEIGZ)
Panasonic Wanbao Appliances Electric Iron (Guangzhou) Co., Ltd.

地址：广州市番禺区钟村万宝基地万宝南街2号
Address: No.2, South Wanbao Street, Wanbao Base,
Zhongcun,Panyu District, Guangzhou City
电话(Tel)：020-84770888
邮编(Post Code): 511495
原产地：中国

松下家电(中国)有限公司
客户咨询服务中心：4008-811-315
Panasonic Customer Services Center: 4008-811-315



中文	4-14
English	15-26

感谢您购买本公司的产品。
在使用本产品前，请仔细阅读本说明书并妥善保管，以备将来参考。

Thank you for buying a Panasonic Iron.

Before operating this unit, please read these instructions completely and save them for future use.

»»»»» 官方网站(Website): <http://panasonic.cn>

发行：2018年03月

i82006-5P56D

© Panasonic corporation 2018

中国印刷 Printed in China

»»»»»

重要安全警示	04-06
各部件的名称	07
产品的加水	07-08
产品的使用方法	08-10
产品的存放	11
产品的清洁	11
常见故障及处理方法	12
规格	13
产品中有害物质的名称及含量	14

SAFTY PRECAUTION	15-18
PARTS IDENTIFICATION	19
HOW TO FILL WITH WATER	19-20
HOW TO USE	20-22
HOW TO STORE YOUR PRODUCT	23
HOW TO CLEAN THE PRODUCT	23
TROUBLE-SHOOTING	24-25
SPECIFICATION	26

重要安全警示

为减少故障、触电、受伤、火灾、死亡以及设备或财产损失的危险，请务必遵守以下安全注意事项。

标志说明

以下标志用于对因无视标志说明和使用不当而导致的危险、伤害和财产损失的程度进行分类和描述。



警告 如果您没有遵照此指示操作，您可能会受到严重的伤害甚至死亡。



注意 您必须注意，否则潜在的危险可能使您受到轻度的伤害或损坏您的物品。

以下标志用于对需要遵循的说明的种类进行分类和描述。



此标志用于提醒用户注意禁止采取的操作步骤。



此标志用于提醒用户注意为了安全操作本产品而必须遵循的操作步骤。



警告



如果电源插头损坏或插入家用电源插座的电源插头松动时，请勿使用。
- 否则可能会导致触电或因短路而引起火灾。



切勿在手湿的情况下将电源插头连接到家用电源插座或从家用电源插座中拔出。
- 否则可能会导致触电或受伤。



不要损坏或改造、或用力弯曲、拉扯、扭曲电源线，也不要放置任何重物在电源线上或挤压到电源线。
- 否则可能会导致触电或短路引起火灾。



请勿在存放时将电源线缠绕在本体上。
- 否则可能导致电源线断线，发生触电，或由于短路而导致火灾。



请勿在捆着电源线的状态下使用。
- 否则可能导致触电或火灾。



请勿改装、拆卸或修理本产品。
- 否则可能会因为异常操作而导致火灾或伤害，请务必委托本公司指定的维修店修理。



请不要把产品浸入水中或其他液体中。请不要直接用水龙头下器具注水。
- 以免触电。



不要在手湿的时候使用本产品。
- 否则可能会导致触电或短路引起火灾。



不要让产品靠近易燃物品(如汽油)。
- 否则可能会引起爆炸或火灾。

警告

- ⊘ 请勿超负荷使用家用电源插座或线路。
- 在同一家用电源插座安插过多插头而超负荷使用时，可能会因过热而导致火灾。

- ⚠ 定期清洁插头，以防止灰尘堆积。
- 否则潮湿造成的绝缘失效可能会引起火灾，请拔下插头，并用干布擦拭。

- ⚠ 在产品接通电源期间，使用者不能离开。
- 否则会造成火灾。

- ⚠ 发生异常和故障时，请立即停止使用并拔下电源插头。
- 在这种情况下使用本产品可能会导致火灾、触电或受伤。
<异常或故障的例子>
· 经常停止或电源线、电源线插头损坏或褪色。
· 主要部件变形或燃烧。
- 请立即委托本公司授权的维修站进行检查或维修。

- ⚠ 本产品不宜供肢体、感官或精神上有残疾者、或缺乏经验和知识者(包括儿童)使用，必须有监护者从旁监督并对本产品的使用加以指导，且对使用者的安全能承担责任。应照看好儿童，确保他们不玩耍本器具。
- 否则可能导致意外的发生或受伤。

- ⚠ 输入电压必须符合产品底座上标明的额定电压，请将电源插头完全插入插座中。
- 否则可能会造成火灾，触电。

- ⚠ 如果电源软线损坏，为避免危险，必须由制造商或其维修部或类似的专业人员来更换。
- 否则可能导致意外的发生或受伤。

- ⚠ 如果产品发生跌落、有可见的损坏现象或有渗漏现象，则不能使用。
- 请不要自行拆机维修，应送指定的维修店修理。

- ⚠ 请妥善处理本产品的包装袋和插头护套，使其远离婴幼儿。
- 否则有可能导致婴幼儿窒息等意外发生。

- ⚠ 在给水箱注水前必须将器具的电源软线的插头从插座上拔掉。
- 否则会造成火灾、触电或受伤。

注意

- ⊘ 电源线在扭曲的状态下请勿收纳。
- 否则可能导致电源线断线，发生烫伤、触电，或由于短路而导致火灾。

- ⊘ 使用期间，不要用手接触高温部位(底板表面及其附近的高温部)。
- 否则会造成烫伤。

- 当使用蒸汽可以渗透的熨衣板时，不要将手，脚等部位置于熨衣板下方。
- 不要将本产品放在你的手，膝盖，或身体的其他部位。
- 当产品的一部分从熨衣板伸出时，不要使用蒸汽或喷射蒸汽。
- 不要熨烫穿在身上的衣物。

 


- ⊘ 使用期间，不要触碰蒸汽。
- 否则会造成烫伤。



注意

- ⊘ 不要侧倒放置。
- 否则会造成漏水、地板和地毯损坏。

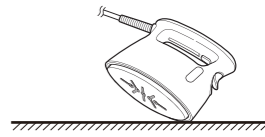

- ⊘ 切勿将针或其他异物插入底板。
- 否则可能会导致火灾、触电或烧伤。

- ⊘ 请勿在水箱中加入香水、醋、淀粉、除垢剂、熨烫辅助剂或其他化学物品。
- 以免沾污衣物。加水时请使用家庭饮用类蒸馏水或纯净水。

- ⊘ 切勿将本产品用于织物以外的物品(如皮革)。
- 否则可能会导致其损坏。

⚠ 注意

- 熨斗必须稳固地放置在底座上，并确保底座放置的表面是平稳的，且在平烫时，熨斗必须在稳定的表面上使用。
- 否则可能会造成产品跌落、人员受伤或烫伤。



- 将插头拔出时必须抓住插头，不能拉电源线或用湿手触及电源线。
- 否则会造成火灾、触电、或受伤。

- 只能使用本产品应有的功能熨烫衣物，请不要熨烫或喷蒸汽到穿在身上的衣物。
- 以免烫伤或受伤。

 
- 将本产品用于高级或者特制衣物时，请先在衣物隐蔽处试用。
- 否则可能会导致其损坏。

- 在加水或倒水、清洁产品或不使用产品的时候必须将电源插头拔掉。
- 否则会造成触电或因电源线绝缘层老化而起火。


使用上的注意

- 根据本体的朝向，会有水箱不供水、不出蒸汽的情况。请确认下图，进行使用。


本体正确朝向

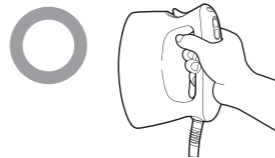

本体错误朝向

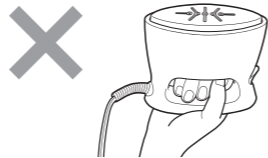 

出蒸汽角度

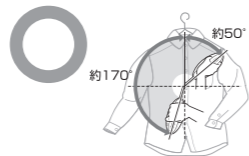 


不出蒸汽角度 (仅NI-GHA045)



- 在熨烫过程中底板不要贴近拉链、按钮等的硬物。
- 否则可能会导致底板刮花。




 - 给水箱加水时，请使用专用水杯加水。
- 否则会导致本体沾到水、水箱中的水溢出。

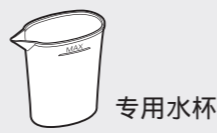

- 在室温10℃以下使用的时，会有从蒸汽孔漏热水的情况。通电指示灯变亮后等待约一分钟可以减少漏热水。

 各部品名称

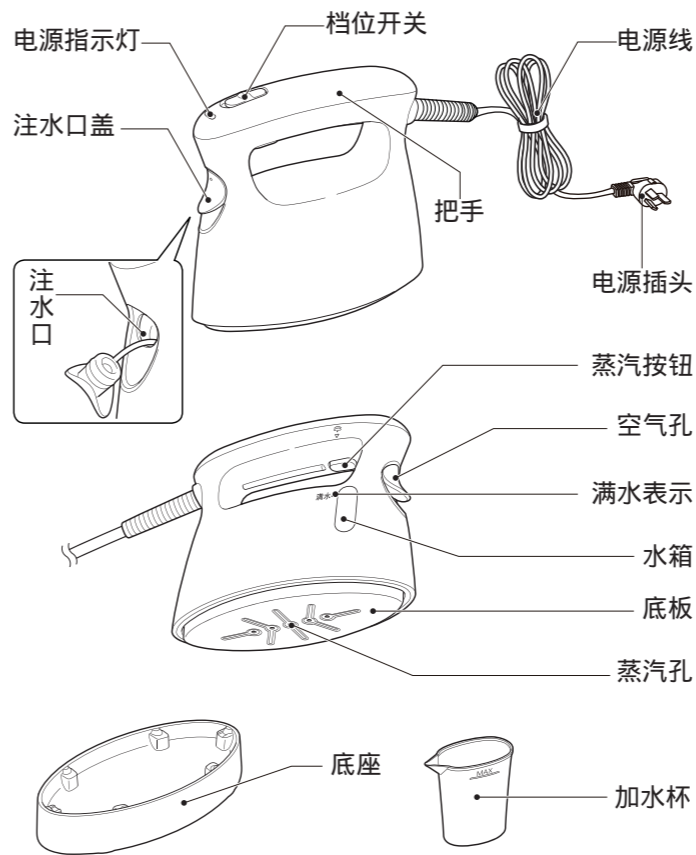

产品的加水

 
将产品从包装箱内取出。

注意：a. 请不要直接使用自来水或矿物质含量较高的“矿泉水”。否则会影响产品的使用寿命。
b. 请使用家庭饮用类蒸馏水或纯净水。

- 将蒸馏水或纯净水装入至加水杯“MAX”位置。



- 取下注水口盖，用加水杯从注水口向产品内加水至“满水”位置。

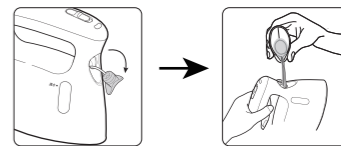

- 关闭注水口盖，并使注水口盖的空气孔在上。

 


- 注意：a. 切勿加水超过“满水”水位线。
 b. 给水箱加水时，请注意水不要溢出。本体上沾附有水珠时，请擦干。
 c. 本体竖立放置的状态下确认满水位置时，请以水箱的窗口边缘线位置为基准进行确认。




产品的使用方法

- 将产品放置在底座上，使其与底座稳固配合。将电源插头插入合适的交流电源插座中，接通电源。

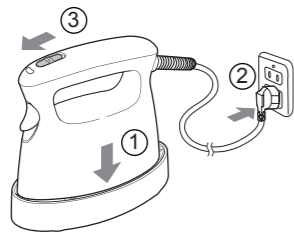

- 将电源开关设置到“开”位置，电源指示灯点亮并开始闪烁。

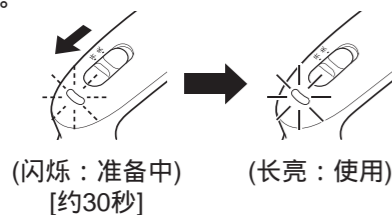 

- 当电源指示灯停止闪烁后，按压蒸汽按钮便可使用蒸汽熨烫功能。



- 使用平烫功能时(详见P10)，如果在电源指示灯停止闪烁后约20秒再使用，除皱效果更好。

注意：

- 根据衣类的材质需要选择将底板贴紧衣物熨烫或稍微离开衣物喷蒸汽进行熨烫。
- 在使用过程中可不按压蒸汽按钮进行干式熨烫。
- 使用蒸汽按钮时，熨斗会发出啪啦啪啦的声音，这是水泵抽入水箱的水的声音。且会有震动，为正常情况。
- 根据室温或室内的亮度，会有看不到蒸汽的情况。
- 使用时注水口朝下，会有水从空气孔流出。
- 水箱的水用完时，请将档位开关设定为“关”，拔出电源插头后加水。
- 当电源指示灯变为长亮，按下蒸汽按钮后可能需要一小段时间才能出蒸汽。


衣物纤维及熨烫方式

衣物纤维	熨烫方式		熨烫效果
	底板紧贴衣物熨烫	底板稍离衣物熨烫	
腈纶 醋酸纤维 尼龙 丝绸	×	○	除皱并增强纺织品的质感。
人造丝 (雪纺) 涤纶	○	○	将底板贴紧衣物快速滑动熨烫，停留时间过长会引起衣物收缩。
羊毛 羊绒	×	○	除皱并软化织物，使其柔软。
棉布	○	○	将底板贴紧衣物滑动熨烫，不能进行笔直熨烫。
亚麻	○	○	在喷出足够的蒸汽的同时，缓慢滑动底板，注意请不要用力按压。

蒸汽挂烫的使用方法

- 把要熨烫的衣物用衣架挂好。
- 当电源指示灯停止闪烁，即可使用蒸汽按钮。
- 在熨烫过程中可同时用手拉直衣物，使衣物烫得更平整。

 - 西装、夹克等厚衣物
轻轻地拉直衣物的一端，让蒸汽完全喷到。
- 棉系列
底板贴住衣物，慢慢来回滑动熨烫。
- 羊毛系列
不要直接接触衣物，底板稍稍离开衣物，将蒸汽喷在衣物上进行熨烫。

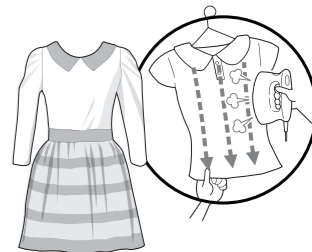

- 衬衫等薄衣物
袖口或衣襟等部位请使用熨衣板进行熨烫。

扣上衣领的最上面的扣子。
 将衣物前身、背身下摆轻轻拉直衣服然后用底板来回滑动熨烫。
 扣上袖口的扣子，轻轻拉直袖边然后用底板来回滑动熨烫。



 
● 连衣裙，短裙类

不要直接接触衣物，底板稍稍离开衣物，将蒸汽喷在衣物上进行熨烫。



● 360° 全方位熨烫 (仅NI-GHA046)

当熨斗平行于挂在衣架上的衣物时，可360°全方位熨烫。

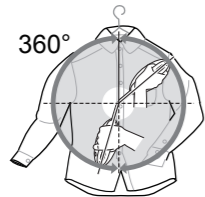

注意：

 
- 使用衣架时，请确保衣架悬挂的位置是平稳的。
- 请注意区分衣物的材质进行使用。
- 把熨斗放置于底座时，会有少量蒸汽喷出的情况，这是正常情况。
(因为熨斗内部残留的水在蒸发。)
- 蒸汽难喷出时，请将本体朝着纵向方向并按住蒸汽按钮。
- 使用熨衣板进行熨烫时，请使用可以使用蒸汽电熨斗的熨衣板。

▶ 蒸汽平烫的使用方法

- 把要熨烫的衣物平放在熨衣板上。
- 当电源指示灯停止闪烁后，即可使用蒸汽按钮开始熨烫。


● 棉布手帕类

用手把褶皱扯平后进行熨烫。

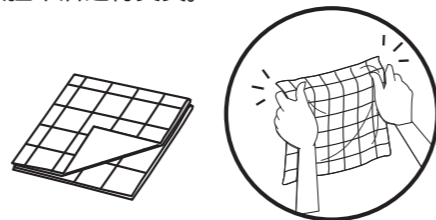

● 衣物折痕类




 
用手整理折痕，铺上熨烫布，沿着折痕缓慢地熨烫。

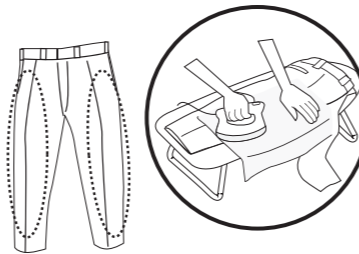

产品的存放

每次使用后：

    - 将电源开关设定为“关”，拔出电源线插头。
- 拧开注水口盖，晃动水箱内剩余的水(或再加入适量的水)清洗水箱内壁，然后将水倒干净。
- 关闭注水口盖，将产品放置于底座上。
- 将产品置于平稳干燥的场所存放且放置的平面是平稳的。

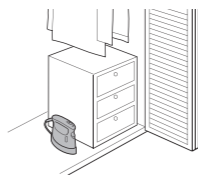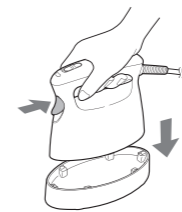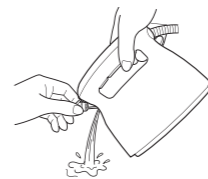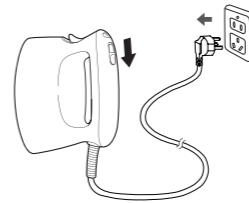


产品的清洁

注意：

- 使用后，请冷却60分以上再进行清洁和保养。
- 切勿使用稀释剂、去污粉或挥发性溶剂等清洁类用品来清洗，它们会损坏产品。

· 清洁本体

 关闭电源后，待熨斗充分冷却。用软布擦拭熨斗表面及底板的部位，出现污渍时，可使用软布沾中性洗涤剂擦拭。

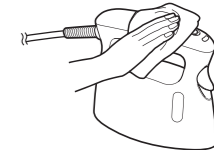

· 清洁底板面

如有胶水等粘在底板面，请用湿布擦拭。



· 清洁蒸汽孔

用竹签将水垢物清理出来，然后用湿布将底板擦拭干净。

常见故障及处理方法

故障现象	可能造成的原因	处理方法
底板不热或 电源指示灯不亮	电源插头没插上。	▶ 插上电源插头。
	产品电路故障或保险丝烧断。	▶ 送指定维修店检修。
	▶ 电源开关设置在“关”。	▶ 电源开关设置在“开”。
	通电指示灯忽亮忽灭。	▶ 在可以使用之前(忽亮忽灭 长亮), 等待约30秒。
不出蒸汽	未按蒸汽按钮。	▶ 牢牢按压蒸汽按钮。
	水箱没水。	▶ 用专用水杯加水至“满水”位置。
	▶ 本体内气泡积聚。	▶ 把本体纵向持握,持续按压蒸汽按钮。
	使用中把电源按钮设置在“关”。	▶ 在可以使用之前(忽亮忽灭 长亮), 等待约30秒。
蒸汽量少	加入了蒸馏水或纯净水以外的水。	▶ 将水箱的水倒出,然后用专用水杯加蒸馏 水或纯净水至“满水”位置。
	▶ 蒸汽孔中垃圾、水垢堵塞。	▶ 送指定维修店检修。
	本体内的温度调节器如果动作的话,在某个时间会有蒸汽量变少的情况。当温度稳定时,蒸汽量恢复,请一直按住蒸汽按钮。此外,根据室温或室内的光亮度,会有看不到蒸汽的情况。	
使用中发出响声	▶ 这是温度调节器工作时的声音。并非异常。	

规格

型 号	NI-GHA046	NI-GHA045
额定电源	220 V ~ 50 Hz	
额定输入功率	950 W	
产品重量(不含底座)	约 0.76 kg	
产品尺寸	熨斗本体	(宽x深x高) 约 15 x 7 x 14 cm
	含底座	(宽x深x高) 约 17 x 9 x 16 cm
插头	单相三极插头	
电源线长度	长约 2.2 m	长约 2.5 m
熨烫面积	约 28 cm ²	
水箱容量	约 50 mL	
温度过升防止装置	温度保险丝	
执行标准	GB4706.1-2005, GB4706.2-2007, GB4343.1-2009, GB17625.1-2012	

本产品仅适合家庭使用。

产品中有害物质的名称及含量

部件名称	有害物质						备注
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	
塑料部件 橡胶部件	○	○	○	○	○	○	
金属部件	×	○	×	○	○	○	
电源线、 内部配线	×	○	○	○	○	○	
电路板组件	×	○	○	○	○	○	
陶瓷部件	○	○	○	○	○	○	

本表格根据SJ/T 11364的规定编制。

○: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。
 ×: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

10 此标志标识产品的环保使用期限为10年，在环保使用期限内，产品中含有的有毒有害物质或元素在正常使用下不会发生外泄或突变，用户使用该产品不会对环境造成严重污染或对其人身、财产造成严重损害。产品过了环保使用期要废弃时，必须按国家相关法律法规进行合理处理。

Safety Precautions

To reduce the risk of injury, loss of life, electric shock, fire, malfunction, and damage to equipment or property, always observe the following safety precautions.

Explanation of symbols

The following symbols are used to classify and describe the level of hazard, injury, and property damage caused when the denotation is disregarded and improper use is performed.

WARNING Denotes a potential hazard that could result in serious injury or death.

CAUTION Denotes a hazard that could result in minor injury or damage your belongings.

The following symbols are used to classify and describe the type of instructions to be observed.

This symbol is used to alert users to a specific operating procedure that must not be performed.

This symbol is used to alert users to a specific operating procedure that must be followed in order to operate the unit safely.

WARNING

Never use the product if the power cord or power plug is damaged or if the power plug fits loosely in a household outlet.
 - Doing so may cause electric shock, or fire due to a short circuit.

Do not connect or disconnect the power plug to a household outlet with a wet hand.
 - Doing so may cause electric shock or injury.

Do not damage, modify, or forcibly bend, pull, or twist the power cord. Also, do not place anything heavy on or pinch the power code.
 - Doing so may cause electric shock or fire due to a short circuit.

Do not wrap the power cord around the product when storing.
 - Doing so may cause breakage to the wire of the cord, and may cause electric shock or fire due to a short circuit.

Do not use with the power cord bundled.
 - Doing so may cause fire or electric shock.

Never modify, disassemble, or repair the appliance by yourself.
 - Doing so may cause ignition or injury due to abnormal operation. Contact an authorized service agent for repair.

Do not immerse the main body in water or other liquids. Do not supply water to the unit directly from the faucet.
 - Doing so may cause electric shock or fire due to a short circuit.

Do not use the main body with a wet hand.
 - Doing so may cause electric shock or fire due to a short circuit.

Do not use in proximity of flammable materials (such as benzene).
 - Doing so may cause an explosion or fire.

⚠ WARNING

- ⊘ **Do not use in a way exceeding the rating of the household outlet or the wiring.**
 - Exceeding the rating by connecting too many plugs to one household outlet may cause fire due to overheating.
- ⚠ **Regularly clean the power plug to prevent dust from accumulating.**
 - Failure to do so may cause fire due to insulation failure caused by humidity. Disconnect the plug and wipe with a dry cloth.
- ⚠ **The iron must not be left unattended while it is connected to the supply mains.**
 - Doing so may cause fire.
- ⚠ **Immediately stop using and remove the power plug if there is an abnormality or malfunction.**
 - Using it in such conditions may cause fire, electric shock, or injury.
 - <Abnormality or malfunction cases>
 - The main body stops occasionally, or the power cord or the power plug is abnormally hot, or discoloration.
 - The main body is deformed or smells of burning.
 - Immediately request inspection or repair at an authorised service agent.


- ⚠ **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.**
 - Failure to do so may cause an accident or injury.
- ⚠ **Always ensure the appliance is operated on an electric power source matched to the rated voltage indicated on the product. Fully insert the power plug.**
 - Failure to do so may cause fire, electric shock.
- ⚠ **If the power cord is damaged, it must be replaced by the manufacturer, its service center, or similarly qualified persons in order to avoid a hazard.**
 - Failure to do so may cause an accident or injury.
- ⚠ **The iron is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.**
 - Do not repair by yourself; it should be repaired by the designated service center.
- ⚠ **Properly dispose the package bag and plug cap of the appliance, keep it away from infants.**
 - Failure to do so may cause suffocation of infants from happening.
- ⚠ **The plug must be removed from the socket outlet before the water reservoir is filled with water.**
 - Failure to do so may cause fire, electric shock or injury.

⚠ CAUTION

- ⊘ **Do not store the cord in a twisted state.**
 - Doing so may cause breakage to the wire of the cord, and may cause electric shock or fire due to a short circuit.
- ⊘ **Don't touch the hot surface (such as soleplate, the hot surface around it).**
 - Doing so may cause scalds.
 - When using an ironing board which steam can penetrate, do not place your hand, leg, etc. under the ironing board.
 - Do not place the product on your hand, knee, or other part of the body,
 - Do not use steam or "power shot "when the product is partially sticking out from the ironing board.
 - Do not iron clothes while wearing them.
- ⊘ **Do not touch the steam during use.**
 - Doing so may cause scalds.

**⚠ CAUTION**

 - ⊘ **Do not place the product sidelong.**
 - Doing so may cause water leakage, and then damage floors and carpets.
- ⊘ **Do not insert pins or other foreign objects into the soleplate.**
 - Doing so may cause fire, electric shock, or burn.
- ⊘ **Do not add perfume, vinegar, starch, descaling agents, ironing aids or other chemicals in the water tank.**
 - They can stain fabrics; instead, use the family drinking distilled water or pure water.
- ⊘ **Do not use the appliance with the exception of fabric (e.g. leather).**
 - Doing so may cause damage it.

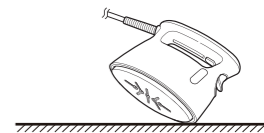

CAUTION

- ! The iron must be firmly rested on the base, and the Base must be placed on a flat and stable floor. When this iron is used as a horizontal steam iron, the iron must be used on a stable surface.
 - Otherwise, the iron may fall, causing personal injury or scald.



- ! Unplug the power plug to disconnect from a household outlet by grasping the power plug.
 - Failure to do so may cause fire, electric shock or injury.
- ! Use the product only for its intended purpose, for ironing fabrics. To protect against burns or injury to persons.
 - Failure to do so may cause injury.
- ! Test on an inconspicuous area when using with high-end or specially processed items.
 - Failure to do so may cause damage fabric.

- ! Always unplug the power plug during filling, emptying, cleaning and not in use.
 - Failure to do so may cause electric shock or fire due to electrical leakage resulting from insulation deterioration.

 
USAGE CAUTION

- According toward the body, there will be no water or no steam. Please confirm the figure as below for use..

Body toward is right.



Angle of steam comes out

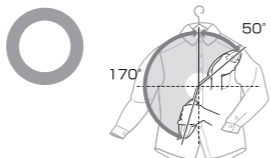

Body toward is wrong.



 
Angle of no steam (NI-GHA045 only)



- Do not touch the hard objects (e.g zipper, button).
 - Otherwise, the soleplate may be scratched.




- When filling the tank, please use the special cup.
 - Doing so may cause the body touches the water and overflow the water tank.

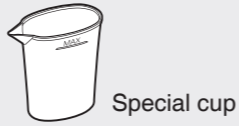

- At room temperature below 10 to use, there will be hot water leak from the soleplate vents. Waiting for 1 minute after the power indicator light lights on to reduce the leakage of hot water.

 Parts Identification

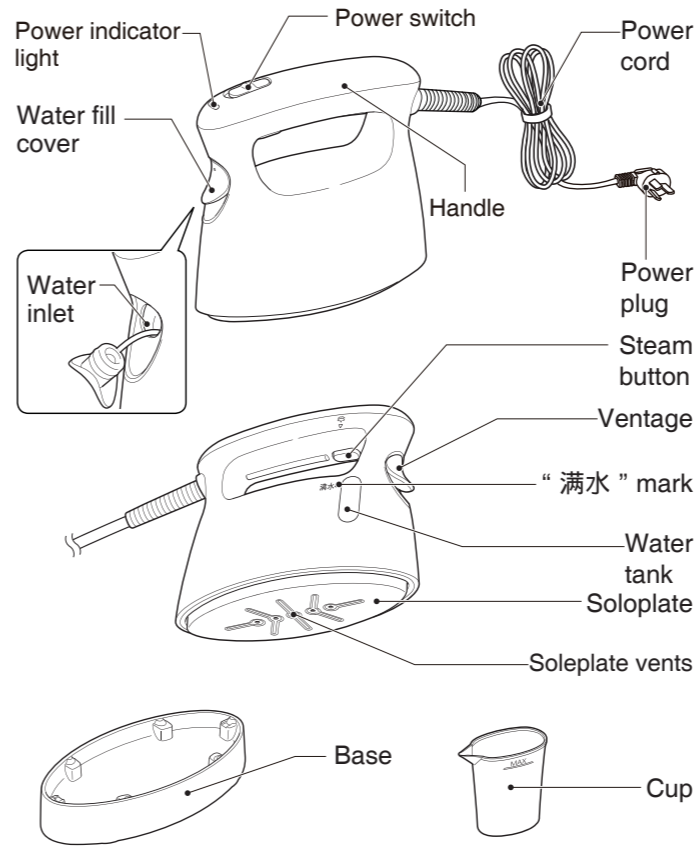

How to fill with water

 
Take the product out of the package.

Note: a. Do not use tap water or high mineral content of "mineral water." Otherwise, it will impact the service life of product.
b. Please use the family drinking distilled water or pure water.


1. Fill the cup with distilled water or purified water to the "MAX" mark.



2. Remove the water fill cover, and add water from the water inlet to the tank ("满水" mark).

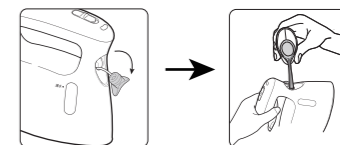

 
3. Close the water fill cover, and keep the ventage upward.

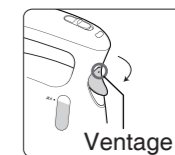

Note : a. Do not overfill the “满水”mark.


b. Do not slosh water on the main body when adding water into the water tank. Wipe the main body if there is any water drop on it.

 c. Check whether the water reaches the “满水” mark when setting the main body upright, with the edge line of the tank window as base line.

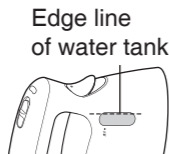


How to use

 1. Attach the product to the base until they are interlocked. Plug the power cord into the electrical outlet.

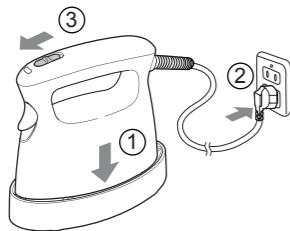

 2. Turn the power switch to “开” position, at the same time, the power indicator light up.

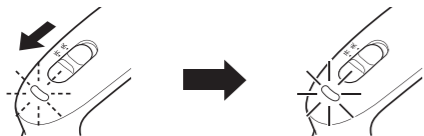

(Indicator flashing: in preparation) [about 30 seconds] (Indicator on: ready)

3. When the power indicator light stops flashing, press down the steam button to activate the steam ironing function.



- When use it as a horizontal steam iron(refer to page 22), it's better effective in wrinkle removal after the power indicator light stops flashing around 20 seconds.

Note :

- a. According to different fabric, press the soleplate against the garment for a while, then keep the soleplate away from the garment for a while, so that the Iron can spray steam.
- b. The Iron can be used as dry iron without the steam button pressed.
- c. When the steam button is pressed, the water pump will pump water into the tank. There will be a low noise and vibration, which are normal.
- d. The steam will be invisible occasionally, depending on the ambient temperature and indoor brightness.
- e. The water will flow from the ventage when the water inlet is facing down.
- f. If the water in tank is used out during ironing, turn off the power, and add water.
- g. The power indicator light stops flashing, the steam will come out after a short time when the steam button pressed down.

FABRIC AND IRONING RECOMMENDATIONS

Fabric	Ironing recommendations		Ironing results
	Press the soleplate against the garment	Keep the soleplate slightly away from the garment	
Acrylic Acetate Nylon Silk	×	○	Remove wrinkle and strengthen the quality of textile.
Rayon (Chiffon) Polyester	○	○	Press the soleplate against the garment and move the soleplate quickly. Ironing one place for a long time will cause shrink.
Wool Cashmere	×	○	Remove wrinkle and soften fabric.
Cotton	○	○	Press the soleplate against the garment for ironing slide. Vertical ironing is not allowed.
Linen	○	○	Move the soleplate slowly when enough steam is coming out, not same as pressed finishing.

HOW TO USE AS A VERTICAL STEAM IRON

1. Hang your garment on a hanger.
2. When the power indicator light stops flashing, press down the steam button.
3. To get better results, pull the garment tight with one hand while ironing with the other hand.

● Thick clothes like suit, jacket etc.

Gently pull one edge of the garment, and spray the garment with steam.

● Cotton series

Press the soleplate against the garment, slowly move the Iron back and forth.

● Wool series

The soleplate should not touch the garment. Spray the garment with steam from a distance.

 
● Thin clothes like shirt

Please iron the parts of shirts like cuffs and lappet on the ironing board.

Button the top button of collar.

Gently pull the front and back sides of the garment, and move the soleplate back and forth.

Button the cuff button, gently pull the sleeve edge, and move the soleplate back and forth.

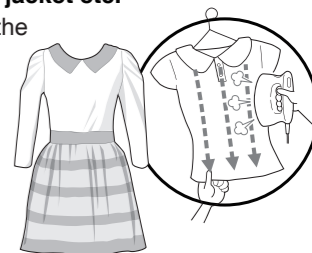


● Dresses, Skirts

The soleplate should not touch the garment. Spray the garment with steam from a distance.



● 360° all-round ironing (NI-GHA046 only)

 When the iron is parallel to clothes hung on the hanger, 360° all-round ironing is available.

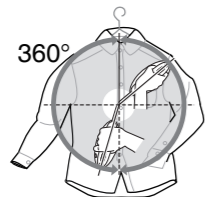

Note :

 
 
- When use the hanger, the hanger must be placed on a flat and stable floor.
- Please note the distinction of clothing materials for use.
- When the iron is placed on the base, there will be a small amount of steam come out, this is normal. (Because residual water in the iron evaporates.)
- If a steam is hard to eject, set the iron towards the longitudinal direction and hold press the steam button.
- During ironing on an ironing board, please use a steam ironing board.

▶ HOW TO USE AS A HORIZONTAL STEAM IRON

- Keep your garment flat on the ironing board.
- When the power indicator light stops flashing, press down the steam button.


● Cotton fabric and handkerchief

Pull the fabric or handkerchief by hand, and start ironing.

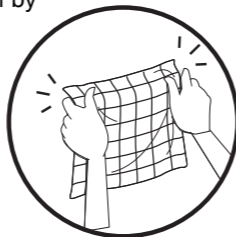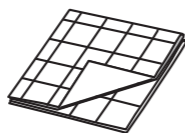

● Folded mark of garment

 
Smooth the folded marks by hand, spread a press sheet on the garment, and iron the marks slowly.

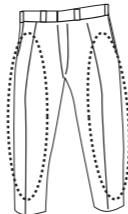

How to store your product

After each use:

 
- Turn the power switch to “关” position and unplug the power cord.

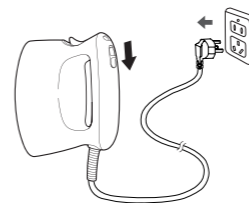

- Open the water fill cover, shake the Water tank to clean the inner wall of the tank with the remaining water (add water if the water is insufficient), and then pour the water out after cleaning.




 - Close the water fill cover, and place the Iron on the base.

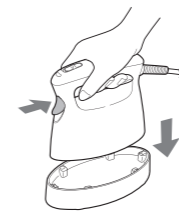

- There maybe some remained water in the water tank, it is OK.

 - Store the iron in a stable surface. In this case a closet where product is stored, store the iron cooling.

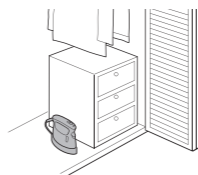

How to clean the product

 
Note :

- After ironing, cool the garment for more than 60 minutes, and then do cleaning and maintaining.
- Never use such cleaning products as the thinner, cleanser and volatile solvent to wash the Iron head or the power base; otherwise damages may be caused.

• Clean the main body

Unplug the power plug, wait until the Iron have fully cooled down.

Wipe the Iron and soleplate with a soft cloth. For stains, use a soft cloth dipped with neutral detergent to clean.

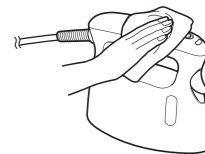

• Clean the soleplate

If glue stick to the soleplate surface, please use a wet cloth.



• Clean the soleplate vents

Clean out the scale from soleplate with a bamboo stick, then wipe the soleplate with wet cloth.

Trouble-shooting

Problem	Causes	Solution
No heating No light up	The power plug has not been plugged in.	▶ Insert the power plug.
	The product circuit fails or the fuse is broken down.	▶ Have your product repaired by the specified service agent.
	The power switch is “关”.	▶ The power switch is “开”.
	The power indicator light is flashing and on alternately.	▶ Before using (the indicator is flashing and on alternately the indicator is on), wait for about 30 seconds.
No steam	The steam button is not pressed down.	▶ Press down the steam button.
	There is no water in the water tank.	▶ Use the cup to add water to the tank (“满水”mark).
	Bubbles accumulate in the main body.	▶ Hold the main body and keep it vertical. Keep the steam button pressed down.
	The power button is turned off during ironing.	▶ Before using (the indicator is flashing and on alternately the indicator is on), wait for about 30 seconds.

Trouble-shooting

Problem	Causes	Solution
The steam is insufficient	Other types of water except distilled water or purified water is added in the tank.	▶ Pour the remaining water in the tank out. And use the cup to add distilled water or purified water to the tank (“满水”mark).
	The steam hole is blocked up with dirt or scale.	▶ Have your product repaired by the specified service agent.
	If the temperature controller in the main body is activated, the steam volume may decrease for a while. The steam volume will get back to normal once the temperature is stable. Please keep the Steam button pressed down. The steam will be invisible occasionally, depending on the ambient temperature and indoor brightness.	
There is a noise during operation		▶ This is the noise of temperature controller during operation, which is normal.

Specification

Model	NI-GHA046	NI-GHA045
Rated voltage	220 V ~ 50 Hz	
Power	950 W	
Weight (except base)	Approx. 0.76 kg	
Dimensions	Iron body	(WxDxH) Approx. 15 x 7 x 14 cm
	With base	(WxDxH) Approx. 17 x 9 x 16 cm
Plug	Single-phase three core plug	
Cord length	Approx. 2.2 m	Approx. 2.5 m
Iron surface	Approx. 28 cm ²	
Water tank capacity	Approx. 50 mL	
Thermal cut out	Temperature fuse	
Execution Standard	GB4706.1-2005, GB4706.2-2007, GB4343.1-2009, GB17625.1-2012	

This product is intended for household use only.

Panasonic

保修证

保修条款

有关保修期内Panasonic商品的保修（无修修理），从购入之日起开始实施。

1. 保修期内的商品只可在Panasonic认定维修店进行保修；保修时，请出示本保修证及购机发票。
以下两点需特别注意：

- a. 本保修证遗失后不再补办，请妥善保管；
- b. 本保修证仅限于中华人民共和国国内有效（香港、澳门、台湾三地区暂不可使用）。

2. 自购入之日起在以下期间内，在正常使用中发生故障的情况下进行保修。

整机 二年内无偿保修

3. 属下列情况之一者，即使在保修期内，也不能以保修对待，但是可以实行收费修理：

- a. 未按商品使用说明书要求使用、维护、保管而造成损坏的；
- b. 因不正确操作、电源不正常、破损（如：摔落等）而造成损坏的；
- c. 不经Panasonic认定维修店维修人员拆卸造成损坏的；
- d. 不能出示本保修证及有效购机发票的；
- e. 保修证上记录的信息与商品实物标识不符或者涂改的；
- f. 因不可抗力因素（如雷电、地震、火灾、水灾等）造成损坏的。

4. 本保修条款只适用于消费者个人为生活消费需要而购买使用的场合，不适用于经营性等使用。

【商品信息】

商品名称： 蒸汽挂烫电熨斗 产地： 中国
商品型号： NI-GHA046/GHA045 制造编号： _____

【保修回执】 以下回执是保修的重要依据，请勿自行撕下

商品型号： NI-GHA046/GHA045

制造编号：

保修结算4

商品型号： NI-GHA046/GHA045

制造编号：

保修结算3

商品型号： NI-GHA046/GHA045

制造编号：

保修结算2

商品型号： NI-GHA046/GHA045

制造编号：

保修结算1

商品型号： NI-GHA046/GHA045

制造编号：

促销员留存

【销售记录】 此处所教信息仅于商品保修时作核对之用，
本公司不对该信息进行收集记录。

销售店
(盖章)

销售日期: 发票号码:
顾客姓名: 联系电话:
顾客地址: 邮 编:
销售店名称: 销售店电话:
销售店地址: 邮 编:

【维修记录】

维修店名称: 联系电话: 送修日:
维修店地址: 邮 编:
故障内容: 故障原因:
维修内容:
维修员签字: 交验日期:

维修店名称: 联系电话: 送修日:
维修店地址: 邮 编:
故障内容: 故障原因:
维修内容:
维修员签字: 交验日期:

维修店名称: 联系电话: 送修日:
维修店地址: 邮 编:
故障内容: 故障原因:
维修内容:
维修员签字: 交验日期:

本保修证因含有消费者个人信息，请妥善保管。
Panasonic客户咨询服务中心：4008-811-315。
Panasonic官方网站：http://panasonic.cn

松下家电(中国)有限公司

