 


松下·万宝(广州)电熨斗有限公司
Panasonic Wanbao Appliances Electric Iron (Guangzhou) Co., Ltd.

地址: 广州市番禺区钟村万宝基地万宝南街2号
Address: No.2, South Wanbao Street, Wanbao Base,
Zhongcun, Panyu District, Guangzhou City
电话(Tel): 020-84770888
邮编(Post Code): 511495
原产地: 中国

松下电器(中国)有限公司
客户咨询服务中心: 400-810-0781
Panasonic Customer Services Center: 400-810-0781

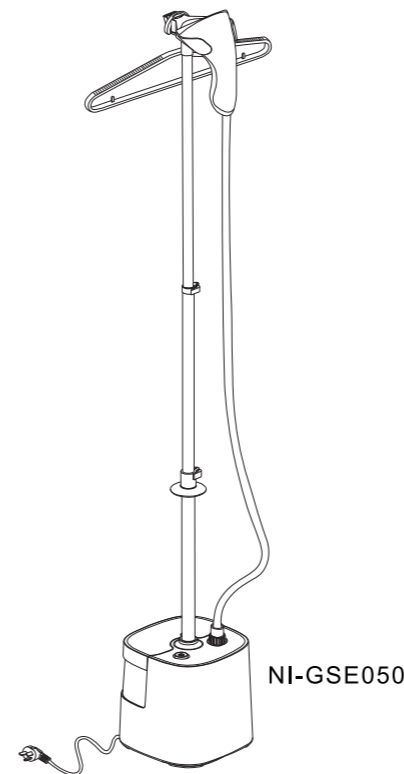

中文	2-13
English	14-23

感谢您购买本公司的产品。
在使用本产品前, 请仔细阅读本说明书并妥善保管, 以备将来参考。

Thank you for buying a Panasonic product.

Before operating this unit, please read these instructions completely and save them for future use.

重要安全警示-----	03-06
各部品名称-----	07
产品的组装-----	08
水箱的加水-----	08
挂烫机的使用方法-----	09-10
使用后-----	10
清洁保养-----	11
清洁水垢-----	11
规格-----	11
常见故障及处理方法-----	12
产品中有害物质的名称及含量-----	13


SAFTY PRECAUTIONS-----	14-17
PARTS IDENTIFICATION-----	18
HOW TO ASSEMBLE-----	19
HOW TO FILL WATER-----	19
USING THE GARMENT STEAMER-----	20-21
AFTER USE-----	21
CLEANING-----	22
SCALES CLEANING-----	22
SPECIFICATION-----	22
TROUBLE-SHOOTING GUIDE-----	23


重要安全警示

为减少故障、触电、受伤、火灾、死亡以及设备或财产损坏的危险，请务必遵守以下安全注意事项。


标志说明


以下标志用于对因无视标志说明和使用不当而导致的危险、伤害和财产损失的程度进行分类和描述。

 **警告** 如果您没有遵照此指示操作，您可能会受到严重的伤害甚至死亡。


 **注意** 您必须注意，否则潜在的危险可能使您受到轻度的伤害或损坏您的物品。


以下标志用于对需要遵循的说明的种类进行分类和描述。


 此标志用于提醒用户注意禁止采取的操作步骤。


 此标志用于提醒用户注意为了安全操作本产品而必须遵循的操作步骤。


警告


 如果电源插头损坏或插入家用电源插座的电源插头松动时，请勿使用。
-否则可能会导致触电或因短路而引起火灾。

 切勿在手湿的情况下将电源插头连接到家用电源插座或从家用电源插座中拔出。
-否则可能会导致触电或受伤。


 不要损坏或改造、或用力弯曲、拉扯、扭曲电源线，也不要放置任何重物在电源线上或挤压到电源线。
-否则可能会导致触电或短路引起火灾。


 请勿在存放时将电源线缠绕在本体上。
-否则可能导致电源线断线，发生触电，或由于短路而导致火灾。

 请勿在捆着电源线的状态下使用。
-否则可能导致触电或火灾。

 请勿改装、拆卸或修理本产品。
-否则可能会因为异常操作而导致火灾或伤害，请务必委托本公司指定的维修店修理。

 请不要把产品浸入水中或其他液体中。
-以免触电。

 不要在手湿的时候使用本产品。
-否则可能会导致触电或短路引起火灾。

 不要让产品靠近易燃物品(如汽油)。
-否则可能会引起爆炸或火灾。

警告

❗ **定期清洁电源插头，以防止灰尘堆积。**
-否则潮湿造成的绝缘失效可能会引起火灾，请拔下电源插头，并用干布擦拭。

❗ **在产品接通电源期间，使用者不能离开。**
-否则会造成火灾。

❗ **发生异常和故障时，请立即停止使用并拔下电源插头。**
-在这种情况下使用本产品可能会导致火灾、触电或受伤。
<异常或故障的例子>
· 经常停止或电源线、电源插头损坏或褪色。
· 主要部件变形或燃烧。
-请立即委托本公司授权的维修站进行检查或维修。

❗ **本产品不宜供肢体、感官或精神上有残疾者、或缺乏经验和知识者(包括儿童)使用，必须有监护者从旁监督并对本产品的使用加以指导，且对使用者的安全能承担责任。应照看好儿童，确保他们不玩耍本器具。**
-否则可能导致意外的发生或受伤。

❗ **输入电压必须符合产品底座上标明的额定电压，请将电源插头完全插入插座中。**
-否则可能会造成火灾，触电。

❗ **蒸汽喷头必须稳固地放在放置架上，并确保底座放置的位置是平稳的。**
-否则会造成喷嘴刮伤，蒸汽喷头掉落会造成身体受伤或烫伤。

❗ **请单独使用插座，不要使用电源接线板。**
-否则会造成触电或火灾。

❗ **如果电源线损坏，为避免危险，必须由制造商或其维修部或类似的专业人员来更换。**
-否则可能导致意外的发生或受伤。

❗ **本产品只能使用带接地线的插座。**
-否则可能会引起火灾或触电。

❗ **如果产品或水箱等部品发生跌落、有可见的损坏现象或有渗漏现象，则不能使用。**
-请不要自行拆机维修，应送指定的维修店修理。

❗ **请妥善处理本产品的包装袋，使其远离婴幼儿。**
-否则有可能导致婴幼儿窒息等意外发生。

❗ **在给水箱注水前必须将器具的电源插头从插座上拔掉。**
-否则会造成火灾、触电或受伤。

 
注意

⊘ **电源线在扭曲的状态下请勿收纳。**
-否则可能导致电源线断线，发生烫伤、触电，或由于短路而导致火灾。


⊘ **蒸汽喷头不能朝下使用。**
-否则会因热水滴出导致烫伤。

⊘ **使用期间，不要用手接触高温部位(喷嘴表面、放置架、蒸汽输送管及其附近的高温部)。**
-否则会造成烫伤。


⊘ **使用期间，不要触碰蒸汽。**
-否则会造成烫伤。

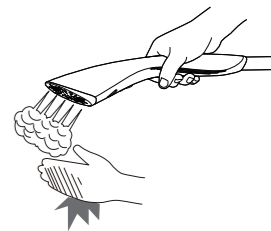


⊘ **不要侧倒放置底座。**
-否则会造成漏水、地板和地毯损坏。

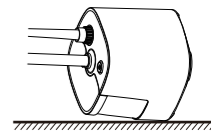 

 ⊘ **不要把蒸汽喷头放在底座或地板上。**
-否则会造成产品、地板和地毯损坏。

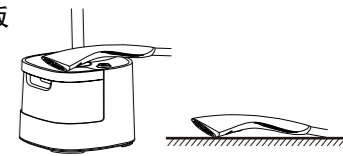

 ⊘ **请勿倒置或倾斜放置蒸汽喷头，请按指示正确放置蒸汽喷头。**
-否则可能会造成产品跌落、人员受伤或烫伤。

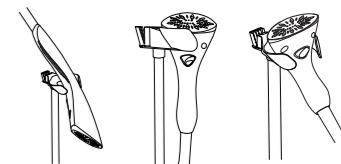


⚠ 注意


- ⊘ 不要在蒸汽输送管或电源线缠绕的状态下使用本产品。
-否则可能会造成蒸汽输送管损坏, 触电和火灾。
- ⊘ 切勿将针插入喷嘴。
-否则可能会导致火灾、触电或烧伤。
- ⊘ 请勿在水箱中加入香水、醋、淀粉、除垢剂、熨烫辅助剂或其他化学物品。
-以免沾污衣物。加水时请使用常温的水。
- ⊘ 可能会有喷嘴突然喷出蒸汽的情况, 请不要将喷嘴面近距离地对向自己或他人。
-否则有可能造成烫伤。
- ⊘ 不要拉着蒸汽输送管来移动底座。
-否则会损坏输水管电线、触电、火灾。
- ⊘ 搬动产品时, 请不要通过衣架挂钩来提起整个产品。
-否则可能导致产品跌落、受伤。
- ⊘ 切勿将本产品用于织物以外的物品(如皮革)。
-否则可能会导致其损坏。
- ⊘ 请等待产品完全冷却后再移动底座。
-否则有可能造成烫伤。
- ⊘ 请勿在蒸汽输送管被压扁、堵塞的情况下使用。
-否则会因热水从底座溢出导致地板和地毯损坏或造成烫伤。

- ⊘ 蒸汽输送管未正确安装到底座上时请勿使用, 在使用过程中请勿拔出蒸汽输送管。
-否则可能会造成烫伤。
- ⚠ 将电源插头拔出时必须抓住电源插头, 不能拉电源线或用湿手触及电源线。
-否则会造成火灾、触电、或受伤。
- ⚠ 只能使用本产品应有的功能熨烫衣物, 请不要熨烫或喷蒸汽到穿在身上的衣物。
-以免烫伤或受伤。
- ⚠ 使用产品时, 请注意防止由于蒸汽飞溅所产生的危险。
-否则有可能导致烫伤。
- ⚠ 将本产品用于高级或者特制衣物时, 请先在衣物隐蔽处试用。
-否则可能会导致其损坏。
- ⚠ 在加水或倒水、清洁产品或不使用产品的时候必须将电源插头拔掉。
-否则会造成火灾、触电或受伤。
- ⚠ 将蒸汽喷头放置在放置架时, 请将伸缩杆拉伸至最长。
-否则蒸汽喷头会因掉落而造成产品损坏或受伤。
- ⚠ 在取出水箱时, 请确保电源开关处于断开状态, 且请不要触碰底座的残留水。
-否则有可能造成烫伤。

 
各部品名称

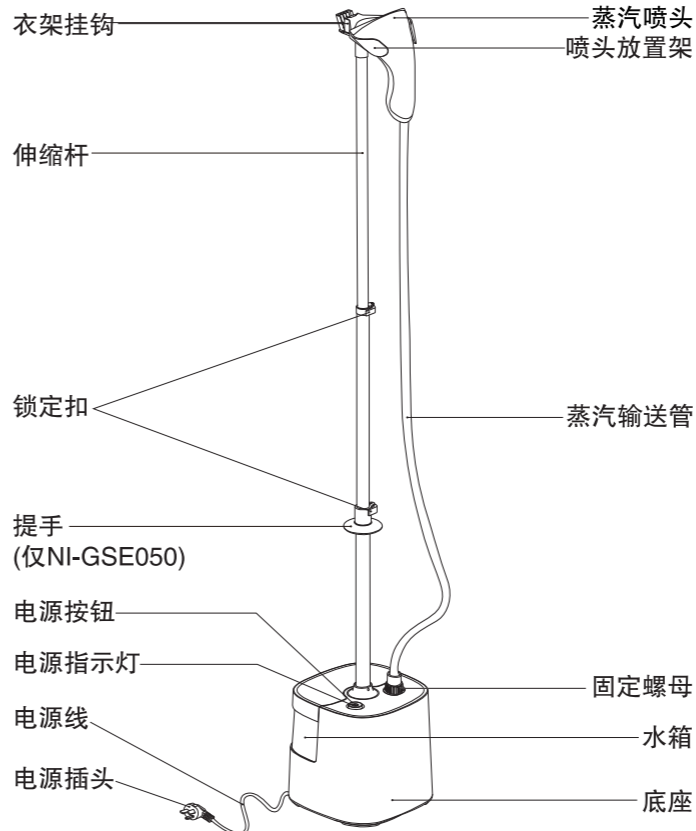


蒸汽喷头

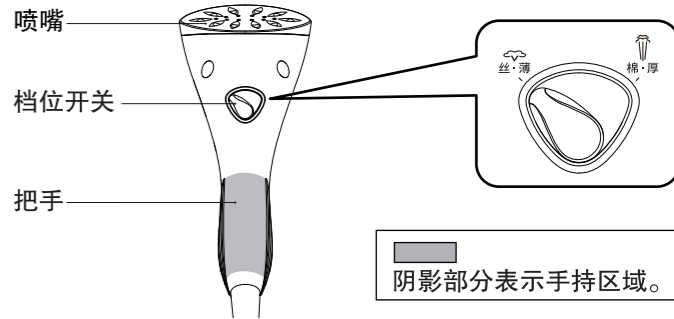 

水箱

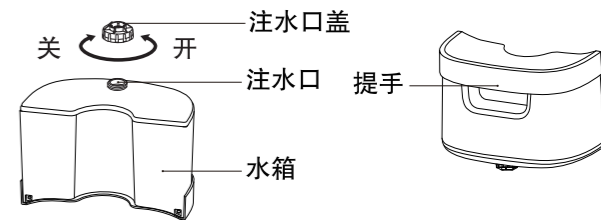 

底座

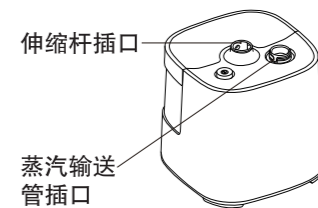 

配件



产品的组装

组装产品时，请在平坦稳固的地方进行。

 
- 按正确的安装方向将伸缩杆插进底座上的接口内，直到听到“咔”的声音。
- 在伸缩杆(小头)安装喷头放置架，安装时喷头放置架的小孔对准伸缩杆上的孔后把喷头放置架用力压入伸缩杆，确保弹子锁扣卡入放置架的小孔。
 - 松开伸缩杆上的锁定扣，将伸缩杆向上拉到最大高度，再将锁定扣压紧。
- 将蒸汽输送管接口插进底座上的接口内，然后顺时针旋紧固定螺母，直到听到“咔”的声音，
- 将蒸汽喷头及衣架(仅GSE050)挂放在伸缩杆的放置架上。




水箱的加水

在给水箱注水前必须将器具的电源插头从插座上拔掉。

- 在底座中间位置轻轻提起水箱尾部，取出水箱。把水箱反过来拿稳，使其底部向上。
- 拧开水箱底部的注水口盖。
 - 把水箱稳固放在水龙头下方，根据需要加入适量的水。
 - 拧紧注水口盖。

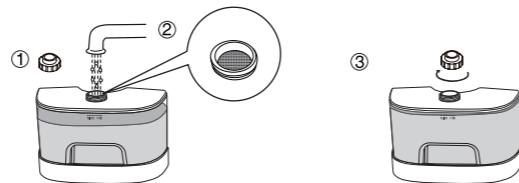

- 将水箱安装在底座上，要注意水箱与底座稳固配合。

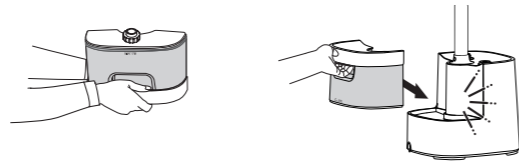 


注意：

- 水面触碰注水口下部时的水箱容量约2 L，请根据需要加入适量的水。
- 请加入自来水，如果您所居住的区域水质非常硬，水垢在产品内积聚的速度会非常快，建议使用蒸馏水或纯净水等。
- 加水时，注水口及水箱周围的凹槽内可能会出现积水，这并非故障。请在安装水箱前妥善清除。

挂烫机的使用方法

- 将需要熨烫的衣物用衣架挂在衣架挂钩上。将电源插头插入合适的交流电源插座中。

 
- 按下电源按钮，电源指示灯点亮。

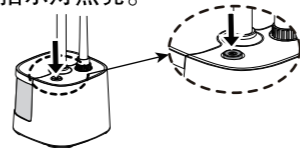

- 加热约1分钟后即可使用。然后根据您的需要设定“丝·薄”/“棉·厚”的蒸汽档位。



 在抓握蒸汽喷头时，请握住把手上有纹的部位。

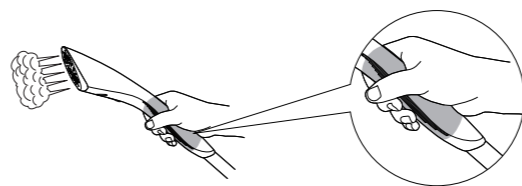

阴影部分表示手持区域。

- 熨烫衣物。建议整理或更换衣物时，将蒸汽喷头挂放在喷头放置架上。
- 使用完毕后请切断电源，拔出电源插头。

注意：

- 如果蒸汽输送管松动时会很难出蒸汽，蒸汽输送管会发出异常响声。
- 当水箱的水位线低于“最少 MIN”时请加水。
- 使用过程中请勿将水箱或者蒸汽输送管从底座中取出。
- 关闭电源开关即可关闭蒸汽。
- 可能有水从喷嘴滴到衣物上，这并非故障。
- 从底座上取出水箱时，请关闭电源按钮，拔出电源插头。

衣物织物及熨烫方式


衣物纤维	档位开关
腈纶、醋酸纤维 尼龙、丝绸 涤纶、人造丝 雪纺	“丝·薄”档： 适用于薄织物或软织物。
羊毛 棉布、亚麻	“棉·厚”档： 适用于的厚布料、有顽强皱纹的织物。

注意：

请勿使用于皮制衣物。
将本产品用于高级品、特殊材料、耐热性弱的纤维时，请先在衣物隐蔽处试用。
(天鹅绒、毛织品、山羊绒、腈纶、丝绸等)

更好的使用

 在熨烫过程中可同时用手拉直衣物，使衣物熨烫得更平整。

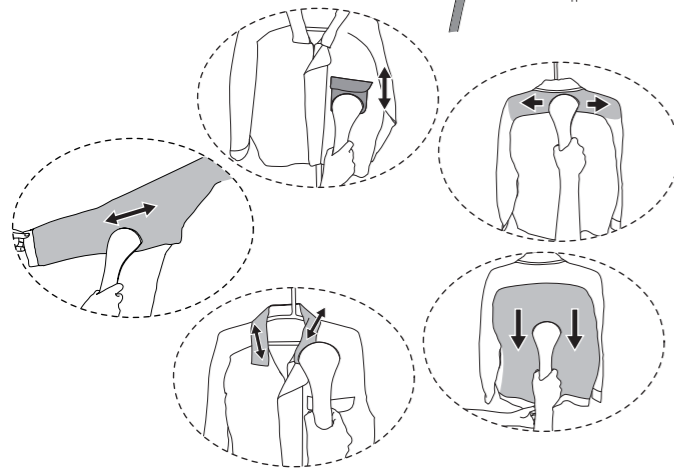

注意：

- 衣架挂钩的最大荷重为2 kg。
- 在熨烫时请勿用力拉扯衣物，以免产品侧翻。
- 请勿触碰蒸汽，以免烫伤。

使用后

 
1. 水箱的排水、清洁及维护

- 关闭电源按钮，拔出电源插头。
- 约1小时后，从底座上取出水箱，拧开注水口盖，晃动水箱内剩余的水(或再加入适量的水)清洗水箱内壁，然后将水倒干净。



2. 存放

- 把蒸汽喷头正确放在放置架内。
- 确认档位开关设置在“丝·薄”位置。
- 请握住伸缩杆移动产品，并将产品置于安全处保管。
- 请在蒸汽输送管伸直的状态下收纳。

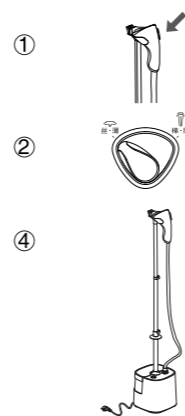

注意：

 
蒸汽输送管会随着伸缩杆的收回而弯曲，并妨碍搬动，故如需要收回伸缩杆时，请先将产品置于安全处，并按图示收纳。



清洁保养

蒸汽喷头、底座及蒸汽输送管的清洁保养

- 关闭电源后，待蒸汽喷头、放置架和底座充分冷却。
- 用软布擦拭蒸汽喷头的喷嘴和底座表面等部位，出现较严重的污渍时，可用软布沾中性洗涤剂擦拭。
- 取下蒸汽输送管，清理蒸汽管及其与底座接口处的污渍。

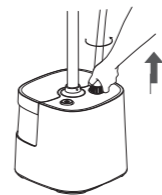

清洁水垢

为了保持最佳的蒸汽熨烫性能，请定期去除产品内部的水垢和杂质。

因此，建议您至少每个月进行一次除垢。

- 关闭电源后，待蒸汽喷头、放置架和底座充分冷却。
- 将伸缩杆、蒸汽输送管、水箱从本体取出。
- 如图，将本体内的水从蒸汽管插口倒出。
- 将本体放置在水平的地方，然后将装有水的水箱安装在底座上，等待约10秒后取出水箱。
- 如图，将本体的水从蒸汽管插口倒出。

蒸汽输送管插口



规格

型号	NI-GSE050	NI-GSE040/GSE036/GSE035
额定电源	220 V ~ 50 Hz	
额定输入功率	1800 W	1600 W
产品重量	约 3.2 kg	
蒸汽档位	二档蒸汽	
产品尺寸(组装)	(宽x深x高) 约 24 x 24 x 166 cm	
插头/电源线长度	单相三极插头/长约 1.3 m	
蒸汽输送管长度	约 1.2 m	
水箱容量	约 2 L	
温度过升防止装置	温度保险丝	
执行标准	GB4706.1-2005, GB4706.84-2007, GB4343.1-2009, GB17625.1-2012	

本产品仅适合家庭使用。

常见故障及处理方法

故障现象	可能造成的原因	处理方法
产品无法产生蒸汽或产生的蒸汽不连贯。	电源插头没插上或电源按钮没按下。	▶ 插上电源插头，确实按下电源按钮。
	蒸汽凝结产生的冷凝水残留在蒸汽输送管内。	▶ 将蒸汽喷头垂直提起并拉直蒸汽输送管，使冷凝水回流。
	水箱没水或水位低于“最少 MIN”水位标示。	▶ 按加水指示给水箱加水。
	水箱或蒸汽输送管没正确安装到底座上。	▶ 正确安装水箱到底座上。
底座漏水	水箱的注水口盖没拧紧。	▶ 拧紧注水口盖。
	蒸汽输送管弯曲。	▶ 将蒸汽输送管拉直。
伸缩杆下滑	▶ 衣架挂钩上的衣物过重。	▶ 减轻衣架挂钩承载的衣物(少于2 kg)。
产品发出咕噜声	▶ 蒸汽输送管处于 U 形状态。	▶ 请勿弯曲蒸汽输送管。
	如果按照以上方法仍然无法处理故障。	▶ 请送指定维修店检修。

产品中有害物质的名称及含量

产品中有害物质的名称及含量							
部件名称	有害物质						备注
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)	
塑料部件 橡胶部件	○	○	○	○	○	○	
金属部件	×	○	×	○	○	○	
电源线、 内部配线	×	○	○	○	○	○	
陶瓷部件	○	○	○	○	○	○	

本表格根据SJ/T 11364的规定编制。
 ○: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。
 ×: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。


10 此标志标识产品的环保使用期限为10年，在环保使用期限内，产品中含有的有毒有害物质或元素在正常使用下不会发生外泄或突变，用户使用该产品不会对环境造成严重污染或对其人身、财产造成严重损害。产品过了环保使用期要废弃时，必须按国家相关法律法规进行合理处理。


SAFETY PRECAUTIONS

To reduce the risk of injury, loss of life, electric shock, fire, malfunction, and damage to equipment or property, always observe the following safety precautions.


Explanation of symbols


The following symbols are used to classify and describe the level of hazard, injury, and property damage caused when the denotation is disregarded and improper use is performed.

 **WARNING** Denotes a potential hazard that could result in serious injury or death.


 **CAUTION** Denotes a hazard that could result in minor injury or damage your belongings.

The following symbols are used to classify and describe the type of instructions to be observed.

 This symbol is used to alert users to a specific operating procedure that must not be performed.

 This symbol is used to alert users to a specific operating procedure that must be followed in order to operate the unit safely.


WARNING

 **Never use the product if the Power cord or Power plug is damaged or if the Power plug fits loosely in a household outlet.**

- Doing so may cause electric shock, or fire due to a short circuit.

 **Do not connect or disconnect the Power plug to a household outlet with a wet hand.**

- Doing so may cause electric shock or injury.

 **Do not damage, modify, or forcibly bend, pull, or twist the Power cord. Also, do not place anything heavy on or pinch the Power cord.**

- Doing so may cause electric shock or fire due to a short circuit.

 **Do not wrap the Power cord around the product when storing.**

- Doing so may cause breakage to the wire of the cord, and may cause electric shock or fire due to a short circuit.

 **Do not use with the Power cord bundled.**

- Doing so may cause fire or electric shock.

 **Never modify, disassemble, or repair the appliance by yourself.**


- Doing so may cause ignition or injury due to abnormal operation. Contact an authorized service agent for repair.

 **Do not immerse the main body in water or other liquids.**

- Doing so may cause electric shock or fire due to a short circuit.

 **Do not use the main body with a wet hand.**

- Doing so may cause electric shock or fire due to a short circuit.


 **Do not use in proximity of flammable materials (such as benzene).**

- Doing so may cause an explosion or fire.

WARNING

 **Regularly clean the Power plug to prevent dust from accumulating.**

- Failure to do so may cause fire due to insulation failure caused by humidity. Disconnect the plug and wipe with a dry cloth.

 **The steamer must not be left unattended while it is connected to the supply mains.**

- Doing so may cause fire.

 **Immediately stop using and remove the Power plug if there is an abnormality or malfunction.**


- Using it in such conditions may cause fire, electric shock, or injury.

<Abnormality or malfunction cases>


•The main body stops occasionally, or the Power cord or the Power plug is abnormally hot, or discoloration.

•The main body is deformed or smells of burning.


- Immediately request inspection or repair at an authorized service agent.

 **This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.**


- Failure to do so may cause an accident or injury.

 **Always ensure the appliance is operated on an electric power source matched to the rated voltage indicated on the product. Fully insert the Power plug.**


- Failure to do so may cause fire, electric shock.

 **The Steamer head must be firmly rested on the Steamer holder, and the Power base must be placed on a flat and stable floor.**


- Failure to do so may cause the Soleplate may be scratched, or even injury or scald if the Steamer head falls over.

 **Independently use a household outlet, and do not use extension cord.**


- Failure to do so may cause electric shock or fire.

 **If the Power cord is damaged, it must be replaced by the manufacturer, its service center, or similarly qualified persons in order to avoid a hazard.**

- Failure to do so may cause an accident or injury.

 **This product must use the electrical outlet with earth connection.**

- Failure to do so may cause fire or electric shock.

 **The steamer is not to be used if it or the Water tank and other parts has been dropped, if there are visible signs of damage or if it is leaking.**

 
- Do not repair by yourself; it should be repaired by the designated service center.

- ❗ **Properly dispose the package bag of the appliance, keep the package bag away from infants.**
 - Failure to do so may cause suffocation of infants from happening.

- ❗ **The plug must be removed from the socket outlet before the water reservoir is filled with water.**
 - Failure to do so may cause fire, electric shock or injury.

⚠ CAUTION


- ⊘ **Do not store the cord in a twisted state.**
 - Doing so may cause breakage to the wire of the cord, and may cause electric shock or fire due to a short circuit.
- ⊘ **Do not use the product when the Steamer head down.**
 - Otherwise there will be hot water droplets out, so may cause scalds.
- ⊘ **Don't touch the hot surface (such as Nozzle, Steamer holder, Hose and the hot surface around it).**
 - Doing so may cause scalds.

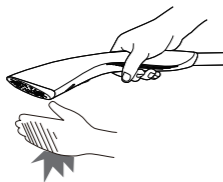


- ⊘ **Do not touch the steam during use.**
 - Doing so may cause scalds.



 
- ⊘ **Do not place the Power base sidelong.**
 - Doing so may cause water leakage, and then damage floors and carpets.

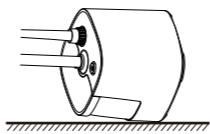

 - ⊘ **Do not place the Steamer head directly on the Power base and floor.**
 - Doing so may cause damage the product, floors and carpets.

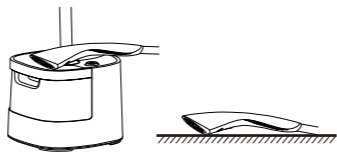

 - ⊘ **Do not turn the Steamer head upside-down or incline it.**
 - Doing so may cause the product to fall, injury or burns.

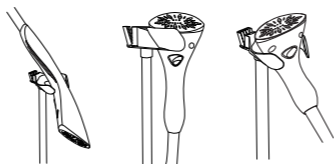

⚠ CAUTION

- ⊘ **Do not use the product with Hose or Power cord entangled.**
 - Doing so may cause the Hose damage, electric shock and fire.
- ⊘ **Do not insert pins into the Nozzle.**
 - Doing so may cause fire, electric shock, or burn.
- ⊘ **Do not add perfume, vinegar, starch, descaling agents, ironing aids or other chemicals in the Water tank.**
 - They can stain fabrics; instead, use room temperature water for it.
- ⊘ **Do not put the Nozzle too close to you or others since steam may unexpectedly erupt from it.**
 - Doing so may cause scald.
- ⊘ **Do not move the product by pulling the Hose.**
 - Doing so may cause the Hose damage, electric shock and fire.
- ⊘ **When moving the product, do not come to bring the product through the hanger.**
 - Otherwise it may cause the product to fall, injury.
- ⊘ **Do not use the appliance with the exception of fabric (e.g. leather).**
 - Doing so may cause damage it.
- ⊘ **Do not move the Power base until it have fully cooled down.**
 - Doing so may cause scald.
- ⊘ **Do not use the product with the pipe is compressed and clogged.**
 - Otherwise the hot water comes out from the base and damage the floors and carpets.

- ⊘ **Do not use the product when the Hose is not properly installed in the base, do not pull out the Hose during use.**
 - Doing so may cause burns.

- ❗ **Unplug the Power plug to disconnect from a household outlet by grasping the Power plug.**
 - Failure to do so may cause fire, electric shock or injury.

- ❗ **Use the product only for its intended purpose, for ironing fabrics. To protect against burns or injury to persons, do not steam fabrics while being on the body.**
 - Failure to do so may cause injury.

- ❗ **Care should be taken when using the appliance due to the emission of steam.**
 - It may cause scald.

 
- ❗ **Test on an inconspicuous area when using with expensive or specially processed items.**
 - Failure to do so may cause damage fabric.

- ❗ **Always unplug the Power plug during filling, emptying, cleaning and not in use.**
 - Failure to do so may cause fire, electric shock or injury.


- ❗ **When the Steamer head is placed on the Steamer holder, set the telescopic pole to the maximum.**
 - Otherwise Steamer head due to fall, cause damage the product or injury.

- ❗ **When removing the Water tank, make sure the Power button is off, and do not touch the remain water on the base.**
 - Doing so may cause burns.


PARTS IDENTIFICATION

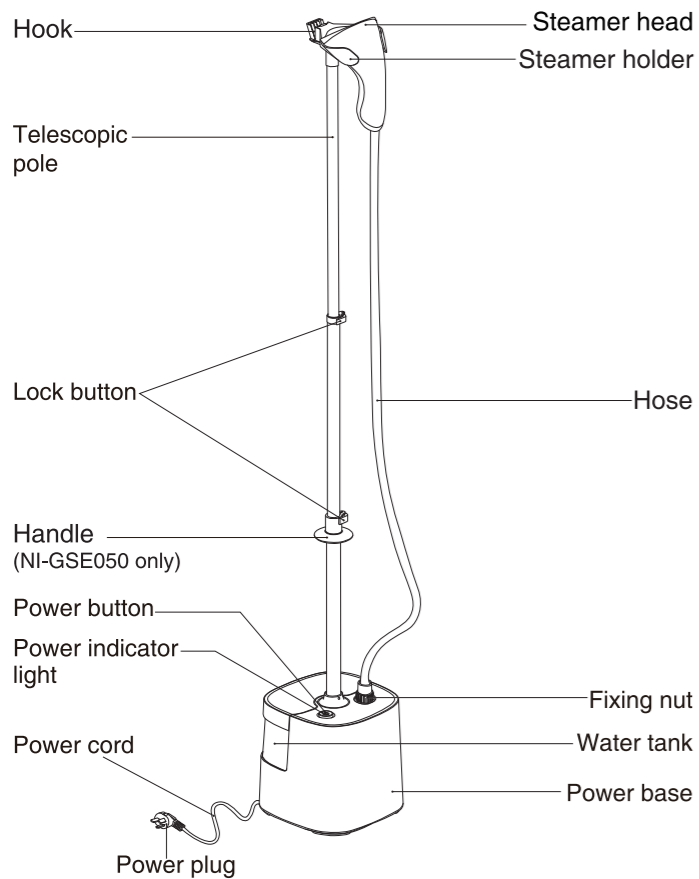


Steamer head

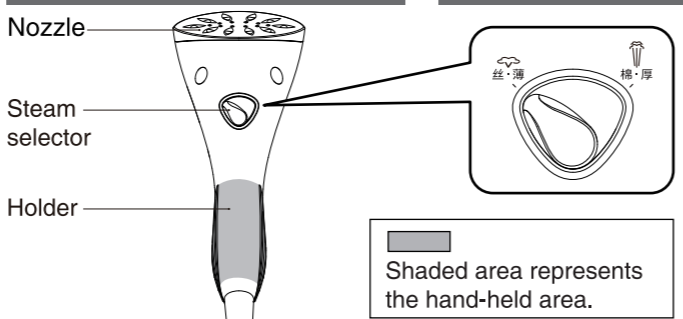 

Water tank

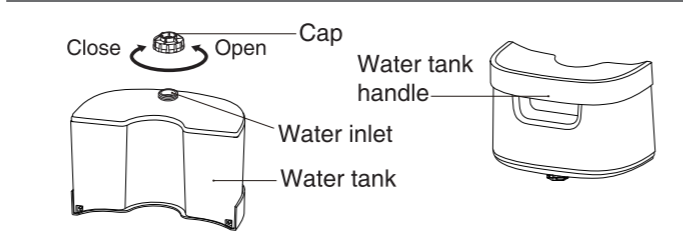 

Power base

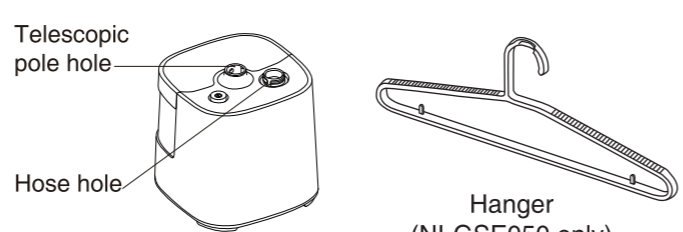 

HOW TO ASSEMBLE

Be sure to assemble the product on a flat and stable floor.

 
 
 
 
1. Insert the Telescopic pole into the Telescopic pole insertion on the Power base correctly, until a "click" spring lock sound is heard.

2. ① Align the hole of the Hook on the Telescopic pole, and then push with force the Hook into the spring lock into the small hole on the Hook.

② Release the Lock button on the Telescopic pole, pull the Telescopic pole upward to maximum height, and then lock the Lock button.

3. Install the Hose at the Hose hole of Power base and then turn the Fixing nut clockwise to tighten until a "click" sound is heard.


4. Place the Steamer head into the Steamer holder on the Telescopic pole.

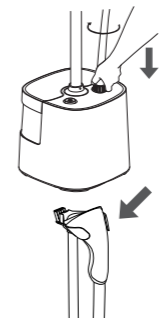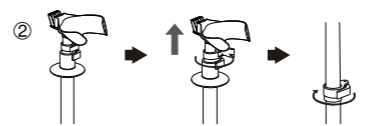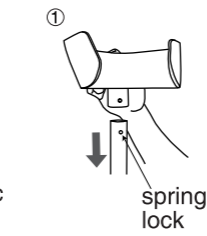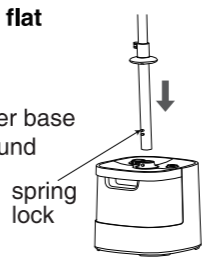


HOW TO FILL WATER

The plug must be removed from the socket outlet before the Water tank is filled with water.

 - Remove the Water tank from Power base.
- ① Open the Cap on the bottom of the Water tank.
② Put the Water tank under a faucet and fill it with proper amount of water.
③ Close the Cap correctly.

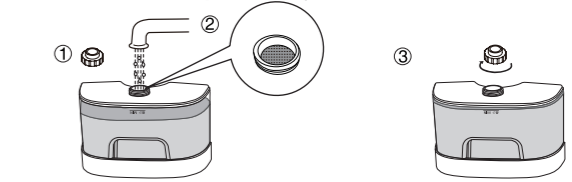

3. Attach firmly the Water tank back to the Power base.

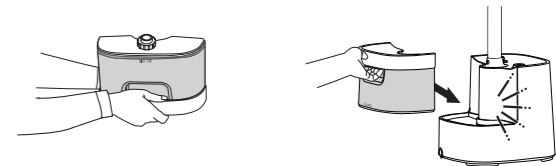 


Note:

- The Water tank capacity is approx. 2 L, which is below the water inlet. Fill it with proper amount of water according to your need.
- Please fill the Water tank with tap water. In case you live in an area with hard water, scales build-up quickly may occur so we recommend using distilled water or purified water.
- When filling water, accumulating water may occur in the groove around the water inlet and the Water tank which is not a malfunction. Please clean any water in the groove before installing the Water tank back.


USING THE GARMENT STEAMER

1. Hang the garment on a hanger, and then attach the hanger to the Hook.
Insert the Power plug into the household outlet.

 
2. Press the Power button to light the Power indicator up.

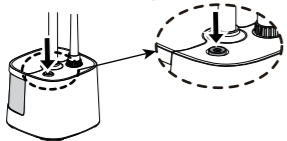

 3. Wait about 1 minute when the product is ready to use. And set the Steam selector according to the required “” / “” steam.



 When gripping the Steamer head, hold the handle.

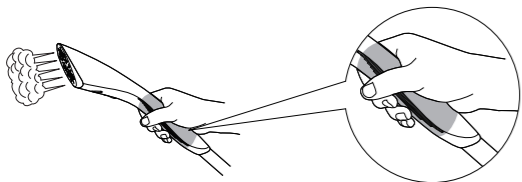

Shaded area represents the hand-held area.

4. Steaming the clothes. We recommend to put the Steam head into the Steamer holder when you sort out or change your clothes.
5. Turn off the power when you have finished using, unplug the Power plug.

Note:

- a) When the Hose slacken, the steam will be clogs partially with noise from hose.
- b) If the amount of water in the Water tank less than "最少 MIN" line, please add water.
- c) Do not remove the Water tank and Hose from the base during use.
- d) To close steam, turn off the Power button.
- e) There may be water dripping from Nozzle on the clothes, this is not a malfunction.
- f) Turn off the Power button, unplug the Power plug when you take out the Water tank from the Power base.

FABRIC AND IRONING RECOMMENDATIONS


Fabric	Steam selector
ACRYLIC, ACETATE NYLON, SILK POLYESTER, RAYON CHIFFON	Level “”: For thin or delicate fabrics.
WOOL COTTON, LINEN	Level “”: For thick materials, items with stubborn wrinkles fabrics.

Note:

Do not use the appliance with leather fabric.
Test on an inconspicuous area when using with expensive products, special materials, fibers weak against heat.
(Velvet, wool, cashmere, acrylic, silk, etc.)

MORE USEFUL

 To get better results, pull the garment tight with one hand while ironing with the other hand.

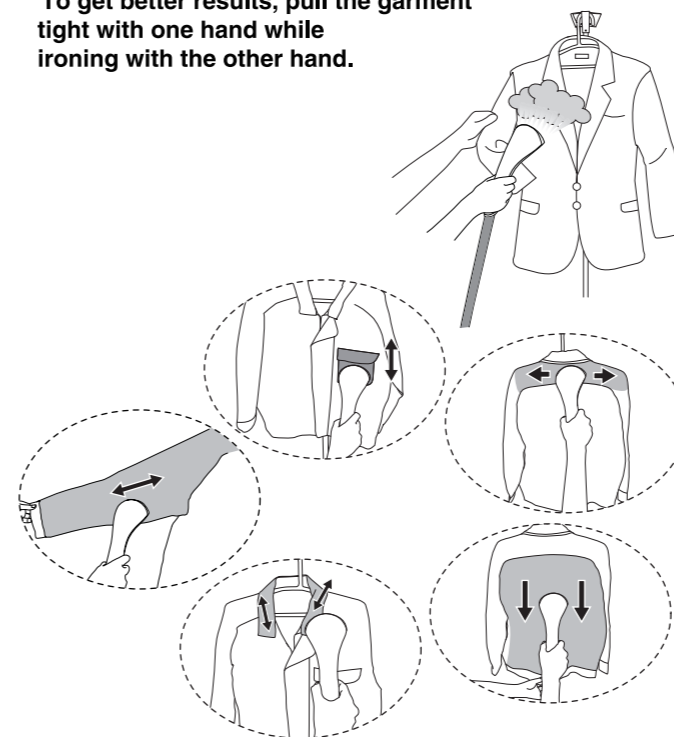


Note:

- a) Do not put over 2 kg on the Hook.
- b) Do not pull the clothing strongly during use, so as not to rollover product.
- c) Do not touch the steam, doing so may cause scalds.

AFTER USE


1. Drainage, Cleaning and Maintenance of the Water tank

 - ① Turn off the Power button, unplug the Power plug.
- ② After 1 hour, take out the Water tank from the Power base, open the Cap, shake the Water tank to clean its inner wall with the remaining water and then drain the Water tank.

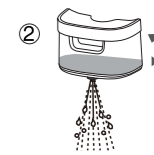


2. Storage

 - ① Place the Steamer head into the Steamer holder.
- ② Set the Steam selector to the “” position.
- ③ Hold the Telescopic pole to move the product, and store the product in a safe place.
- ④ Store the product when the Hose is straight.

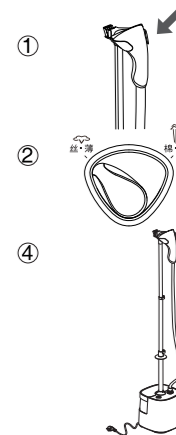

Note:

 
With the Telescopic pole being retracted, the Hose will become bent, and then will interfere with movement of product. Therefore, before retracting the Telescopic pole, please place and store the product in a safe place as shown in the figure.



CLEANING

Cleaning and Maintenance of the Steamer head and Power base and the Hose.

 
- ① Unplug the Power plug, wait until the Steamer head, Steamer holder and Power base have fully cooled down.
- ② Wipe the surface of the Nozzle and the Power base with a soft cloth. For stubborn stains, use a soft cloth dipped with neutral detergent to clean.
- ③ Remove the Hose, clean up stains at the Hose interface and with the base and the pole.

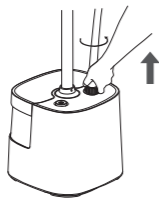

SCALES CLEANING

To maintain optimal steam performance, it is important to remove scales and impurities inside the appliance regularly. It is recommended to perform the easy rinse calc-clean process at least once a month.

 - ① Unplug the Power plug, wait until the Steamer head, Steamer holder and Power base have fully cooled down.
- ② Remove the Telescopic pole, Hose, and Water tank from the Power base.
- ③ Pour the water in Power base out from the Hose hole (as shown in the figure).
- ④ Place the Power base on a horizontal place, install the Water tank containing water on the Power base, leave them for about 10 seconds, and then remove the Water tank.
- ⑤ Pour the water in Power base out from the Hose hole (as shown in the figure).

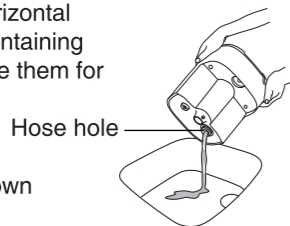

SPECIFICATION

Model	NI-GSE050	NI-GSE040/GSE036/GSE035
Rated voltage	220 V ~ 50 Hz	
Power	1 800 W	1 600 W
Weight	Approx. 3.2 kg	
Steam selector	2-Level steam	
Dimensions (assembly)	(WxDxH) Approx. 24 x 24 x 166 cm	
Plug / Cord length	Single-phase three core plug / Approx. 1.3 m	
Corded steam hose length	Approx. 1.2 m	
Water tank capacity	Approx. 2 L	
Thermostat system	Temperature fuse	
Execution Standard	GB4706.1-2005, GB4706.84-2007, GB4343.1-2009, GB17625.1-2012	

This product is intended for household use only.

TROUBLE-SHOOTING GUIDE

Problem	Causes	Solution
The product produces no steam or irregular steam.	The Power plug has not been plugged in or the Power button has not been pressed down.	▶ Insert the Power plug and be sure to press the Power button.
	Condensate water that produced from steam remains in the Hose.	▶ Lift up the Steamer head vertically and straighten the Hose, to make condensate water backflow.
	The Water tank is empty or less than “最少 MIN” line.	▶ Fill the Water tank with water.
Water leaks out from the Power base	The Water tank and Hose is not be installed correctly to the Power base.	▶ Attach the Water tank and Hose to the Power base correctly.
	The Cap is loose.	▶ Close the Cap correctly .
The Telescopic pole slips down unexpectedly	The Hose is bend.	▶ Straighten the Hose.
	The garment on the Hook is too heavy.	▶ Lighten the weight loaded to the Fixing hook (less than 2 kg).
The product produces a water noise.	The hose forms a U-shape.	▶ Do not bend the hose.
	If you can not solve your problem according to the above solutions.	▶ Have your product repaired by the specified service agent.

Panasonic

保修证

保修条款

有关保修期内Panasonic商品的保修（无偿修理），从购入之日起开始实施。

1.保修期内的商品只可在Panasonic认定维修店进行保修；保修时，请出示本保修证及购机发票。
以下两点需特别注意：

- a.本保修证遗失后不再补发，请妥善保管；
- b.本保修证仅限于中华人民共和国内有效（香港、澳门、台湾三地区暂不可使用）。

2.自购入之日起在以下期间内，在正常使用中发生故障的情况下进行保修。

整机 二年内无偿保修

3.属下列情况之一者，即使在保修期内，也不能以保修对待，但是可以实行收费修理：

- a. 未按商品使用说明书要求使用、维护、保管而造成损坏的；
- b. 因不正确操作、电源不正常、破损（如：摔落等）而造成损坏的；
- c. 不经Panasonic认定维修店维修人员晃动造成损坏的；
- d. 不能出示本保修证及有效购机发票的；
- e. 保修证上记录的信息与商品实物标识不符或者涂改的；
- f. 因不可抗力因素（如雷电、地震、火灾、水灾等）造成损坏的。

4.本保修条款只适用于消费者个人为生活消费需要而购买使用的场合，不适用于经营性等使用。

【商品信息】

商品名称： 蒸汽挂烫机 产地： 中国

商品型号： NI-GSE050/GSE040/GSE036/GSE035 制造编号： -----

【保修回执】 以下回执是保修的重要依据，请勿自行撕下

商品型号： NI-GSE050/GSE040/GSE036/GSE035 制造编号： **保修结算4**

商品型号： NI-GSE050/GSE040/GSE036/GSE035 制造编号： **保修结算3**

商品型号： NI-GSE050/GSE040/GSE036/GSE035 制造编号： **保修结算2**

商品型号： NI-GSE050/GSE040/GSE036/GSE035 制造编号： **保修结算1**

商品型号： NI-GSE050/GSE040/GSE036/GSE035 制造编号： **促销员留存**

【销售记录】 此处所教信息仅于商品保修时作核对之用，
本公司不对该信息进行收集记录。



销售日期: 发票号码:
顾客姓名: 联系电话:
顾客地址: 邮 编:
销售店名称: 销售店电话:
销售店地址: 邮 编:

【维修记录】

维修店名称: 联系电话: 送修日:
维修店地址: 邮 编:
故障内容: 故障原因:
维修内容:
维修员签字: 交验日期:

维修店名称: 联系电话: 送修日:
维修店地址: 邮 编:
故障内容: 故障原因:
维修内容:
维修员签字: 交验日期:

维修店名称: 联系电话: 送修日:
维修店地址: 邮 编:
故障内容: 故障原因:
维修内容:
维修员签字: 交验日期:

本保修证因含有消费者个人信息，请妥善保管。
Panasonic 客户咨询服务中心: 400-810-0781;
Panasonic官方网站: <http://panasonic.cn>

松下电器(中国)有限公司